

3678

ac volts

HALF-WAVE GAS RECTIFIER

HOT-CATHODE TYPE

GENERAL DATA

Electrical:

Voltage.

Filament, Coated:

Current at 2.5 volts. amp
Minimum Heating Time Befor
Anode Voltage is Applied 10 seconds
Peak Anode Voltage Drop (Approx.) 10 volts

 $2.5 \pm 5\%$

Mechanical:

 Mounting Position
 Any

 Overall Length
 5.87" to 6.15"

 Seated Length
 5.25" to 5.53"

 Maximum Diameter
 2-1/16"

 Bulb
 T-16

Pin 1 - Filament

Pin 2 - No

Connection

Pin 3 - No Connection



Pin 4 - Filament, Cathode Shield

Cap - Anode

HALF-WAVE RECTIFIER

Maximum Ratings, Absolute values:

	Kating I	Kating II	
PEAK INVERSE ANODE VOLTAGE	5000 max.	10000 max.	volts
ANODE CURRENT:			
Peak	2 max.	1 max.	amp
Average*	0.5 max.	0.25 max.	amp
Fault, for duration			
of 0.1 second max	20 max.	20 max.	amp
FREQUENCY OF POWER SUPPLY	500 max.	150 max.	cps OC
AMBIENT TEMPERATURE	-75 to +90	-75 to $+90$	oC

CHARACTERISTICS RANGE VALUES FOR EQUIPMENT DESIGN

	Note	Min.	Max.	
Filament Current	1	_	5.40	amp
Critical Anode Voltage.	2	-	50	volts
Peak Anode Voltage Drop	3	_	14	volts

17 . 4 .

W: --

Note 1: With 2.5 volts rms on filament. Note 2: With 2.38 volts rms on filament.

Averaged over any period of 30 seconds maximum.






HALF-WAVE GAS RECTIFIER

Note 3: With 2.5 volts rms on filament, peak anode current of 2 amperes provided by half-cycle pulse from a 60-cps sine wave and recurring approximately once a second. Tube drop is measured by an oscilloscope connected between anode and center tap of filament transformer.

OPERATING NOTES

The filament-supply voltage for the 3B28 may be either in phase or out of phase with the anode voltage. With out-of phase excitation (quadrature operation), improved utilization of the cathode is possible. Although the 3828 carries no higher anode-current rating for quadrature operation than for in-phase operation, quadrature operation is conducive to appreciably longer tube life. For optimum results, the filament and anode voltages should be 90° In practical applications however, nearly, out of phase. full realization of the advantages of this type of excitation is possible even when the phase difference between the filament and anode supply voltages ranges from the optimum value by as much as $\pm 30^{\circ}$. In polyphase operation where the anode voltage shifts from one phase to another during the current-conduction period, quadrature operation is obtained when the filament voltage passes through zero at the center of the current-conduction period.

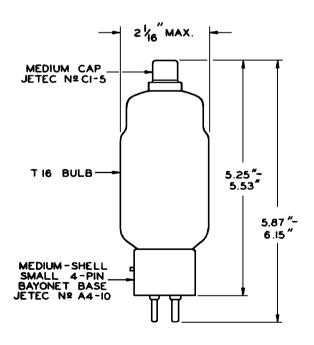

92CM - 7642



HALF-WAVE GAS RECTIFIER

For Circuit Figures, see Front of this Section

CIRCUIT	MAX. TRANS. SEC. VOLTS (RMS)	APPROX. DC OUTPUT VOLTS TO FILTER Eav	DC OUTPI Amper	MAX. DC OUTPUT AMPERES		MAX. DC OUTPUT KW TO FILTER Pdc	
Fig. Half-Wave Single-Phase In-Phase Operation	7000▲ 3500	3200 1600	0.25 0.5		0.8 0.8		
Fig. 2 Full-Wave Single-Phase In-Phase Operation	3500 ▲	3200	0.5		1.6		
	1700 [●]	1600	1.0		1.6		
Fig. 3 Series Single-Phase In-Phase Operation	7000 ≜	6400	0.5		3.2		
	3500 [●]	3200	1.0		3.2		
Fig. 4 Half-Wave Three-Phase In-Phase Operation	4000▲	4800	0.75		3.6		
	2000●	2400	1.5		3.6		
Fig.5 Parallel Three-Phase Quadrature Operation	4000▲	4800	1.5		7.2		
	2000●	2400	3.0		7.2		
Fig. 6 Series Three-Phase Quadrature Operation	4000▲	9600	0.75		7.2		
	2000●	4800	1.5		7.2		
Fig.7 Half-Wave Four-Phase Quadrature Operation	3500 [▲] 1700 [●]	4500 2250	Resis- 1 tive Load 0.9	Induc- tive Load .0 2.0	Resis- tive Load 4.0 4.0	Induc- tive Load 4.5 4.5	
Fig.8 Half-Wave Six-Phase Quadrature Operation	3500 [▲] 1700 [●]	4800 2400	tive	nduc- tive Load 1.0 2.0	Resis- tive Load 4.5 4.5	Induc- tive Load 4.8 4.8	

[▲] For maximum peak inverse anode voltage of 10000 volts.

For maximum peak inverse anode voltage of 5000 volts.