



Electron tubes

Book T12

1985

Vidicon and Newvicon camera tubes and Deflection units

Elcoma – Philips Electronic Components and Materials Division – embraces a world-wide group of companies operating under the following names:

IBRAPE PHILIPS

MBLE

Miniwatt Signetics

Mullard VALVO

Elcoma offers you a technological partnership in developing your systems to the full. A partnership to which we can bring

- world-wide production and marketing
- know-how
- systems approach
- continuity
- broad product line
- fundamental research
- leading technologies
- applications support
- quality

VIDICON AND NEWVICON CAMERA TUBES AND DEFLECTION UNITS

																		page
Vidicon tubes																		
Survey and type selection					 								 	•		•		2
General operational notes																		
Device data																		
Newvicon tubes																		
Survey and type selection		. ,			 	•							 			•		74
General operational notes					 		•					•	 					 75
Device data	٠				 								 					79
Deflection units																		
Device data					 			•										151
Index of type numbers												•			•			175

DATA HANDBOOK SYSTEM

Our Data Handbook System comprises more than 60 books with specifications on electronic components, subassemblies and materials. It is made up of four series of handbooks:

ELECTRON TUBES

BLUE

SEMICONDUCTORS

RED

INTEGRATED CIRCUITS

PURPLE

COMPONENTS AND MATERIALS

GREEN

The contents of each series are listed on pages iv to viii.

The data handbooks contain all pertinent data available at the time of publication, and each is revised and reissued periodically.

When ratings or specifications differ from those published in the preceding edition they are indicated with arrows in the page margin. Where application information is given it is advisory and does not form part of the product specification.

Condensed data on the preferred products of Philips Electronic Components and Materials Division is given in our Preferred Type Range catalogue (issued annually).

Information on current Data Handbooks and on how to obtain a subscription for future issues is available from any of the Organizations listed on the back cover.

Product specialists are at your service and enquiries will be answered promptly.

ELECTRON TUBES (BLUE SERIES)

The blue series of data handbooks comprises:

- T1 Tubes for r.f. heating
- T2a Transmitting tubes for communications, glass types
- T2b Transmitting tubes for communications, ceramic types
- **T3 Klystrons**
- **T4** Magnetrons for microwave heating
- T5 Cathode-ray tubes Instrument tubes, monitor and display tubes, C.R. tubes for special applications
- **T6** Geiger-Müller tubes
- T7 Gas-filled tubes (will not be reprinted)
- **T8** Picture tubes and components Colour TV picture tubes, black and white TV picture tubes, colour monitor tubes for data graphic display, monochrome monitor tubes for data graphic display, components for colour television, components for black and white television and monochrome data graphic display
- **T9** Photo and electron multipliers
- T10 Plumbicon camera tubes and accessories
- T11 Microwave semiconductors and components
- Vidicon and Newvicon camera tubes T12
- T13 Image intensifiers
- T14 Infrared detectors
- T15 Dry reed switches
- Data Handbooks will be published in 1985.

Data collations on these subjects are available now.

- T16 Monochrome tubes and deflection units Black and white TV picture tubes, monochrome data graphic display tubes, deflection units

SEMICONDUCTORS (RED SERIES)

The red series of data handbooks comprises:

S12

Surface acoustic wave devices

S1	$\label{eq:continuous} \begin{array}{l} \textbf{Diodes} \\ \textbf{Small-signal germanium diodes, small-signal silicon diodes, voltage regulator diodes ($<$1,5$ W),} \\ \textbf{voltage reference diodes, tuner diodes, rectifier diodes} \end{array}$
S2a	Power diodes
S2b	Thyristors and triacs
S3	Small-signal transistors
S4a	Low-frequency power transistors and hybrid modules
S4b	High-voltage and switching power transistors
S5	Field-effect transistors
S6	R.F. power transistors and modules
S7	Surface mounted semiconductors
S8	Devices for optoelectronics Photosensitive diodes and transistors, light-emitting diodes, displays, photocouplers, infrared sensitive devices, photoconductive devices.
S9	Power MOS transistors
S10	Wideband transistors and wideband hybrid IC modules
S11	Microwave semiconductors (to be published in this series in 1985) At present available in Handbook T11

INTEGRATED CIRCUITS (PURPLE SERIES)

The p	ourple series of data handbooks comprises:	Superseded by:	
EXIST	TING SERIES		
IC1	Bipolar ICs for radio and audio equipment		
IC2	Bipolar ICs for video equipment	IC02N	
IC3	ICs for digital systems in radio, audio and video equipment		
IC4	Digital integrated circuits CMOS HE4000B family		
IC5	Digital integrated circuits — ECL ECL10 000 (GX family), ECL100 000 (HX family), dedicated designs	IC08N	
IC6	Professional analogue integrated circuits		
IC7	Signetics bipolar memories		
IC8	Signetics analogue circuits	IC11N	
IC9	Signetics TTL logic	IC09N and IC15N	
IC10	Signetics Integrated Fuse Logic (IFL)	IC13N	
IC11	Microprocessors, microcomputers and peripheral circuitry		

NEW SE	RIES	
IC01N	Radio, audio and associated systems Bipolar, MOS	
IC02N	Video and associated systems Bipolar, MOS	(published 1985)
IC03N	Telephony equipment Bipolar, MOS	
IC04N	HE4000B logic family CMOS	
IC05N	HE4000B logic family uncased integrated circuits CMOS	(published 1984)
IC06N	High-speed CMOS; PC54/74HC/HCT/HCU Logic family	(published 1985)
IC07N	PC54/74HC/HCU/HCT uncased integrated circuits HCMOS	
IC08N	10K and 100K logic family ECL	(published 1984)
IC09N	Logic series TTL	(published 1984)
IC10N	Memories MOS, TTL, ECL	
IC11N	Linear LSI	(published 1985)
IC12N	Semi-custom gate arrays & cell libraries ISL, ECL, CMOS	
IC13N	Semi-custom Integrated Fuse Logic	(published 1985)
IC14N	Microprocessors, microcontrollers & peripherals Bipolar, MOS	

Note

IC15N

Logic series FAST TTL

Books available in the new series are shown with their date of publication.

(published 1984)

COMPONENTS AND MATERIALS (GREEN SERIES)

The gr	een series of data handbooks comprises:	
C1	Programmable controller modules PLC modules, PC20 modules	
C2	Television tuners, coaxial aerial input assemblies, surface acoustic wa	ave filters
C3	Loudspeakers	
C4	Ferroxcube potcores, square cores and cross cores	
C5	Ferroxcube for power, audio/video and accelerators	
C6	Synchronous motors and gearboxes	
C7	Variable capacitors	
C8	Variable mains transformers	
C9	Piezoelectric quartz devices	
C10	Connectors	
C11	Non-linear resistors Voltage dependent resistors (VDR), light dependent resistors (LDR) coefficient thermistors (NTC), positive temperature coefficient therm	
C12	Potentiometers, encoders and switches	
C13	Fixed resistors	
C14	Electrolytic and solid capacitors	
C15	Ceramic capacitors	
C16	Permanent magnet materials	
C17	Stepping motors and associated electronics	
C18	Direct current motors	
C19	Piezoelectric ceramics	
C20	Wire-wound components for TVs and monitors	
C21	Assemblies for industrial use HNIL FZ/30 series, NORbits 60-, 61-, 90-series, input devices	

C22

Film capacitors

VIDICON TUBES

SURVEY VIDICON TUBES

1 inch - magnetic fo			-	lia			liesti		All types 95 mA; 6,3 V
type mesh		mesh photo- quality grade app		olicatio	ons				
		layer	Br	н	Ind	Med	MS	GP	
XQ1031	1	Α —		•	•		•	_	
XQ1032	1	Α			•		•	-	
XQ1240	S	Α	•				•	_	
XQ1241	S	Α		_	•		•	-	
XQ1280	S	В				•			
XQ1285*	S	В —				•			* Fibre-optic faceplat
2/3 inch - magnetic	focusir	g and deflect	ion						
XQ1270	1	Α			•		•	•	110 mA; 6,3 V
XQ1271	S	Α —			•	interested to the second	•	-	
2/3 inch - electrosta	itic foci	using and mag	netic	defl	ection				
XQ1272	S	Α			•		•	•	
XQ1590**	S	Α			•		•	•	** Bi-potential electronstatic focusing lens
½ inch - electrostati	c focus	ing and magn	etic o	defle	ction				
XQ1600	S	Α —			•		•	•	107 mA; 2,8 V
Accessories for Vidi	icon tul	oes							
type		deflection (a	and f	ocusi	ing) co	il unit		socke	ts
XQ1031, XQ1032	1	AT1102/01	KV	96			1	56098	Ω
XQ1240, XQ1241	}	AT1116S of			at		}		uivalent
XQ1280, XQ1285	J	A111103 0	equ	ivaici	11		J	or equ	uivaieiit
XQ1270, XQ1271		KV12S or e					1	56098	8
XQ1272, XQ1590		KV19G or equivalent						uivalent	
XQ1600		KV29E or e	quiva	lent			J		
Abbreviations used	in the t	ables							
= integral mesh		Н	=	for h	nigh-qu	ality b	lack a	nd	MS = in cameras for
S = separate mesh				whit	e and	colour	camer	as	military, surveil-
A = standard layer	•			in su	b-broa	adcast,	medic	al,	lance, and
D 1 111	C .								

educational and industrial

critical industrial applications

applications

Ind = for black and white and

Med = in medical or industrial
X-ray equipment, coupled
with an image intensifier

colour cameras in non-

scientific appli-

tube for low-cost

cations

cameras

GP = general purpose

B = layer with peak response at

colour broadcast cameras,

approx. 475 nm

telecine

Br = for black and white and

GENERAL OPERATIONAL NOTES

1 PROPERTIES OF THE VIDICON PHOTOCONDUCTIVE LAYER

The vidicon photoconductive layer consists mainly of antimony trisulphide (Sb_2S_3). It is built up of a number (2 to 4) of sublayers. Its properties are dependent on the antimony-sulphur ratios and the porosities of the sublayers.

In the vidicons, described in this Data Handbook, two layer variants are found, denominated layer A and layer B. The standard vidicons intended e.g. for industrial and educational applications contain layer A., the vidicons for medical applications in conjunction with X-ray image intensifiers contain layer B.

1.1 Sensitivity

The light transfer characteristic of a vidicon is not linear and depends strongly on the target voltage. A single value for the sensitivity can therefore not be given, but a series of transfer curves is required with e.g. the dark current as a parameter.

For a 1-inch size vidicon with layer A typical light transfer characteristics for three dark current settings are given in Fig. 1.

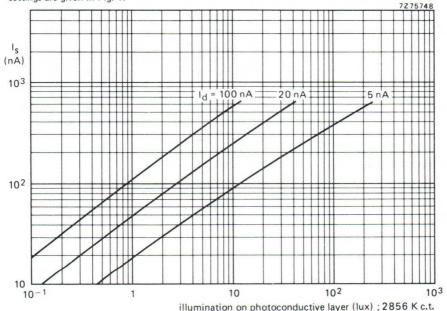


Fig. 1 Typical light transfer characteristics for 1-inch size vidicons with layer A.

(Note: A comparison can be made with Plumbicon tubes: at an input light level on the layer of approx. 8 lx the signal current in nA is equal to the sensitivity in μ A/lumen.)

VIDICON TUBES

Vidicons with type B layer are intended mainly for use in X-ray equipment, coupled to an X-ray image intensifier equipped with a P11 or P20 output phosphor. Detailed information on the light transfer characteristics in such situations is found in the data sheets for these tubes: the XQ1280 with plain glass faceplate and the XQ1285 with fibre-optic faceplate.

1.2 Spectral response

Typical relative spectral responses of the layers type A and type B are found in Fig. 2.

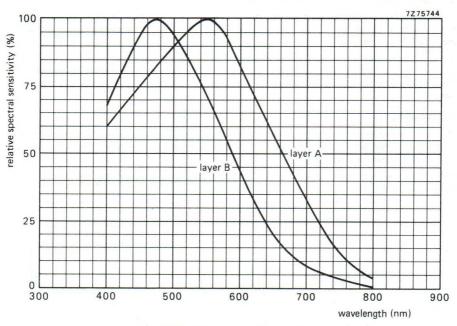


Fig. 2 Typical spectral response curves.

The response has been measured at constant signal output current.

1.3 Dark current

The influence of temperature on dark current for layer type A is shown in Fig. 3. Roughly, the dark current doubles with every 7 to 8 °C temperature increase (this applies also to layer type B).

1.4 Resolution

The photoconductive layer in a vidicon being very thin (2 to 3 μ m), gun construction and operating conditions are the determining factors for resolution. As an example, Fig. shows typical modulation transfer characteristics for the 1-inch tube XQ1280 in the low voltage mode and in the high voltage mode (scanning are 9,6 mm x 12,8 mm).

1.5 Lag

Lag is dependent on signal current, dark current and temperature. At low signal currents discharge lag dominates whereas at high signal currents photoconductive lag is preponderant. A typical residual signal level, 200 ms after cessation of an illumination giving a signal current of 200 nA, for the 1-inch vidicon type XQ1240 with layer type A, at a dark current of 20 nA is 8% (16 nA).

2 EQUIPMENT DESIGN AND OPERATING CONDITIONS

(See also General Operational Notes Plumbicon Camera tubes.)

The signal electrode voltage should be limited to such a value that the peak dark current does not exceed 250 nA for tubes with layer A and 100 nA for tubes with layer B.

This is of particular importance for the design and adjustment of vidicon cameras with automatically controlled sensitivity (automatic control of the signal-electrode voltage).

Operation of vidicons at excess dark current may result in damage to the photoconductive target and hence shorten the tube life.

The temperature of the faceplate should never exceed 80 $^{\rm o}$ C, neither during operation nor storage. Operation at a faceplate temperature of 25 to 30 $^{\rm o}$ C is recommended.

The temperature of the faceplate is determined by the heating effects of the environment, the associated components, the incident illumination and, to a minor extent, by the tube itself.

Under difficult environmental conditions a flow of cooling air directed at the faceplate is recommended. Under conditions of high heat irradiation, an infrared filter between object and camera lens should be used.

A cathode heating time of at least a minute is advised before drawing cathode current. During prolonged idle periods, (days or weeks) gas pressure may very slowly build up in the tube due to residual gas molecules emerging from the electrodes and the glass wall. There is then a slight risk that the pressure is sufficiently high to cause cathode damage by ion bombardment if cathode current is drawn immediately after switching on the camera.

VIDICON TUBES

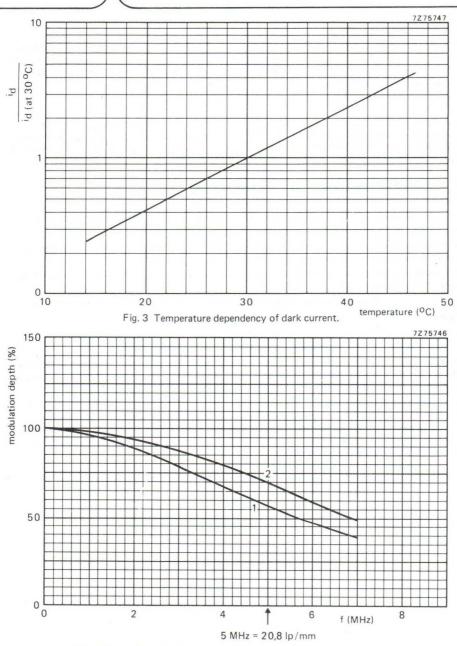


Fig. 4 Typical modulation transfer characteristics for XQ1280. Curve 1: V $_{g3}$ = 375 V, V $_{g4}$ = 600 V; curve 2: V $_{g3}$ = 600 V, V $_{g4}$ = 960 V.

CAMERA TUBES

Vidicon television camera tubes with low heater consumption, integral mesh construction, magnetic focusing, magnetic deflection, short length (130 mm, 5 in), and 25,9 mm (1 in) diameter.

QUICK REFERENCE DATA

Integral mesh	
Focusing	magnetic
Deflection	magnetic
Diameter	25,9 mm (1 in)
Length	130 mm (5 in)
Heater	6,3 V, 95 mA
Limiting resolution	600 TV lines

The electrical and mechanical properties of the two types are essentially identical, the main difference being found in the degree of freedom from blemishes of the photoconductive layers.

XQ1031 - intended for use in industrial and broadcast applications in which a high standard of performance is required.

XQ1032 – general purpose tube for less critical industrial applications, experiments, amateur use etc.

OPTICAL

Diagonal of quality rectangle on photoconductive layer (aspect ratio 3:4)

Orientation of image on photoconductive layer:

The direction of the horizontal scan should be essentially parallel to the plane passing through the longitudinal tube axis and the short index pin.

Photoconductive layer

type A

Spectral response, max, response at

Faceplate thickness 2.5 mm

refractive index 1,487

HEATING

Indirect by a.c. or d.c.; parallel or series supply

Heater voltage V_{f} 6,3 V ± 10% Heater current at Vf = 6,3 V

When the tube is used in a series heater chain, the heater voltage must not exceed 9,5 V r.m.s. when the supply is switched on.

16 mm

550 nm

approx.

CAPACITANCES


Signal electrode to all


 $C_{as} \approx 4,6 pF$


This capacitance, which effectively is the output impedance of the tube, increases when the tube is inserted into the deflection and focusing coil unit.


MECHANICAL DATA

Dimensions in mm

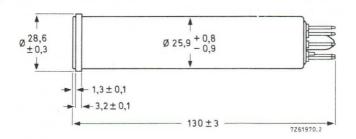

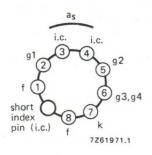

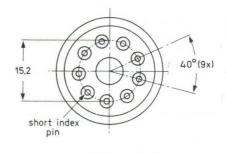

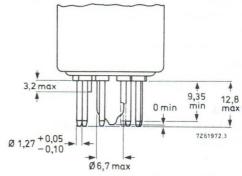

Base: JEDEC no. E8-11

Mounting position: any

Net mass: ≈ 57 g

ACCESSORIES

Socket

type 56098 or equivalent

Deflection and focusing coil unit

AT1102/01, KV9G or equivalent

DEFLECTION

magnetic

FOCUSING

magnetic

LIMITING VALUES

(Absolute maximum rating system) for scanned area of 9,6 mm x 12,8 mm (3/8 in x 1/2 in)

"Full-size scanning", i.e. scanning of a 9,6 mm x 12,8 mm area of the photoconductive layer should always be applied. Underscanning, i.e. scanning of an area less than 9,6 mm x 12,8 mm, may cause permanent damage to the specified full-size area.

Signal-electrode voltage	Vas	max.	100	V
Grid 4 voltage and grid 3 voltage	Vg4, g3	max.	750	V
Grid 2 voltage	V _{g2}	max.	750	V
Grid 1 voltage, negative positive	$\frac{-V_{g1}}{V_{g1}}$	max.	300	
Cathode-to-heater voltage, peak positive peak negative	V _{kfp}	max.	125 10	
Dark current, peak	ldarkp	max.	250	nA
Output current, peak	lasp	max.	550	nA *
Faceplate illumination	E	max.	10 000	lx
Faceplate temperature, storage and operation	Т	max.	70	oC **
Cathode heating time before drawing cathode current	th	min.	1	min

^{*} Video amplifiers should be capable of handling signal-electrode currents of this magnitude without overloading the amplifier or distorting the picture.

^{**} Under difficult environmental conditions a flow of cooling air directed at the faceplate is recommended. When televising flames and furnaces appropriate infrared absorbing filters should be used.

OPERATING CONDITIONS AND PERFORMANCE notes For a scanned area of 9,6 mm x 12,8 mm and a faceplate temperature of 25 to 35 °C. CONDITIONS Grid 4 and grid 3 (beam focus electrode) voltage Va4.a3 250 to 300 V Grid 2 (accelerator) voltage 300 V V_{q2} Grid 1 voltage for picture cut-off (no blanking applied) -100 to -45 V Va1 Blanking voltage, peak-to-peak 75 V when applied to grid 1 when applied to the cathode 20 V Flux density at centre of focusing coil 4,0 mT Flux density of adjustable alignment coils 0 to 0.4 mT **PERFORMANCE** min. typ. max. Signal electrode voltage for dark current of 20 nA Vas 10 30 Signal current faceplate illumination 10 lx c.t. 2856 K, dark current 20 nA 150 240 Is nA Decay: residual signal current 60 ms after cessation of the illumination (c.t. 2856 K, initial signal current 200 nA, 21 % dark current 20 nA) Limiting resolution, at picture centre 500 600 TV lines 350 450 TV lines at picture corners 2 Average γ of transfer characteristic for signal currents between 20 and 200 nA 0,55 0.74 0,85 Spurious signals (spot and blemishes) 3

Notes see next page.

NOTES

- Resolution decreases with decreasing grid 3 and 4 voltages. In general grids 3 and 4 should be operated above 250 V.
- 2. On EIA resolution test chart, faceplate illumination adjusted for peak signal current of 200 nA and dark current of 20 nA.
- 3 Conditions:

The camera focused on a uniformly illuminated two-zone test pattern, the diameter of the centre zone (1) being equal to the raster height. Zone (2) being defined as the remainder of the scanned area. Signal electrode voltage adjusted for a dark current of 20 nA, illumination on target (c.t. = 2856 K) adjusted to provide a signal current of 200 nA. Beam current adjusted for correct stabilization.

Scanning amplitudes of the monitor adjusted to obtain a raster with an aspect ratio of 3:4.

Monitor set-up and contrast control adjusted for faint raster when lens of camera is capped, and for non-blooming bright raster when lens of camera is uncapped.

Under the above conditions the number and size of the spots visible in the monitor picture will not exceed the limits stated below. Both black and white spots must be counted. Only white and black spots with contrasts $\geq 50\%$ and $\geq 100\%$ respectively (of peak white signal) are taken into account.

XQ1031

Spot size in	500	mber of spots					
% of raster height	zone 1	zone 2					
>0,8	none	none					
≤0,8 to 0,6	none	none					
\leq 0,6 to 0,2	1	2					
≤0,2	*	*					
total (max.)	2						

XQ1032

Spot size in		mber of spots
% of raster height	zone 1	zone 2
>0,8	none	none
≤ 0,8 to 0,6	none	1
≤ 0.6 to 0.2	2	3
≤ 0,2	*	*
total (max.)		4

- * Do not count spots of this size unless concentration causes a smudgy appearance.
 - a) Minimum separation between any 2 spots greater than 0,4% of raster height is limited to a distance equivalent to 3% of raster height.
 - b) Tubes are rejected for smudge, lines, streaks, mottled, grainy, or uneven background having contrasts > 50%.



CAMERA TUBES

Vidicon television camera tubes with low heater consumption, separate mesh construction, magnetic focusing, magnetic deflection and 25,9 mm (1 in) diameter intended for use in black-and-white and colour television cameras in industrial, medical and broadcast applications.

QUICK REFERENCE DATA

Separate mesh	
Focusing	magnetic
Deflection	magnetic
Diameter	25,9 mm (1 in)
Length	159 mm (6¼ in)
Heater	6,3 V, 95 mA
Limiting resolution	800 TV lines

The electrical and mechanical properties of the two types are essentially identical, the differences being found in the degree of freedom from blemishes of the photoconductive layers, in the sensitivity and the signal electrode voltage range.

XQ1240 — intended for use in industrial, medical and broadcast applications in which a high standard of performance is required.

XQ1241 – general purpose tube for less critical industrial applications, experiments, amateur use etc.

OPTICAL

Diagonal of quality rectangle on photoconductive layer (aspect ratio 3:4)

16 mm

Orientation of image on photoconductive layer:

The direction of the horizontal scan should be essentially parallel to the plane passing through the short index pin and the longitudinal axis of the tube.

Photoconductive layer type A

Spectral response, max. response at approx. 550 nm

Faceplate

thickness 2,5 mm refractive index 1,487

HEATING

Indirect by a.c. or d.c.; parallel or series supply

Heater voltage $V_f = 6.3 \text{ V} \pm 10\%$ Heater current at $V_f = 6.3 \text{ V}$

When the tube is used in a series heater chain, the heater voltage must not exceed 9,5 V r.m.s. when the supply is switched on.

XQ1240 XQ1241

CAPACITANCES


Signal electrode to all


 $C_{as} \approx 4.6 pF$


This capacitance, which effectively is the output impedance of the tube, increases when the tube is inserted into the deflection and focusing coil unit.

MECHANICAL DATA

Dimensions in mm

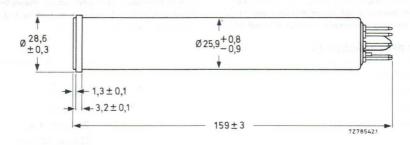

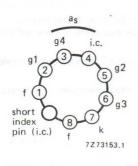

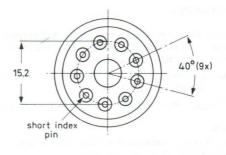

3,2 max 9,35 12,8 0 min min max 7261972.3

Base: JEDEC no. E8-11

Mounting position: any

Net mass: ≈ 70 g

ACCESSORIES

Socket

type 56098 or equivalent

Deflection and focusing coil unit

AT1102/01, KV9G or equivalent

DEFLECTION

magnetic

FOCUSING

magnetic

LIMITING VALUES

(Absolute maximum rating system) for scanned area of 9,6 mm x 12,8 mm (3/8 in x 1/2 in)

"Full-size scanning", i.e. scanning of a 9,6 mm \times 12,8 mm area of the photoconductive layer should always be applied. Underscanning, i.e. scanning of an area less than 9,6 mm \times 12,8 mm, may cause permanent damage to the specified full-size area.

Signal-electrode voltage	Vas	max.	100	V	
Grid 4 voltage	V _g 4	max.	1000	V	
Grid 3 voltage	V_{g3}	max.	1000	V	
Grid 2 voltage	V_{g2}	max.	750	V	
Grid 1 voltage, negative positive	$_{V_{g1}}^{-V_{g1}}$	max. max.	300 0	V V	
Cathode-to-heater voltage, peak positive peak negative	V _{kfp} -V _{kfp}	max. max.	125 10	1,70	
Dark current, peak	darkp	max.	250	nA	
Output current, peak	lasp	max.	550	nA*	
Faceplate illumination	E	max.	10 000	lx	
Faceplate temperature, storage and operation	T	max.	70	oC **	
Cathode heating time before drawing cathode current	th	min.	1	min	

^{*} Video amplifiers should be capable of handling signal-electrode currents of this magnitude without overloading.

^{**} Under difficult environmental conditions a flow of cooling air directed at the faceplate is recommended. When televising flames and furnaces, appropriate infrared absorbing filters should be used.

OPERATING CONDITIONS AND PERFORMANCE						notes
For a scanned area of 9,6 mm x 12,8 mm and a faceplate	e temper	ature o	f 25 to 3	35 °C.		
CONDITIONS						
Grid 4 voltage	V_{g4}			500	V	1
Grid 3 (focusing electrode) voltage	V_{q3}			300	V	2
Grid 2 (accelerator) voltage	V_{g2}			300	V	
Grid 1 voltage for picture cut-off (no blanking applied)	V_{q1}		-100 t	o –45	٧	
Blanking voltage, peak-to-peak when applied to grid 1 when applied to cathode	3.			75 20		
Flux density at centre of focusing coil			3,8	to 4,4	mT	
Flux density of adjustable alignment coils			0	to 0,4	mT	
PERFORMANCE		min.	ı typ.	ı max		
Signal electrode voltage for dark current of 20 nA XQ1240 XQ1241	V _{as}	30	45	60	s slev	
Signal current faceplate illumination 10 lx, c.t. 2856 K, dark current 20 nA XQ1240 XQ1241	I _S	180 150	300 240		nA nA	
Decay: residual signal current 60 ms after cessation of the illumination (c.t. 2856 K, initial signal current 200 nA, dark current 20 nA)			21	-	%	
Limiting resolution, at picture centre at picture corners		650 400	800 500		TV lines	3
Average γ of transfer characteristic for signal currents between 20 and 200 nA		0,55	0,74	0,85		
Spurious signals (spots and blemishes)						4

Notes see next page.

NOTES

- 1. Grid 4 voltage must always be higher than grid 3 voltage. The recommended ratio of grid 4 to grid 3 voltage, for best geometry and most uniform signal output depends upon the type of coil used and will be 5:3 for the recommended types (see "Accessories").
- 2. Resolution decreases with decreasing grid 3 voltage. In general grid 3 should be operated above 250 V.
- On EIA resolution test chart, faceplate illumination adjusted for peak signal current of 200 nA and dark current of 20 nA.

4. Conditions:

The camera focused on a uniformly illuminated two-zone test pattern, the diameter of the centre zone (1) being equal to the raster height. Zone (2) being defined as the remainder of the scanned area. Signal electrode voltage adjusted for a dark current of 20 nA, illumination on the target (c.t. = 2856 K) adjusted to provide a signal current of 200 nA. Beam current adjusted for correct stabilization.

Scanning amplitudes of the monitor adjusted to obtain a raster with an aspect ratio of 3:4.

Monitor set-up and contrast control adjusted for faint raster when lens of camera is capped, and for non-blooming bright raster when lens of camera is uncapped.

Black spots having a contrast \geq 100% (\geq 10% for XQ1240) and white spots having a contrast \geq 50% of peak white signal (\geq 10% for XQ1240) are fully counted.

Under the above conditions the number and size of the spots visible in the monitor picture will not exceed the limits stated below.

XQ1240

Spot size in % of raster height	Maximum number of sp zone 1 zone 2			
> 0,8	none	none		
≤ 0,8 to 0,6	none	none		
$\leq 0.6 \text{ to } 0.2$	1	2		
≤0,2	*	*		
total (max.)	2			

XQ1241

Spot size in % of raster height	Maximum nu zone 1	mber of spots zone 2
> 0,8	none	none
≤0,8 to 0,6	none	1
$\leq 0.6 \text{ to } 0.2$	2	3
≤0,2	*	*
total (max.)	4	

- * Do not count spots of this size unless concentration causes a smudgy appearance.
 - a) Minimum separation between any two spots greater than 0,4% of raster height is limited to a distance equivalent to 3% of raster height.
 - b) Tubes are rejected for smudge, lines, streaks, mottled, grainy or uneven background having contrast ratios in excess of 10% (XQ1240) and 50% (XQ1241).

Approximation of the second of

CAMERA TUBE

Small size vidicon television camera tube with low heater consumption, integral mesh construction, magnetic focusing and magnetic deflection. Overall length 108 mm (4% in) and diameter 17,7 mm (2/3 in).

The XQ1270 is intended for use in ultra compact TV cameras for industrial and consumer applications.

QUICK REFERENCE DATA

Integral mesh	
Focusing	magnetic
Deflection	magnetic
Diameter	17,7 mm
Length	max. 108 mm
Heater	6,3 V; 110 mA
Limiting resolution	500 TV lines

OPTICAL

Diagonal of quality rectangle on photoconductive layer

(aspect ratio 3:4)

max.

11 mm

Orientation of image on photoconductive layer:

The direction of the horizontal scan should be essentially parallel to the plane passing through pin 4 and the longitudinal axis of the tube.

Photoconductive layer

type A

Spectral response, max. response at

approx. 550 nm

3

Faceplate

thickness

1,5 mm

refractive index 1.487

HEATING

Indirect by a.c. or d.c.; parallel or series supply

Heater voltage

 V_{f}

6,3 V ± 10%

Heater current at $V_f = 6.3 \text{ V}$

If

110 mA

When the tube is used in a series heater chain, the heater voltage must not exceed an r.m.s. value of 9,5 V when the supply is switched on.

CAPACITANCES


Signal electrode to all


$$C_{as} \approx 2 pF$$

This capacitance, which is effectively the output impedance of the tube, increases when the tube is inserted into the deflection and focusing coil unit.

MECHANICAL DATA

Dimensions in mm

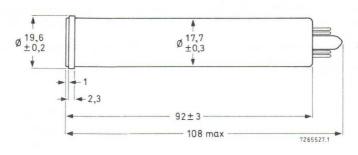

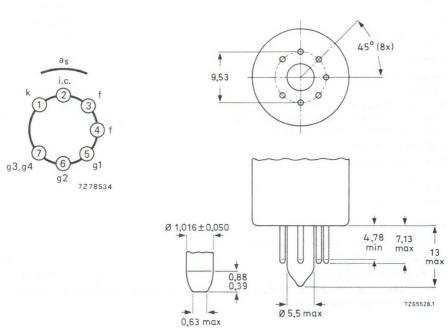

Base: JEDEC no. E7-91.

Mounting position: any

Net mass: ≈ 22 g

Camera tube XQ1270

ACCESSORIES

Socket

special miniature 7-pin, type 56049 or equivalent

Deflection and focusing coil unit

KV12S or equivalent

DEFLECTION

magnetic

FOCUSING

magnetic

LIMITING VALUES

(Absolute maximum rating system) for scanned area of 6,6 mm x 8,8 mm.

"Full-size scanning" i.e. scanning of a 6,6 mm \times 8,8 mm area of the photoconductive layer should always be applied. Underscanning, i.e. scanning of an area smaller than 6,6 mm \times 8,8 mm, may cause permanent damage to the specified full-size area.

Signal electrode voltage	Vas	max.	80	V
Grid 4 and grid 3 voltage	$V_{g4,g3}$	max.	750	V
Grid 2 voltage	V_{g2}	max.	350	V
Grid 1 voltage, negative positive	$_{V_{g1}}^{-V_{g1}}$	max. max.	300	V V
Cathode-to-heater voltage, peak positive peak negative	$V_{kfp} - V_{kfp}$	max.	125 10	
Dark current, peak	ldp	max.	150	nA
Output current, peak	lasp	max.	500	nA*
Faceplate illumination	E	max.	10 000	lx
Faceplate temperature, storage and operation	T	max.	70	oC **
Cathode heating time before drawing cathode current	th	min.	1	min

^{*} Video amplifiers should be capable of handling signal-electrode currents of this magnitude without overloading the amplifier or distorting the picture.

^{**} Under difficult environmental conditions a flow of cooling air directed at the faceplate is recommended. When televising flames and furnaces, appropriate infra-red absorbing filters should be used.

OPERATING CONDITIONS AND PERFORMANCE

For a scanned area of 6,6 mm x 8,8 mm and a faceplate temperature of 25 to 35 °C.

CONDITIONS					n	otes
Grid 4 and grid 3 (beam focus electrode) voltage	$V_{g4,g}$	3	250	to 300 V		1
Grid 2 (accelerator) voltage	V_{g2}			300 V		
Grid 1 voltage for picture cut-off (no blanking applied)	V_{g1}		-80 t	o -20 V		
Blanking voltage, peak-to-peak when applied to grid 1 when applied to the cathode				75 V 20 V		
Flux density at centre of focusing coil				5 mT		
Flux density of adjustable alignment magnets			0	to 0,4 mT		
PERFORMANCE						
Signal electrode voltage for dark current of 20 nA	V _{as}	min. 10	30	max.		
Signal current faceplate illumination 10 lx c.t. 2856 K, dark current 20 nA	Is	100	200	nA		
Decay: residual signal current 60 ms after cessation of the illumination (c.t. 2856 K, initial signal current 200 nA,			4.7			
dark current 20 nA			17	%		
Limiting resolution, at picture centre at picture corners		400 300	500 400	TV lin		2
Average γ of transfer characteristic for signal currents between 20 and 200 nA (see Fig. 1)		0,55	0,74	0,85		
Spurious signals (spots and blemishes)						3

Notes see next page.

NOTES

- Resolution decreases with decreasing grid 3 and 4 voltages. In general grids 3 and 4 should be operated above 250 V.
- On EIA resolution test chart, faceplate illumination adjusted for peak signal current of 200 nA and dark current of 20 nA.
- 3. Conditions:

The camera focused on a uniformly illuminated two-zone test pattern, the diameter of the centre zone (1) being equal to the raster height. Zone (2) being defined as the remainder of the scanned area. Signal electrode voltage adjusted for a dark current of 20 nA, illumination (c.t. 2856 K) adjusted to provide a signal current of 200 nA. Beam current adjusted for correct stabilization.

Scanning amplitudes of the monitor adjusted to obtain a raster aspect ratio of 3:4.

Monitor set-up and contrast control adjusted for faint raster when lens of camera is capped, and for non-blooming bright raster when lens of camera is uncapped.

Under the above conditions the number and size of the spots visible in the monitor picture will not exceed the limits stated below. Both black and white spots must be counted. Only white and black spots with contrasts $\geq 50\%$ and $\geq 100\%$ respectively (of peak white signal) are taken into account.

Spot size in % of raster height	Maximum number of spots				
% of raster neight	zone 1	zone 2			
>0,8	none	none			
≤0,8 to 0,6	none	1			
≤ 0.6 to 0.2	2	3			
≤0,2	*	*			
total (max.)	4				

- Do not count spots of this size unless concentration causes a smudgy appearance.
- a) Minimum separation between any 2 spots greater than 0,4% of raster height is limited to a distance equivalent to 3% of raster height.
- b) Tubes are rejected for smudge, lines, streaks, mottled, grainy or uneven background having contrasts > 50%.

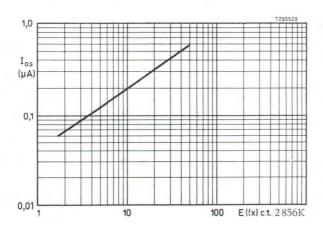


Fig. 1 Typical light transfer characteristic. Scanned area 6,6 mm x 8,8 mm. Faceplate temperature \approx 30 °C.

CAMERA TUBE

Small size vidicon television camera tube with low heater consumption, separate mesh construction for improved resolution, magnetic focusing and magnetic deflection.

Overall length 108 mm (41/4 in) and diameter 17,7 mm (2/3 in).

The XQ1271 is intended for use in ultra compact TV cameras for industrial and consumer applications.

QUICK REFERENCE DATA

Separate mesh	
Focusing	magnetic
Deflection	magnetic
Diameter	17,7 mm
Length	max. 108 mm
Heater	6,3 V, 95 mA
Limiting resolution	600 TV lines

OPTICAL

Diagonal of quality rectangle on photoconductive layer

(aspect ratio 3:4)

11 mm

Orientation of image on photoconductive layer:

The direction of the horizontal scan should be essentially parallel to the plane passing through pin 4 and the longitudinal axis of the tube.

Photoconductive layer

type A 550 nm

Spectral response, max. response at

approx.

Faceplate

1.5 mm

thickness refractive index

1,487

HEATING

Indirect by a.c. or d.c.; parallel or series supply

Heater voltage

Vf

6.3 V ± 10%

Heater current at V_f = 63 V

If

95 mA

When the tube is used in a series heater chain, the heater voltage must not exceed an r.m.s. value of 9,5 V when the supply is switched on.

CAPACITANCES


Signal electrode to all

 C_{as} \approx 2 pF

This capacitance, which is effectively the output impedance of the tube, increases when the tube is inserted into the deflection and focusing coil unit.

MECHANICAL DATA

Dimensions in mm

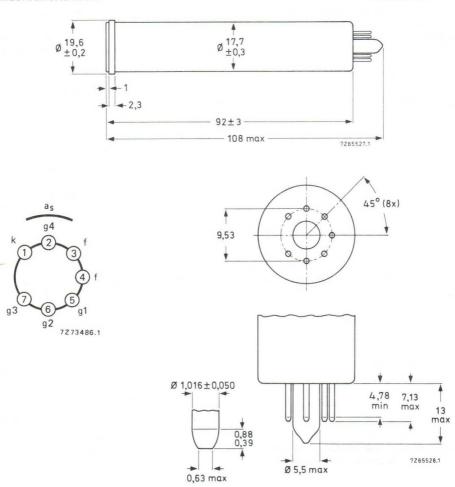

Base: JEDEC no. E7-91

Mounting position: any

Net mass: ≈ 23 g

ACCESSORIES

Socket

special miniature 7-pin, type 56049 or equivalent

Deflection and focusing coil unit

KV12S or equivalent

DEFLECTION

magnetic

FOCUSING

magnetic

LIMITING VALUES

(Absolute maximum rating system) for scanned area of 6,6 mm x 8,8 mm.

"Full-size scanning" i.e. scanning of a 6,6 mm \times 8,8 mm area of the photoconductive layer should always be applied. Underscanning, i.e. scanning of an area smaller than 6,6 mm \times 8,8 mm, may cause permanent damage to the specified full-size area.

Signal electrode voltage	Vas	max.	80	V	
Grid 4 voltage	V _g 4	max.	750	V	
Grid 3 voltage	V_{g3}	max.	750	٧	
Grid 2 voltage	V_{g2}	max.	350	V	
Grid 1 voltage, negative positive	$^{-V_{g1}}_{V_{g1}}$	max.	300		
Cathode-to-heater voltage, peak positive peak negative	V _{kfp} -V _{kfp}	max.	125 10		
Dark current, peak	ldp	max.	150	nA	
Output current, peak	lasp	max.	500	nA*	
Faceplate illumination	E	max.	10 000	Ix	
Faceplate temperature, storage and operation	T	max.	70	oC **	
Cathode heating time before drawing cathode current	th	min.	1	min	

^{*} Video amplifiers should be capable of handling signal-electrode currents of this magnitude without overloading the amplifier or distorting the picture.

^{**} Under difficult environmental conditions a flow of cooling air directed at the faceplate is recommended. When televising flames and furnaces, appropriate infrared absorbing filters should be used.

OPERATING CONDITIONS AND PERFORMANCE

For a scanned area of 6,6 mm x 8,8 mm and a faceplate temperature of 25 to 35 °C.

CONDITIONS						notes
Grid 4 voltage	V_{q4}			400	V	1
Grid 3 (beam focus electrode) voltage	V_{g3}			300	V	1,2
Grid 2 (accelerator) voltage	V_{g2}			300	V	
Grid 1 voltage for picture cut-off (no blanking applied)	V_{g1}		-80 to	o –3 5	V	
Blanking voltage, peak-to-peak when applied to grid 1 when applied to the cathode				75 20	Parameter Control	
Flux density at centre of focusing coil			5,0	to 5,6	mT	
Flux density of adjustable alignment magnets			0	to 0,4	mT	
PERFORMANCE						
Signal electrode voltage for dark current of 20 nA	Vas	min. 10	typ. 30	max	· V	
Signal current faceplate illumination 10 lx c.t. 2856 K, dark current 20 nA	Is	130	200		nA	
Decay: residual signal current 60 ms after cessation of the illumination (c.t. 2856 K, initial signal current 200 nA, dark current 20 nA	3		17		%	
Limiting resolution at picture centre at picture corners		550 350	600 450		TV lines	3
Average γ of transfer characteristic for signal currents between 20 and 200 nA (see Fig. 1)		0,55	0,74	0,85		

Notes see next page.

Spurious signals (spots and blemishes)

NOTES

- 1. Grid 4 voltage must always be higher than grid 3 voltage. The recommended ratio of grid 4 voltage to grid 3 voltage both for best geometry and most uniform signal output depends upon the type of coil used and will be 4:3 for the recommended type (see "Accessories").
- 2. Resolution decreases with decreasing grid 3 voltage. In general grid 3 should be operated above 250 V.
- On EIA resolution test chart; faceplate illumination adjusted for peak signal current of 200 nA and dark current of 20 nA.
- 4. Conditions:

The camera focused on a uniformly illuminated two-zone test pattern, the diameter of the centre zone (1) being equal to the raster height. Zone (2) being defined as the remainder of the scanned area. Signal electrode voltage adjusted for a dark current of 20 nA, illumination (c.t. 2856 K) adjusted to provide a signal current of 200 nA. Beam current adjusted for correct stabilization.

Scanning amplitudes of the monitor adjusted to obtain a raster aspect ratio of 3:4.

Monitor set-up and contrast control adjusted for faint raster when lens of camera is capped, and for non-blooming bright raster when lens of camera is uncapped.

Under the above conditions the number and size of the spots visible in the monitor picture will not exceed the limits stated below. Both black and white spots must be counted. Only white and black spots with contrasts $\geq 50\%$ and $\geq 100\%$ respectively (of peak white signal) are taken into account.

Spot size in	100	mber of spots	
% of raster height	zone 1	zone 2	
>0,8	none	none	
\leq 0,8 to 0,6	none	1	
≤ 0.6 to 0.2	2	3	
≤ 0,2	*	*	
total (max.)	4		

- * Do not count spots of this size unless concentration causes a smudgy appearance.
 - a) Minimum separation between any 2 spots greater than 0,4% of raster height is limited to a distance equivalent to 3% of raster height.
 - b) Tubes are rejected for smudge, lines, streaks, mottled, grainy or uneven background having contrasts > 50%.

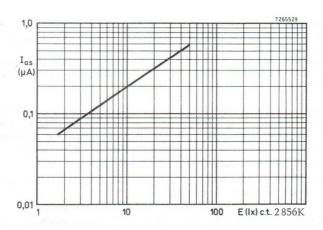


Fig. 1 Typical light transfer characteristic. Scanned area 6,6 mm x 8,8 mm. Faceplate temperature \approx 30 °C.

CAMERA TUBE

Small size vidicon television camera tube with low heater consumption, separate mesh construction, electrostatic focusing and magnetic deflection. Overall length 108 mm (4% in) and diameter 17,7 mm (2/3 in).

The XQ1272 is intended for use in ultra compact TV cameras for industrial and consumer applications in which a minimum of size, weight and power consumption is essential.

QUICK REFERENCE DATA

Separate mesh	
Focusing	electrostatic
Deflection	magnetic
Diameter	17,7 mm
Length	max. 108 mm
Heater	6,3 V, 95 mA
Limiting resolution	550 TV lines

OPTICAL

Diagonal of quality rectangle on photoconductive laye	r
(aspect ratio 3:4)	

11 mm

Orientation of image on photoconductive layer:

The direction of the horizontal scan should be essentially parallel to the plane passing through pin 4 and the longitudinal axis of the tube.

Photoconductive layer		type A	
Spectral response, max. response at	approx.	550 nn	n
Faceplate			
thickness		1,5 mi	m
refractive index	1	487	

HEATING

Indirect by	/ a.c.	or d.c.:	parallel o	or series s	vlaque
-------------	--------	----------	------------	-------------	--------

Heater voltage	V _f	6,3 V ± 10%
Heater current, at $V_f = 6.3 \text{ V}$	If	95 mA

When the tube is used in a series heater chain, the heater voltage must not exceed an r.m.s. value of 9,5 V when the supply is switched on.

CAPACITANCES


Signal electrode to all


$$C_{as} \approx 2 pF$$


This capacitance, which is effectively the output impedance of the tube, increases when the tube is inserted into the deflection coil unit.

MECHANICAL DATA

Dimensions in mm

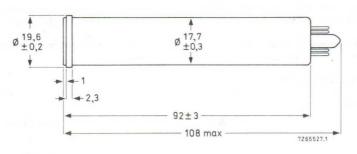

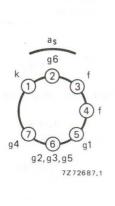

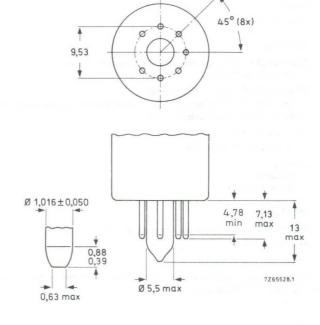

Base: JEDEC no. E7-91

Mounting position: any

Net mass: ≈ 25 g

ACCESSORIES

Socket

special miniature 7-pin, type 56049 or equivalent

Deflection coil unit

KV19G or equivalent

DEFLECTION

magnetic

FOCUSING

electrostatic

LIMITING VALUES

(Absolute maximum rating system) for scanned area of 6,6 mm x 8,8 mm.

"Full-size scanning" i.e. scanning of a 6,6 mm \times 8,8 mm area of the photoconductive layer should always be applied. Underscanning, i.e. scanning of an area smaller than 6,6 mm \times 8,8 mm, may cause permanent damage to the specified full-size area.

Signal electrode voltage	V_{as}	m	ax.	80	V	
Grid 6 voltage	V_{g6}	m	ax.	600	V	
Grid 4 (beam focus electrode) voltage	V_{q4}	m	ax.	350	V	
Grid 5, grid 3 and grid 2 voltage	V _{g5,g3,g2}	m	ax.	350	V	
Grid 1 voltage, negative positive	$_{V_{g1}}^{-V_{g1}}$	m	ax.	300		
Cathode-to-heater voltage, peak positive peak negative	V _{kfp}		ax.	125 10		
Dark current, peak	ldp	m	ax.	150	nA	
Output current, peak	lasp	m	ax.	500	nA*	
Faceplate illumination	E	m	ax.	10 000	lx	
Faceplate temperature, storage and operation	Т	m	ax.	70	oC **	
Cathode heating time before drawing cathode current	th	m	in.	1	min	

^{*} Video amplifiers should be capable of handling signal-electrode currents of this magnitude without overloading the amplifier or distorting the picture.

^{**} Under difficult environmental conditions a flow of cooling air directed at the faceplate is recommended. When televising flames and furnaces, appropriate infrared absorbing filters should be used.

OPERATING CONDITIONS AND PERFORMANCE

For a scanned area of 6,6 mm \times 8,8 mm and a faceplate temperature of 25 to 35 $^{\rm o}$ C.

CONDITIONS					notes
Grid 6 (decelerator) voltage	V_{g6}			500 V	1
Grid 4 (beam focus electrode) voltage	V_{g4}		35	to 55 V	
Grid 5, grid 3 and grid 2 voltage	V _{g5,g3,g}	2		300 V	1,2
Grid 1 voltage for picture cut-off (no blanking applied)			-80 t	o -30 V	
Blanking voltage, peak-to-peak when applied to grid 1 when applied to the cathode				75 V 20 V	
Flux density of adjustable alignment magnets			0	to 0,4 mT	
PERFORMANCE					
Signal electrode voltage for dark current of 20 nA	V	min.	typ. 30	max.	
Signal current faceplate illumination 10 lx c.t. 2856 K, dark current 20 nA	V _{as}	130	200	nA	
Decay: residual signal current 60 ms after cessation of the illumination (c.t. 2856 K, initial signal current 200 nA, dark current 20 nA)			17	%	
Limiting resolution at picture centre at picture corners			600 450	TV lines TV lines	3
Average γ of transfer characteristic for signal currents between 20 and 200 nA (see Fig. 1)		0,55	0,74	0,85	
Spurious signals (spots and blemishes)					4

Notes see next page.

NOTES

- 1. Grid 6 voltage must always be higher than grid 5, 3 and 2 voltages. The recommended voltage ratio of grid 6 to grids 5, 3 and 2 both for best geometry and most uniform signal output current depends upon the type of coil used and will be 5: 3 for the recommended type (see "Accessories").
- 2. Grid 5, 3 and 2 voltages must be operated above 250 V to provide sufficient beam current.
- On EIA resolution test chart, faceplate illumination adjusted for peak signal current of 200 nA and dark current of 20 nA.
- 4. Conditions:

The camera focused on a uniformly illuminated two-zone test pattern, the diameter of the centre zone (1) being equal to the raster height. Zone (2) being defined as the remainder of the scanned area. Signal electrode voltage adjusted for a dark current of 20 nA, illumination (c.t. 2856 K) adjusted to provide a signal current of 200 nA. Beam current adjusted for correct stabilization.

Scanning amplitudes of the monitor adjusted to obtain a raster aspect ratio of 3:4.

Monitor set-up and contrast control adjusted for faint raster when lens of camera is capped, and for non-blooming bright raster when lens of camera is uncapped.

Under the above condions the number and size of the spots visible in the monitor picture will not exceed the limits stated below. Both black and white spots must be counted. Only white and black spots with contrasts $\geq 50\%$ and $\geq 100\%$ respectively (of peak white signal) are taken into account.

Spot size in		mber of spots		
% of raster height	zone 1	zone 2		
>0,8	none	none		
≤ 0,8 to 0,6	none	1		
≤ 0.6 to 0.2	2	3		
≤ 0,2	*	*		
total (max.)	4			

- * Do not count spots of this size unless concentration causes a smudgy appearance.
 - a) Minimum separation between any 2 spots greater than 0,4% of raster height is limited to a distance equivalent to 3% of raster height.
 - b) Tubes are rejected for smudge, lines, streaks, mottled, grainy or uneven background having contrasts > 50%.

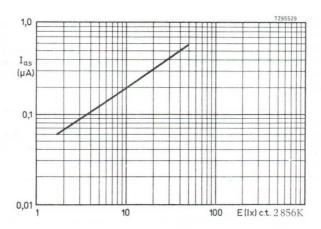


Fig. 1 Typical light transfer characteristic. Scanned area 6,6 mm x 8,8 mm. Faceplate temperature \approx 30 °C.

CAMERA TUBE

Vidicon TV camera tube with 25,4 mm (1 in) diameter, low heater power consumption, magnetic focusing and deflection, provided with a precision electron gun as in the 1 in diameter Plumbicon® tubes of the XQ1070 series.

The XQ1280 is intended mainly for use in medical or industrial X-ray equipment in which it is lens coupled to an X-ray image intensifier with a P11 or P20 output phosphor.

The tube is provided with a special photoconductive layer of high sensitivity in the 450 to 500 nm spectral region, and medium lag for proper X-ray noise integration.

QUICK REFERENCE DATA

Separate	mesh
----------	------

Focusing

Deflection

Diameter

Length

Spectral response,

max, at cut-off at

Resolution

Heater

OPTICAL DATA

Dimensions of quality area on photoconductive target

circle of 16.2 mm dia (note 1)

Orientation of image on target

The direction of the horizontal scan should be essentially parallel to the plane defined by pin 1 and the longitudinal axis of the tube.

Photoconductive layer

Spectral response,

max at

cut-off at

Spectral response curve

Faceplate

Refractive index

Thickness

type B

magnetic

magnetic

25,4 mm (1 in)

159 mm (61/4 in)

450 to 500 nm

approx. 800 nm

≥ 60 lp/mm

6,3 V, 95 mA

475 nm approx.

800 nm

approx.

see Fig. 1


1.49


2,3 ± 0,1 mm


[®] Registered trade mark for television camera tubes.


MECHANICAL DATA

Dimensions in mm

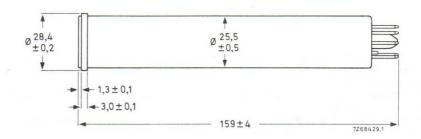

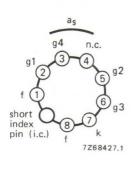

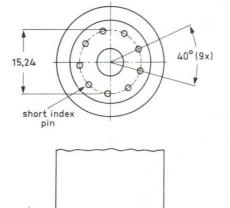

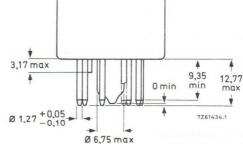

Base: IEC 67-I-33a (JEDEC E8-11)

Mounting position: any

Mass: ≈ 55 g

ACCESSORIES

Socket

Deflection and focusing coil

56098 or equivalent

AT1102/01, AT1116S or equivalent

ELECTRICAL DATA

Heating: Indirect by a.c. or d.c.; parallel or series supply

Heater voltage Vf 6,3 V ± 10% Heater current 95 mA 1+

When the tube is used in a series heater chain, the heater voltage must never exceed an r.m.s. value of 9,5 V when the supply is switched on.

Electron gun characteristics

Cut-off

grid 1 voltage for cut-off at $V_{q2} = 300 \text{ V}$ -30 to -100 V V_{q1}

Blanking voltage, peak-to-peak

on grid 1 50 ± 10 V V_{g1pp} 20 V on cathode V_{kpp} Grid 2 current at normally required beam currents 0.5 mA max.

lq2

Focusing magnetic Deflection magnetic

Capacitance

Signal electrode to all Cas 3 to 5 pF

This capacitance, which is effectively the output impedance, increases when the tube is inserted in the coil unit.

LIMITING VALUES

(Absolute maximum rating system)

All voltages are referred to the cathode, unless otherwise stated.

V_{as}	max.	100 V
V_{g4}	max.	1100 V
V_{g3}	max.	V 008
$V_{g4,g3}$	max.	450 V
V_{g2}	max.	350 V
-V _g 1 V _g 1	max.	125 V 0 V
	V _g 4 V _g 3 V _g 4, _g 3 V _g 2	V_{g4} max. V_{g3} max. $V_{g4,g3}$ max. V_{g2} max. $-V_{g1}$ max.

Cathode to heater voltage,					notes
positive peak	V_{kfp} $-V_{kfp}$	max.	125	V	
negative peak	$-V_{kfp}$	m max.	50	V	
External resistance between cathode					
and heater at $-V_{kfp} > 10 V$	Rkf	min.	2	kΩ	
Dark current, peak	ldarkp	max.	0,1	μA	
Output current, peak	lasp	max.	0,6	μA	
The video amplifier should be capable of handlir overloading.	ng signal ele	ctrode currents	of this mag	nitude w	ithout
Faceplate illumination	E	max.	5000	lx	
Faceplate temperature, storage and operation	Т	max.	80	oC	

OPERATING CONDITIONS AND PERFORMANCE

For a target area of 15 mm diameter; faceplate temperature 30 \pm 2 $^{o}\text{C}.$ All voltages are referred to the cathode, unless otherwise stated.

Typical operating conditions

		operation	for high resolution		
Grid 1 (control grid) voltage	V _{g1}		sufficient t to stabilize a current, l _{asp} ,		
Grid 2 (accelerator) voltage	V_{g2}	300	300	V	
Grid 3 (collector) voltage	V_{g3}	375	600	٧ .	2
Grid 4 (mesh) voltage	V_{g4}	600	960	V \	2
Peak signal current	I _{sp}	150	150	nA	8,9
Peak dark current	ldarkp	20	20	nA	
Blanking voltage, peak-to-peak when applied to grid 1 when applied to cathode	V _{g1pp} V _{kpp}		0 0	V V	
Field strength at centre of focusing coil (nominal)	Н	3600	4800	A/m	3, 4
Field strength of adjustable alignment coils	Н	0 to 320	0 to 320	A/m	5
Deflection currents					6

operation

normal

- 1						
Performance			1			notes
Signal electrode voltage for a		min.	typ.	max.		
peak dark current of 20 nA	Vas	30	40	70	V	
Grid 1 voltage for picture cut-off with no blanking applied	V _{g1}	-30	-55	-100	V	
Sensitivity Illumination required for a peak signal current of 150 nA						
P20	E		2 x 10 ⁻⁷	4×10^{-7}	lx W/cm²	
P11	E		0,2 1,5 x 10 ⁻⁷	$0,4$ 3×10^{-7}	lx W/cm²	
Decay:						
Residual signal current 200 ms after cessation of the illumination			15	20	%	10
Limiting resolution at picture centre,						
normal operation			≥ 50		lp/mm	11
operation for high resolution			≥ 60		lp/mm	11
Modulation transfer characteristic			see Fig. 4			
Average γ of transfer characteristic for signal currents between 10 nA and 200 nA			0,7			12
Spurious signals			The state of the s	ious signal	1280"	

NOTES

- 1. a. The circular quality area of 16,2 mm diameter is concentric with the faceplate.
 - b. The scanning amplitudes must be so adjusted that a target area of about 15 mm diameter is displayed on a standard monitor as a circular area with a diameter equal to the raster height. (15 mm x 20 mm scan).
 - c. The displayed circular area of approximately 15 mm diameter should fall within the quality area of 16,2 mm diameter but is generally not concentric with the latter due to excentricities of the output window of the image intensifier and the optical system.
 - d. Underscanning of the chosen area, or failure of scanning, should be avoided, since this may cause damage to the photoconductive layer.
- The optimal grid 4 voltage for best uniformity of black and white level depends on the type of coil
 unit used and will be 1,5 to 1,6 times V_{g3} for the coil units mentioned under "Accessories". Under
 no circumstances should grid 4 (mesh) be allowed to operate at a voltage level below that of grid 3,
 as this may damage the target.
- 3. Focus current adjusted for optimal electrical focus.
- 4. The polarity of the focusing coil should be such that its image end attracts an external northseeking pole.
- 5. The alignment coil unit should be so positioned that its centre is at a distance of approx. 94 mm (3 11/16 in) from the face of the tube and that its axis coincides with the axis of the tube, the deflecting yoke and the focusing coil.
- 6. See chapter "Deflection units".
- 7. The dark current is dependent on the signal electrode voltage and the temperature. This is shown in Figs 2 and 3.
- 8. Signal current is output current minus dark current.
- 9. As measured on a waveform oscilloscope.
- 10. Measured with a 100% peak signal current of 150 nA.
- 11. Measured with a video amplifier system with suitable bandwidth and a high-quality lens adjusted to f: 5,6.
- 12. For typical transfer characteristics with P20 and P11 light input see Fig. 5 and 6.

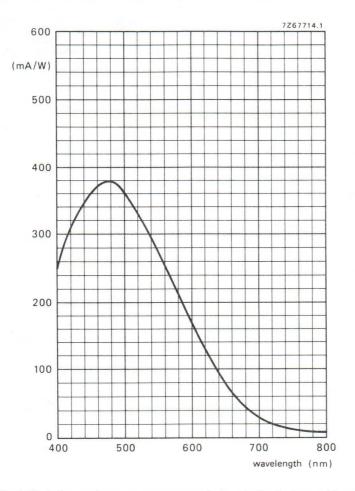


Fig. 1 Typical spectral response curve measured at constant output current I_{as} = 50 nA, with I_{dark} = 20 nA

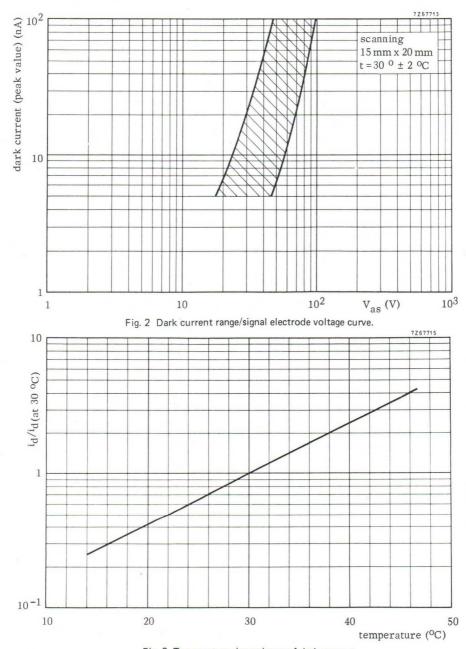


Fig. 3 Temperature dependence of dark current.

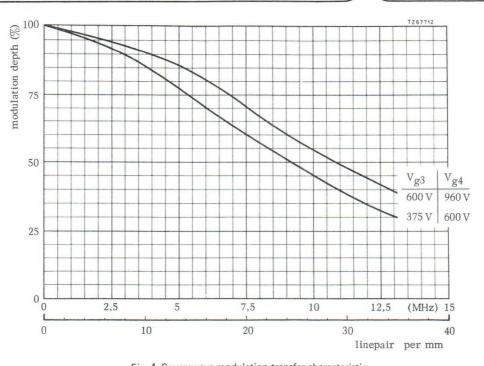


Fig. 4 Squarewave modulation transfer characteristic.

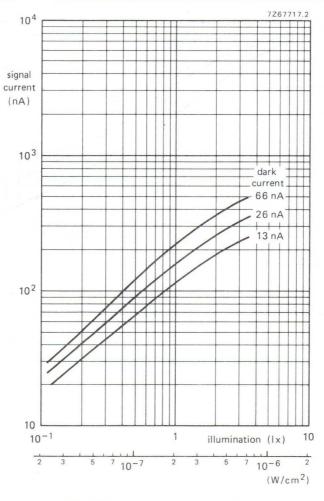


Fig. 5 Typical light transfer characteristic. Scanning 15 mm x 20 mm; peak values; P20 illumination.


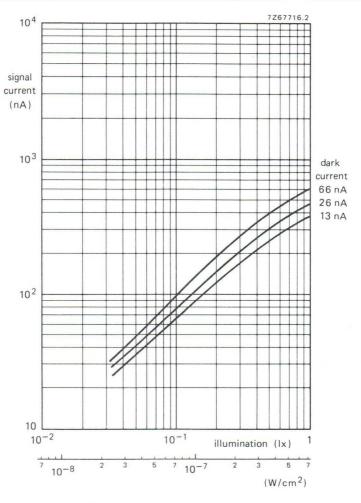


Fig. 6 Typical light transfer characteristic. Scanning 15 mm x 20 mm; peak values; P11 illumination.

Spurious signal specification

TEST CONDITIONS

- The tube shall be operated in a test chain under the voltage conditions as shown in the data sheet.
- The scanning amplitudes shall be adjusted to correspond to a scanned area of 16,2 mm x 21,6 mm.
- The tube shall be aligned and focused in accordance with the "Instructions for use".
- A back illuminated test transparency with three quality zones (see Fig. below) is projected onto the specified target area (16,2 mm diameter circular) producing an even illumination.

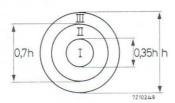

- The light level shall be adjusted to produce a peak signal current of 150 nA, the beam current shall
 be adjusted to just stabilize a peak signal current of 600 nA, the signal electrode voltage shall be
 adjusted for a peak dark current of 20 nA, the temperature of the faceplate shall be 30 ± 2 °C.
- The video amplifier system shall have a bandwidth (-3 dB) of at least 7 MHz.
- The monitor shall be adjusted for a non-blooming white.

Permitted number, size and location of blemishes

Dimensions of blemishes in % of picture height (16,2 mm)	Zone I	Zone II	Zone III
> 0,7	0	0	0
\leq 0,7 but $>$ 0,45	0	1	3
\leq 0,45 but $>$ 0,2	2	3	6
total	2		6

Both black and white blemishes as observed on the monitor shall be counted. Blemishes $\leq 0.2\%$ of picture height* and blemishes with a contrast $\leq 6\%$ (of 150 nA peak signal current, as measured on a waveform oscilloscope), however, shall be neglected.

^{*} Spots of this size are allowed unless concentration causes a smudgy appearance. The average contrast of the concentration is taken as the smudge contrast.

CAMERA TUBE

Vidicon TV camera tube with 25,4 mm (1 in) diameter, low heater power consumption, magnetic focusing and deflection, provided with a precision electron gun as in the 1 in diameter Plumbicon® tubes of the XQ1070 series.

The XQ1285 has a fibre optic faceplate and is mainly intended for use in medical or industrial X-ray equipment in which it is directly coupled to an X-ray image intensifier with a P11 or P20 phosphor on a fibre optic output window. For this purpose it is provided with a special photoconductive layer with a high sensitivity in the 450 to 500 nm spectral region and medium lag for proper X-ray noise integration.

QUICK REFERENCE DATA

fibre optic
magnetic
magnetic
25,4 mm (1 in)
159 mm (6¼ in)
6,3 V, 95 mA
450 to 500 nm 800 nm
≥ 50 lp/mm

OPTICAL DATA

Dimensions of quality area on photoconductive target	circle of 15,8 mm dia
	(note 1)

Orientation of image on target

Photoconductive layer

The direction of the horizontal scan should be essentially parallel to the plane defined by pin 1 and the longitudinal axis of the tube.


Spectral response,	
max. at	approx. 475 nm
cut-off	approx. 800 nm
Spectral response curve	see Fig. 1
Faceplate	
Centre to centre spacing of fibres	7,5 μm
Flat within	1,5 μm
Numerical aporture	1.0


type B


[®] Registered trade mark for television camera tubes.


MECHANICAL DATA

Dimensions in mm

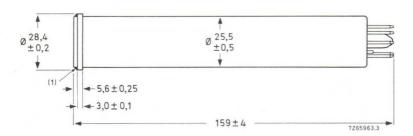

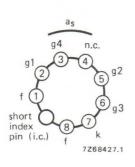

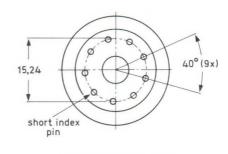

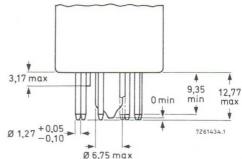

Base: JEDEC E8-11; IEC 67-I-33a

Mounting position: any

Weight: ≈ 55 g

ACCESSORIES

Socket

Deflection and focusing coil unit

56098 or equivalent

AT1102/01, AT1116S or equivalent

(1) Epoxy resin. Proper coupling of the XQ1285 to the fibre optic output window of an image intensifier may be obtained by mechanical arrangements which either exert an evenly distributed axial forward pulling force on the signal-electrode ring or an axial forward pushing force on the base end or socket of the tube.

In either case the recommended force is in the order of 100 to 120 N.

ELECTRICAL DATA

Heating: Indirect by a.c. or d.c.; parallel or series supply

Heater voltage V_f 6,3 V \pm 10% Heater current, at V_f = 6,3 V \pm 10% mA

When the tube is used in a series heater chain, the heater voltage must never exceed an r.m.s. value of 9,5 V when the supply is switched on.

Electron gun characteristics

Cut-off

grid 1 voltage for cut-off at V_{q2} = 300 V V_{g1} -30 to -100 V

Blanking voltage, peak-to-peak

on grid 1 V_{g1pp} 50 \pm 10 V on cathode V_{kpp} 20 V Grid 2 current at normally required beam currents I_{g2} max. 0,5 mA

Focusing magnetic

Deflection magnetic

Capacitance

Signal electrode to all Cas 3 to 5 pF

This capacitance, which effectively is the output impedance of the tube, increases when the tube is inserted into the deflection and focusing coil unit.

LIMITING VALUES

(Absolute maximum rating system)

All voltages are referred to the cathode, unless otherwise stated.

Signal electrode voltage	Vas	max.	100	V	
Grid 4 voltage	V_{g4}	max.	1100	V	
Grid 3 voltage	V_{g3}	max.	800	V	
Voltage between grid 4 and grid 3	$V_{g4,g3}$	max.	450	V	
Grid 2 voltage	V_{g2}	max.	350	V	
Grid 1 voltage, negative positive	−V _{g1} V _{g1}	max.	125 0	V V	
Cathode-to-heater voltage, positive peak negative peak	V _{kfp} -V _{kfp}	max.	125 50		
External resistance between cathode and heater at $-V_{\mbox{kfp}} > 10~\mbox{V}$	R _{kf}	min.	2	kΩ	

D 1			0.1	^	
Dark current, peak	darkp	max.	0,1	μA	notes
Output current, peak	lasp	max.	0,6	μΑ	
Axial force on signal-electrode ring in forward direction (evenly distributed)		max.	200	Ν	
Faceplate illumination	E	max.	5000	lx	
Faceplate temperature, storage and operation	Т	max.	80 -30	oC oC	

normal

operation

OPERATING CONDITIONS AND PERFORMANCE

For a target area of 15 mm diameter; faceplate temperature 30 \pm 2 $^{\rm o}{\rm C}.$ All voltages are referred to the cathode, unless otherwise stated.

Typical operating conditions

		operation	for high resolution		
Grid 1 (control grid) voltage	V _g 1		sufficient t to stabilize a current, l _{asp} ,		
Grid 2 (accelerator) voltage	V_{g2}	300	300	V	
Grid 3 (collector) voltage	V_{g3}	375	600	V	
Grid 4 (mesh) voltage	V_{g4}	600	960	V	2
Peak signal current	I _{sp}	150	150	nA	8
Peak dark current	Idarkp	20	20	nA	
Blanking voltage, peak-to-peak when applied to grid 1 when applied to cathode	V _{g1pp} V _{kpp}		0	V V	
Field strength at centre of focusing coil (nominal)	Н	3200	4800	A/m	3, 4
Field strength of adjustable alignment coils	Н	0 to 320	0 to 320	A/m	6
Deflection currents			1		6

Performance			1	1		notes
Signal electrode voltage for a		min.	typ.	max.		
peak dark current of 20 nA	Vas	30	40	75	V	7,9
Grid 1 voltage for picture cut-off, with no blanking applied	V_{g1}	-30	-55	-100	V	
Sensitivity Illumination required for a peak signal current of 150 nA						
P20	Е		1,5 3 x 10 ⁻⁷	3 6 x 10 ⁻⁷	Ix W/cm²	
P11	Е		0,3 2,3 x 10 ⁻⁷	0,6 4,5 x 10 ⁻⁷		
Decay:						
Residual signal current 200 ms after cessation of the illumination			15	20	%	10
Limiting resolution at picture centre,						
normal operation			≥ 50		lp/mm	11
operation for high resolution			≥ 60		lp/mm	11
Modulation transfer characteristic			see Fig.	4		
Average γ of transfer characteristic for signal currents between 10 nA and 300 nA			0,7			12
Spurious signals			24100	rious signal ation for XQ	1285''	

NOTES

- 1. a. The circular quality area of 15,8 mm diameter is concentric with the faceplate.
 - b. The scanning amplitudes are so adjusted that a target area of about 15 mm diameter is displayed on a standard monitor as a circular area with a diameter equal to the raster height. (15 mm x 20 mm scan).
 - c. The displayed circular area of approximately 15 mm diameter should fall within the quality area of 15,8 mm diameter but is generally not concentric with the latter due to eccentricities of the output window of the image intensifier and of the optical system.
 - d. Underscanning of the chosen target area, or failure of scanning, should be avoided, so as not to cause damage to the photoconductive layer.
- The optimal grid 4 voltage for best uniformity of black and white level depends on the type of coil
 unit used and will be 1,5 to 1,6 times V_{g3} for the coil units mentioned under "Accessories". Under
 no circumstances should grid 4 (mesh) be allowed to operate at a voltage level below that of grid 3,
 as this may damage the target.
- 3. Focus current adjusted for optimal electrical focus.
- The polarity of the focusing coil should be such that its image end attracts an external northseeking pole.
- 5. The alignment coil unit should be so positioned that its centre is at a distance of approx. 94 mm (3 11/16 in) from the face of the tube and that its axis coincides with the axis of the tube, the deflecting yoke and the focusing coil.
- 6. See chapter "Deflection units".
- 7. The dark current is dependent on the signal electrode voltage and the temperature. This is shown in Figs 2 and 3.
- 8. Signal current is output current minus dark current.
- 9. As measured on a waveform oscilloscope.
- 10. Measured with a 100% peak signal current of 150 nA.
- 11. Obtained with a video amplifier system with adequate bandwidth.

Measured with a transparent square-wave test pattern applied directly to the faceplate and which is illuminated with P20 light of a lambertian distribution. The average transmission of the test transparency is about 50% of the transmission of the transparency's whites.

No aperture correction or gamma correction is applied.

12. For typical transfer characteristics with P20 and P11 light input see Figs 5 and 6.

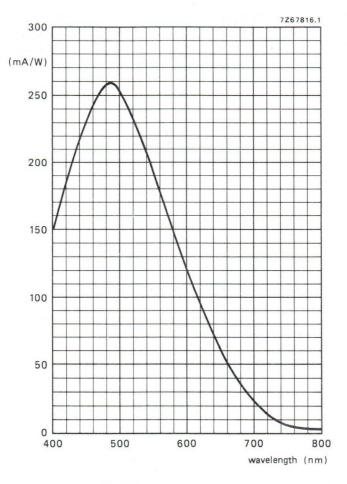


Fig. 1 Spectral response curve.

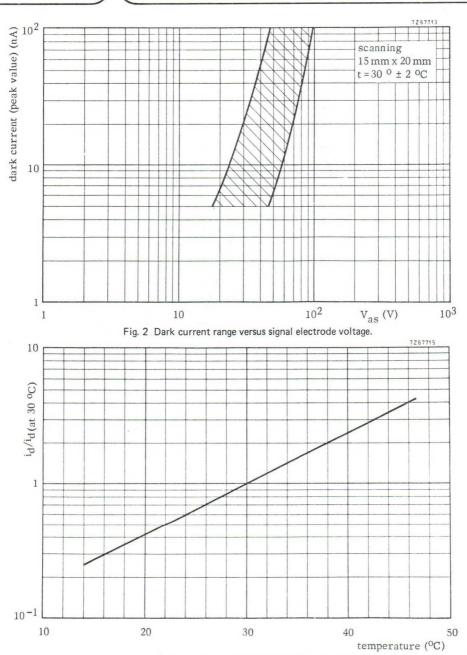


Fig. 3 Temperature dependence of dark current.

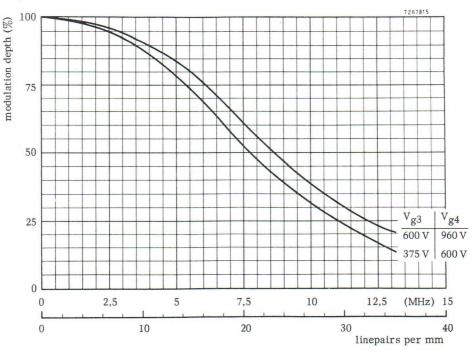
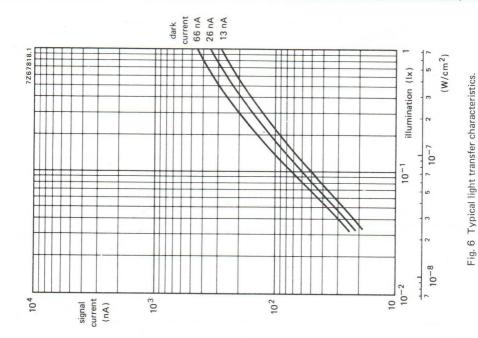


Fig. 4 Square wave modulation transfer characteristic.




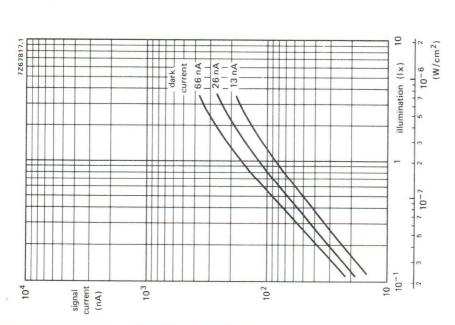


Fig. 5 Typical light transfer characteristics.

Spurious signal specification

TEST CONDITIONS

- The tube shall be operated in a test chain under the voltage conditions as shown in the data sheet.
- The scanning amplitudes shall be adjusted to overscan the target such that it is displayed as a circle
 on the monitor.
- A test transparency, back illuminated with lambertian light of c.t. = 2856 K, with two quality zones (see Fig. below) is applied directly to the faceplate and positioned such that it is concentric with the target as observed on the monitor.
- The tube shall be aligned and focused.
- The scanning amplitudes shall be slightly reduced, horizontal and vertical centring controls be
 adjusted such that the circular area of 15,8 mm dia just fits in the picture height of the monitor and
 is displayed as a circle.
- The temperature of the faceplate shall be 30 ± 2 °C.
 The signal electrode voltage shall be adjusted for a peak dark current of 20 nA.
 The light level shall be adjusted to produce a peak signal current of 150 nA, the beam current shall be adjusted to just stabilize a peak signal current of 600 nA.
- The video amplifier shall have a bandwidth (-3 dB) of at least 7 MHz.
- The monitor shall be adjusted for a non-blooming white.

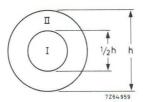

h = 15,8 mm on target $\frac{1}{2}h = 7,9$ mm on target

Permitted number, size and location of blemishes

The table below shows what number of blemishes, black or white, are permitted per size, per zone and total (notes 1 and 2).

Dimensions of blemishes in % of picture height	Zone I		Zone II		Total I + II
	white	black	white	black	
> 0,8	0	0	0	0	0
≤ 0,8 but > 0,5	0	1	0	2	2
\leq 0,5 but $>$ 0,4	1	2	2	3	4
$\leq 0.4 \text{ but} > 0.2$	2	3	4	5	6
≤ 0,2 (note 3)					
total	3		6		8

Background structure (e.g. chicken wire pattern) originating from the fibre-optic faceplate shall not have a contrast exceeding 2%. (note 2)

NOTES

- 1. Both black and white blemishes as observed on the monitor shall be counted, however, blemishes ≤ 0,2% of picture height and black blemishes with a contrast ≤ 6%, and white blemishes with a contrast ≤ 3% shall be ignored.
- The contrast is measured as a percentage of 150 nA peak signal current on a waveform oscilloscope. The dimensions of blemishes are determined on the monitor with a transparent blemish gauge, calibrated in percent of picture height.
- If such blemishes form a concentration this will be evaluated as a blemish with as contrast the average contrast of the concentration.

CAMERA TUBE

Small size vidicon television camera tube with low heater consumption, separate mesh construction, electrostatic focusing and magnetic deflection and mechanically interchangeable with vidicons such as XQ1272. Overall length 108 mm (4% in) and diameter 17,7 mm (2/3 in).

The XQ1590 is intended for use in ultra compact TV cameras for industrial and consumer applications in which a minimum of size, weight and power consumption is essential.

QUICK REFERENCE DATA

Separate mesh			
Focusing (bipotential focusing lens)	electrostatic		
Deflection	magnetic		
Diameter	17,7 mm		
Length	max. 108 mm		
Heater	6,3 V, 95 mA		
Limiting resolution	550 TV lines		

OPTICAL

Diagonal of quality rectangle on photoconductive layer

(aspect ratio 3:4)

11 mm

Orientation of image on photoconductive layer:

The direction of the horizontal scan should be essentially parallel to the plane passing through pin 4 and the longitudinal axis of the tube.

Photoconductive layer

type A

Special response, max. response at

approx.

550 nm

thickness

1,5 mm 1.487

refractive index

HEATING

Faceplate

Indirect by a.c. or d.c. parallel or series supply

Heater voltage

Vf

6.3 V ± 10%

Heater current, at V_f = 6,3 V

16

95 mA

When the tube is used in a series heater chain, the heater voltage must not exceed an r.m.s. value of 9.5 V when the supply is switched on.

CAPACITANCES

Signal electrode to all


C_{as} ≈ 2 pF


45° (8x)


This capacitance, which is effectively the output impedance of the tube, increases when the tube is inserted into the deflection coil unit.

MECHANICAL DATA

Dimensions in mm

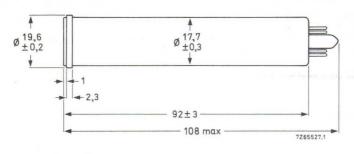

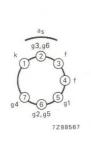

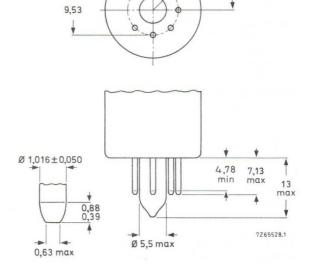

Base:

JEDEC no. E7-91

Mounting position: any

Net mass:

≈ 25 g

ACCESSORIES

Socket

special miniature 7-pin, type 56049 or equivalent

Deflection coil unit KV19G or equivalent

DEFLECTION

magnetic

FOCUSING

electrostatic

LIMITING VALUES

(Absolute maximum rating system) for scanned area of 6,6 mm x 8,8 mm.

"Full-size scanning" i.e. scanning of a 6,6 mm \times 8,8 mm area of the photoconductive layer should always be applied. Underscanning, i.e. scanning of an area smaller than 6,6 mm \times 8,8 mm, may cause permanent damage to the specified full-size area.

Signal electrode voltage	Vas	max.	80	V
Grid 3 and 6 voltage	$V_{g3,g6}$	max.	750	V
Grid 4 (beam focus electrode) voltage	V_{g4}	max.	350	V
Grid 2 and 5 voltage	$V_{g2,g5}$	max.	350	V
Grid 1 voltage,				
negative	$-V_{g1}$	max.	300	
positive	V_{g1}	max.	0	V
Cathode-to-heater voltage				
peak positive	V_{kfp}	max.	125	V
peak negative	$-V_{kfp}$	max.	10	V
Dark current, peak	l _{dp}	max.	150	nA
Output current, peak	lasp	max.	500	nA*
Faceplate illumination	E	max.	10 000	
Faceplate temperature, storage and operation	T	max.	70	oC**
Cathode heating time before drawing cathode current	th	min.	1	min

^{*} Video amplifiers should be capable of handling signal-electrode currents of this magnitude without overloading the amplifier or distorting the picture.

^{**} Under difficult environmental conditions a flow of cooling air directed at the faceplate is recommended. When televising flames and furnaces, appropriate infrared absorbing filters should be used.

OPERATING CONDITIONS AND PERFORMANCE

For a scanned area of 6,6 mm x 8,8 mm and a faceplate temperature of 25 to 35 °C.

CONDITIONS				notes
Grid 3 and 6 (decelerator) voltage	$V_{g3,g6}$		500 V	1
Grid 4 (beam focus electrode) voltage	V_{q4}	60	to 85 V	2
Grid 2 and 5 voltage	$V_{g2,g5}$		300 V	3
Grid 1 voltage for picture cut-off (no blanking applied)	V_{g1}	-80 t	o -30 V	
Blanking voltage, peak-to-peak when applied to grid 1			75 V	
when applied to the cathode			20 V	
Flux density of adjustable alignment magnets		0	to 0,4 m	Γ
PERFORMANCE				
Signal electrode voltage for dark current of 20 nA	V _{as} 15	typ. 30	max.	
Signal current faceplate illumination 10 lx c.t. 2856 K, dark current 20 nA	I _s 130	200	nA	
Decay: residual signal current 60 ms after cessation of the illumination (c.t. 2858 K, initial signal current 200 nA, dark current 20 nA)		17	%	
Limiting resolution at picture centre		550	TV	lines 4
at picture corners		475	TV	lines 4
Average γ of transfer characteristic for signal currents between 20 and 200 nA (see Fig. 1)	0,55	0,74	0,85	
Spurious signals (spots and blemishes)				5
			1	

Notes see next page.

Notes

- 1. Grids 3 and 6 voltage must always be higher than grids 2 and 5 voltage. The recommended voltage ratio of grids 3 and 6 to grids 2 and 5 both for best geometry and most uniform signal output current depends upon the type of coil used and will be 5 : 3 for the recommended type (see "Accessories").
- 2. Adjusted for correct electrical focus. This voltage range is higher than that of unipotential electrostatic focus types, such as XQ1272.
- 3. Grids 2 and 5 voltage must be > 250 V to provide sufficient beam current.
- On EIA resolution test chart, faceplate illumination adjusted for peak signal current of 200 nA and dark current of 20 nA.
- 5. Conditions:

The camera focused on a uniformly illuminated two-zone test pattern, the diameter of the centre zone (1) being equal to the raster height. Zone (2) being defined as the remained of the scanned area. Signal electrode voltage adjusted for a dark current of 20 nA, illumination (c.t. 2856K) adjusted to provide a signal current of 200 nA. Beam current adjusted for correct stabilization.

Scanning amplitudes of the monitor adjusted to obtain a raster aspect ratio of 3:4.

Monitor set-up and contrast control adjusted for faint raster when lens of camera is capped, and for non-blooming bright raster when lens of camera is uncapped.

Under the above conditions the number and size of the spots visible in the monitor picture will not exceed the limits stated below. Both black and white spots must be counted. Only white and black spots with contrasts $\geq 50\%$ and $\geq 100\%$ respectively (of peak white signal) are taken into account.

Spot size in	Maximum nu	mber of spots
% of raster height	zone 1	zone 2
> 0,8	none	none
\leq 0,8 to 0,6	none	1
\leq 0,6 to 0,2	2	3
≤ 0,2	*	*
total (max.)		4

- * Do not count spots of this size unless concentration causes a smudgy appearance.
 - a) Minimum separation between any 2 spots greater than 0,4% of raster height a limited to a distance equivalent to 3% of raster height.
 - b) Tubes are rejected for smudge, lines, streaks, mottled, grainy or uneven background having contrasts > 50%.

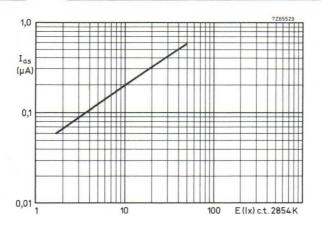


Fig. 1 Typical light transfer characteristic. Scanned area 6,6 mm x 8,8 mm. Faceplate temperature \approx 30 °C.

CAMERA TUBE

Extremely small size vidicon television camera tube with very low heater consumption, separate mesh construction, electrostatic focusing and magnetic deflection. Overall length 85 mm (3½ in) and diameter 13,5 mm (½ in).

The XQ1600 is intended for use in ultra-compact TV cameras for industrial and consumer applications in which a minimum of size, weight and power consumption is essential.

QUICK REFERENCE DATA

Separate mesh	
Focusing	electrostatic
Deflection	magnetic
Diameter	13,5 mm
Length	max. 85 mm
Heater	2,8 V, 107 mA
Limiting resolution	450 TV lines

OPTICAL

Diagonal of quality rectangle on photoco	nductive layer
(aspect ratio 3:4)	

7,75 mm

Orientation of image on photoconductive layer:

The direction of the horizontal scan should be essentially parallel to the plane passing through the short index pin and the longitudinal axis of the tube.

Photoconductive layer		type A	
Spectral response, max. response at	approx.	550	nm
Facenlate			

Faceplate

thickness	1,6 mm
refractive index	1,474

HEATING

Indirect by a.c. or d.c. parallel or series supply		
Heater voltage	Vf	2,8 V ± 5%
Heater current, at $V_f = 2.8 \text{ V}$	If	107 mA ± 10%

When the tube is used in a series heater chain, the heater voltage must not exceed an r.m.s. value of 3,5 V when the supply is switched on.

CAPACITANCES


Signal electrode to all


 C_{as} \approx 1,5 pF


This capacitance, which is effectively the output impedance of the tube, increases when the tube is inserted into the deflection coil unit.

MECHANICAL DATA

Dimensions in mm

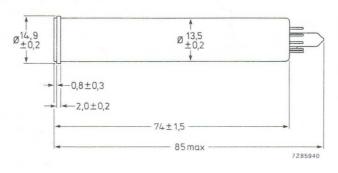

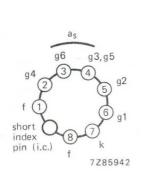

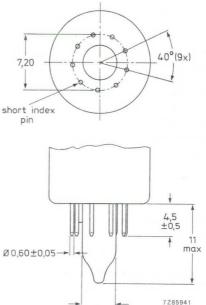

Ø4,5max

Mounting position: any

July 1984

Net mass:

≈ 12 g

ACCESSORIES

Socket

special miniature 8-pin type 56600 or equivalent

Deflection coil unit

KV29E or equivalent

DEFLECTION

magnetic

FOCUSING

electrostatic

LIMITING VALUES

(Absolute maximum rating system) for scanned area of 4,65 mm x 6,2 mm.

"Full-size scanning" i.e. scanning of a 4,65 mm \times 6,2 mm area of the photoconductive layer should always be applied. Underscanning, i.e. scanning of an area smaller than 4,65 mm \times 6,2 mm, may cause permanent damage to the specified full-size area.

Signal electrode voltage	Vas	max.	70	V
Grid 6 voltage	V_{g6}	max.	600	V
Grid 4 (beam focus electrode) voltage	V_{g4}	max.	350	V
Grid 3 and 5 voltage	$V_{g3,g5}$	max.	450	V
Grid 2 voltage	V_{g2}	max.	400	V
Grid 1 voltage,				
negative	$-V_{g1}$	max.	300	V
positive	V_{g1}	max.	0	V
Cathode-to-heater voltage				
peak positive	V_{kfp}	max.	125	V
peak negative	$-V_{kfp}$	max.	10	V
Dark current, peak	ldp	max.	80	nA
Output current, peak	lasp	max.	500	nA*
Faceplate illumination	E	max.	10 000	lx
Faceplate temperature, storage and operation	T	max.	70	oC**
Cathode heating time before drawing cathode current	th	min.	1	min

Video amplifiers should be capable of handling signal-electrode currents of this magnitude without overloading the amplifier or distorting the picture.

^{**} Under difficult environmental conditions a flow of cooling air directed at the faceplate is recommended. When televising flames and furnaces, appropriate infrared absorbing filters should be used.

OPERATING CONDITIONS AND PERFORMANCE

For a scanned area of 4,65 mm \times 6,2 mm and a faceplate temperature of 25 to 35 °C and standard TV scanning rate.

CONDITIONS				notes
Grid 6 (decelerator) voltage	V_{g6}	500	V	1
Grid 4 (beam focus electrode) voltage	V_{g4}	31 to 55	V	
Grid 3 and 5 voltage	V _{g3,g5}	250	V	2
Grid 2 voltage	V_{g2}	300	V	
Grid 1 voltage for picture cut-off (no blanking a	applied) V _{g1}	-100 to -40	V	
Blanking voltage, peak-to-peak				
when applied to grid 1		75	V	
when applied to the cathode		20	V	
Flux density of adjustable alignment magnets		0 to 0,4	mT	

PERFORMANCE

Signal electrode voltage for dark		min.	typ.	max.
current of 10 nA	Vas	10		V
Signal current faceplate illumination 10 lx c.t. 2856 K, dark current 10 nA	Is		120	nA
Decay: residual signal current 60 ms after cessation of the illumination (c.t. 2858 K, initial signal current 100 nA, dark current 10 nA)			20	%
Limiting resolution at picture centre			480	TV lines 2
Average γ of transfer characteristic for signal currents between 10 and 100 nA (see Fig. 1)		0,55	0,74	0,85
Spurious signals (spots and blemishes)				3

Notes see next page.

Notes

- 1. Grid 6 voltage must always be higher than grids 3 + 5 voltage. The recommended voltage ratio of grid 6 to grids 3 + 5 both for best geometry and most uniform signal output current depends upon the type of coil used and will be 2:1 for the recommended type (see "Accessories").
- On EIA resolution test chart, faceplate illumination adjusted for peak signal current of 100 nA and dark current of 10 nA.
- 3. Conditions:

The camera focused on a uniformly illuminated two-zone test pattern, the diameter of the centre zone (1) being equal to the raster height. Zone (2) being defined as the remainder of the scanned area. Signal electrode voltage adjusted for a dark current of 10 nA, illumination (c.t. 2856K) adjusted to provide a signal current of 100 nA. Beam current adjusted for correct stabilization.

Scanning amplitudes of the monitor adjusted to obtain a raster aspect ratio of 3:4.

Monitor set-up and contrast control adjusted for faint raster when lens of camera is capped, and for non-blooming bright raster when lens of camera is uncapped.

Under the above conditions the number and size of the spots visible in the monitor picture will not exceed the limits stated below. Both black and white spots must be counted. Only white and black spots with contrasts $\geq 50\%$ and $\geq 100\%$ respectively (of peak white signal) are taken into account.

Spot size in	Maximum nu	mber of spots
% of raster height	zone 1	zone 2
> 0,8	none	none
≤ 0,8 to 0,6	none	1
≤ 0,6 to 0,2	2	3
≤ 0,2	*	*
total (max.)	4	4

- * Do not count spots of this size unless concentration causes a smudgy appearance.
 - a) Minimum separation between any 2 spots greater than 0,4% of raster height a limited to a distance equivalent to 3% of raster height.
 - Tubes are rejected for smudge, lines, streaks, mottled, grainy or uneven background having constrasts > 50%

NEWVICON TUBES

SURVEY NEWVICON ® TUBES

1 inch -	magnetic	focusing	and	deflection
----------	----------	----------	-----	------------

All types 95 mA; 6,3 V

type	mesh	photo- conductive	qualit	ty grade	application		
		layer	HI	Ind	MS		
XQ1440	S	Nw -	•	•			
XQ1442*	S	Nw -		•	•	*	Fibre-optic faceplate
XQ1443**	S	Nw -		-		* *	Extended near IR response
XQ1444▲	S	Nw -		-	•	A	Radiation resistent faceplate

XQ1274	S	Nw		-
XQ1276**	S	Nw	-	-
XQ1380▲	S	Nw	-	-

2/3 inch - electrostatic focusing and magnetic deflection

XQ1275	S	Nw	-	•	
XQ1277 ▲▲	S	Nw	-	•	-
XQ1278▲▲	S	Nw	-	•	
XQ1381▲	S	Nw	-	-	

▲▲ Bipotential electrostatic focusing lens

Radiation resistent faceplate

1/2 inch - electrostatic focusing and magnetic deflection

XQ1601	S	Nw	•	
XQ1602▲	S	Nw	-	-

107 mA; 2,8 V

Radiation resistent faceplate

Accessories for Newvicon tubes

type	deflection (and focusing) coil unit	sockets
XQ1440, XQ1442, XQ1443 XQ1444	KV9G AT1116/06S or equivalent	56098 or equivalent
XQ1274, XQ1276, XQ1380	KV12S or equivalent	56098
XQ1275, XQ1277, XQ1278 XQ1381	KV19G or equivalent	or equivalent
XQ1601, XQ1602	KV29E or equivalent	56600

Abbreviations used in the tables

= separate mesh

Nw = cadmium and zinc telluride layer (Newvicon tubes)

HI = for high-quality black and white and colour cameras in sub-broadcast, medical,

educational and industrial applications

Ind = for black and white and colour cameras in non-critical industrial applications

MS = in cameras for military, surveillance, and scientific applications

® Newvicon is a registered trade mark for television camera tubes.

GENERAL OPERATIONAL NOTES

1 PROPERTIES OF THE NEWVICON PHOTOCONDUCTIVE LAYER

The Newvicon photoconductive layer is a heterojunction layer, consisting of a sublayer of zinc selenide (ZnSe) and a sublayer formed by a mixture of zinc telluride (ZnTe) and cadmium telluride (CdTe). In the Newvicon tubes described in this Data Handbook two layer variants are found, differing mainly in spectral response and sensitivity in the infrared region.

1.1 Sensitivity

The Newvicon tube has a high sensitivity in the entire visible spectral region. The sensitivity for white light (colour temperature 2856 K) filtered by an infrared eliminating filter, type B1/K1, is 3 to 4 times as high as that of a Plumbicon® tube.

The light transfer characteristic of the Newvicon tube is linear, except for a slight saturation in the high signal current region.

1.2 Spectral response

Typical spectral responses of the two Newvicon layers are found in Fig. 1.

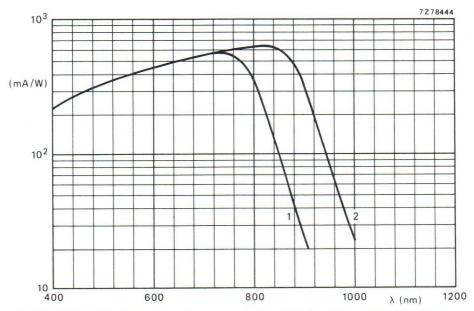


Fig. 1 Typical Newvicon spectral response curves. Curve 1: XQ1274, XQ1275, XQ1278, XQ1380, XQ1381, XQ1440, XQ1442, XQ1444. Curve 2: XQ1276, XQ1277, XQ1443.

® Registered trade mark for television camera tubes.

1.3 Dark current

The dark current in a Newvicon tube is lower than in a vidicon, but it is not negligible. A typical value at 30 °C for a 2/3-inch tube is 5 nA; for a 1-inch tube: 10 nA.

Roughly, the dark current doubles with every 7 to 8 °C temperature increase.

1.4 Resolution

The resolution of a Newvicon tube is determined mainly by the construction of the electron gun and by the operating conditions. Typical modulation transfer characteristics are given in the data sheets.

1.5 Lag

Because of its much larger target capacitance, the lag of a Newvicon tube is significantly higher than that of a Plumbicon tube. As it does not show photoconductive lag like vidicons, however, a Newvicon tube is faster than a vidicon.

Typical values of decay at 200 nA signal current can be found in the data sheets.

1.6 Stray light

The reflectance of the photoconductive layer in a Newvicon tube being low, halation effects in the faceplate of the tube are practically negligible.

1.7 Burn-in

In normal operating conditions, Newvicon tubes show negligible burn-in.

2 EQUIPMENT DESIGN AND OPERATING CONDITIONS

The signal electrode voltage should be adjusted to the value indicated by the tube manufacturer as printed on the envelope $(E_{sj} = \dots V)$.

The signal electrode voltage should be adjusted within an accuracy of ± 2 V; the voltage drop across R_I should be kept small. In the case of cathode blanking, the voltage drop across the cathode resistor during read-out should be taken into account. Too low a signal electrode voltage will cause picture sticking effects, whereas too high a voltage may result in picture defects (spots).

A ready way of adjusting the signal electrode voltage, which usually gives satisfactory results, is as follows:

- apply an even illumination to the target, resulting in a signal current of about 150 nA;
- increase the signal electrode voltage until a grainy structure just becomes visible;
- reduce the signal electrode voltage by 5 V, or, alternatively, reduce the signal electrode voltage until
 slightly above the point where, as observed on an oscilloscope, the signal amplitude commences to
 decrease.

As Newvicon tubes do not permit sensitivity control by means of regulation of the signal electrode voltage, adequate control is to be achieved by other means (iris control and neutral density filters). If the tube is applied in cameras originally designed for vidicon tubes, the automatic sensitivity control circuitry should be made inoperative and the signal electrode voltage set to the value indicated by the tube manufacturer.

The input light level on the target of a 2/3-inch Newvicon tube should be adjusted at approximately 0,8 lx at the highlight level of the scene. This means that a signal current of 200 nA at highlight level is preferred for optimum operation. For a 1-inch tube the input light level should be set at approximately 0,5 lx.

If the solar image, or a spot image of similar intensity, is focused on the target through a lens opening wider than f: 11, instantaneous breakdown of the target will occur. If it is possible that such a situation may arise, protection measures are necessary, e.g. a lens cap, a neutral density filter or a shutter.

The temperature of the faceplate should not exceed 70 $^{\circ}$ C, neither during operation nor storage. Whilst dark current doubles at every 7 to 8 $^{\circ}$ C temperature increase, lag decreases and resolution remains practically constant.

CAMERA TUBE

NEWVICON® television camera tube with a photoconductive target composed of cadmium and zinc tellurides featuring high resolution and an extremely high sensitivity.

The XQ1274 is a 2/3 in diameter camera tube with low heater power, separate mesh, magnetic focusing and deflection, and is mechanically interchangeable with vidicons like the XQ1271 and has the same pin connections.

The XQ1274 is intended for use in ultra-compact cameras for security and surveillance applications, for example, where its high sensitivity and resolution, small size and low power consumption are essential.

QUICK REFERENCE DATA

Separate mesh		
Focusing	ma	gnetic
Deflection	ma	gnetic
Diameter	17,3	7 mm
Length	max. 108	3 mm
Special response, max. at cut-off at	The second secon	nm nm
Heater	6,3 V, 99	mA
Limiting resolution	650	TV lines

OPTICAL

Diagonal of quality rectangle on photoconductive

layer (aspect ratio 3:4)

11 mm

Orientation of image on photoconductive layer:

The direction of the horizontal scan should be essentially parallel to the plane passing through the longitudinal tube axis and pin 4.

Spectral response, curve see Fig. 1

Faceplate

thickness 1,5 mm refractive index 1,61

HEATING Indirect by a.c. or d.c.; parallel or series supply

Heater voltage V_f 6,3 V \pm 10% Heater current, at V_f = 6,3 V \pm 10% If 95 mA

When the tube is used in a series heater chain, the heater voltage must not exceed an r.m.s. value of 9,5 V when the supply is switched on.

[®] Registered trade mark for television camera tubes.

CAPACITANCES

Signal electrode to all

Cas 2 pF

This capacitance, which is effectively the output impedance of the tube, increases when the tube is inserted into the deflection and focusing coil unit.

MECHANICAL DATA

Dimensions in mm


7,13


max

Ø 5,5 max

7265528.1

13 max

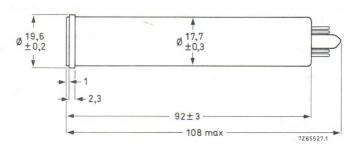

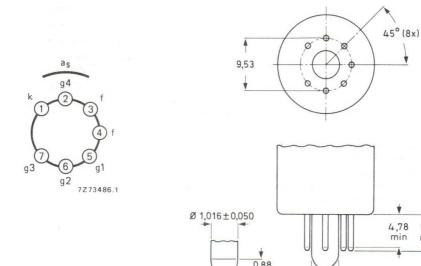

0,63 max

Mounting position: any

≈ 23 g Net mass:

JEDEC no. E7-91 Base:

ACCESSORIES

Socket

special miniature 7-pin, type

56049 or equivalent

Deflection and focusing coil unit

KV12S or equivalent

DEFLECTION

magnetic

FOCUSING

magnetic

LIMITING VALUES (Absolute maximum rating system)

for a scanned area of 6,6 mm x 8,8 mm.

"Full-size scanning" i.e. scanning of a 6,6 mm \times 8,8 mm area of the photoconductive layer should always be applied. Underscanning, i.e. scanning of an area smaller than 6,6 mm \times 8,8 mm, may cause permanent damage to the specified full-size area.

V_{as}	max.	50	V *
V_{g4}	max.	750	V
V_{g3}	max.	750	V
V_{g2}	max.	350	V
$-V_{q1}$	max.	300	V
V_{g1}	max.	0	V
V_{kfp}	max.		
$-V_{kfp}$	max.	10	V
lasp	max.	800	nA**
E	max.	10 000	lx ▲
T	max.	70	oC
th	min.	1	min
	Vg4 Vg3 Vg2 -Vg1 Vg1 Vkfp -Vkfp Iasp E	$\begin{array}{cccc} V_{g4} & \text{max.} \\ V_{g3} & \text{max.} \\ V_{g2} & \text{max.} \\ -V_{g1} & \text{max.} \\ V_{g1} & \text{max.} \\ V_{kfp} & \text{max.} \\ -V_{kfp} & \text{max.} \\ I_{asp} & \text{max.} \\ E & \text{max.} \\ T & \text{max.} \\ \end{array}$	$\begin{array}{cccccccccccccccccccccccccccccccccccc$

^{*} Newvicon tubes do not permit automatic sensitivity control by means of regulation of the signal electrode voltage. Adequate control is therefore to be achieved by other means (iris control and neutral density filters). If the tube is applied in cameras originally designed for vidicon tubes, the automatic sensitivity control circuitry should be made inoperative and the signal electrode voltage set to the value indicated by the tube manufacturer, see also General Operational Notes.

^{**} Video amplifiers should be capable of handling signal-electrode currents of this magnitude without overloading the amplifier or distorting the picture.

[▲] White light, uniformly diffused over entire tube face.

Care must be taken not to focus the solar image on the target through a lens opening wider than f: 11 to avoid instantaneous breakdown.

OPERATING CONDITIONS AND PERFORMANCE

for a scanned area of 6,6 mm x 8,8 mm, a faceplate temperature of 25 to 35 $^{\rm o}{\rm C}$ and standard TV scanning rate

	Conditions						notes
-	Signal electrode voltage	Vas		10	to 35	V	1
	Grid 4 (decelerator) voltage	V_{g4}			400	V	2
	Grid 3 (beam focus electrode) voltage	V_{g3}			300	V	3
	Grid 2 (accelerator) voltage	V_{g2}			300	V	
	Grid 1 voltage for picture cut-off (no blanking applied)	V_{g1}		-80 to	–35	V	
	Blanking voltage, peak to peak when applied to grid 1 when applied to cathode				-	V	
	Flux density at centre of focusing coil			5,01	to 5,6	mT	
	Flux density of adjustable alignment coils or magnets			0 1	to 0,4	mT	
	Performance		min.	typ.	max	<u>.</u>	
-	Dark current (at 25 °C)			2	4	nA	
	Signal current, white light faceplate illumination 1 lx c.t. 2856 K	I _S	200	260		nA	
	Decay: residual signal current 60 ms after cessation of the illumination initial signal current 200 nA			8	13	%	
	Limiting resolution, at picture centre at picture corners		550 350	650 450			lines 4 lines 4
	Average γ of transfer characteristic, see Fig. 2			≈ 1			
	Spurious signals (spots and blemishes)						5

Notes

- 1. The signal electrode voltage should be adjusted to the value indicated by the tube manufacturer as printed on the envelope ($E_{sj} = \dots V$). To minimize picture sticking effects the signal electrode should be adjusted with an inaccuracy of $\pm 2 V$; the voltage drop across R_l should be kept small. In case of cathode blanking the voltage drop across the cathode resistor during read-out should be taken into account.
- 2. Grid 4 voltage must always be higher than grid 3 voltage. The recommended ratio of grid 4 voltage to grid 3 voltage both for best geometry and most uniform signal output depends upon the type of coil unit used and will be 4:3 for the recommended type (see 'Accessories').
- 3. Resolution decreases with decreasing grid 3 voltage. In general grid 3 should be operated above 250 V.
- 4. On EIA resolution test chart; faceplate illumination adjusted for a peak output current of 200 nA.

5. Conditions

The camera focused on a uniformly illuminated two-zone test pattern, the diameter of the centre zone (1) being equal to the raster height. Zone (2) being defined as the remainder of the scanned area.

Faceplate illumination adjusted to produce 200 nA signal current, beam current adjusted for correct stabilization.

Monitor set-up and contrast control adjusted for faint raster when lens of camera is capped and for non-blooming bright raster when lens of camera is uncapped.

Under above conditions the number and size of spots per zone visible in the monitor picture will not exceed the limits stated below. Both black and white spots must be counted, unless their contrast is less than 50% of peak white signal as observed on a waveform oscilloscope. Spots having a contrast \geq 100% are fully counted, spots having a contrast \geq 50% but \leq 100% will be considered as having half their actual size.

Spot size in % of raster height	Maximum nun zone 1	Contract State of Sta
> 1,2	none	none
≤ 1,0 to 0,8	none	1
\leq 0,8 to 0,4	4	4
$\leq 0.4 \text{ to } 0.2$	4	4
≤0,2	*	*
total (max.)	8	3

^{*} Do not count spots of this size unless concentration causes a smudgy appearance.

Tubes are rejected for: smudges, lines, streaks, mottled, grainy or uneven background having contrast > 50%.

83

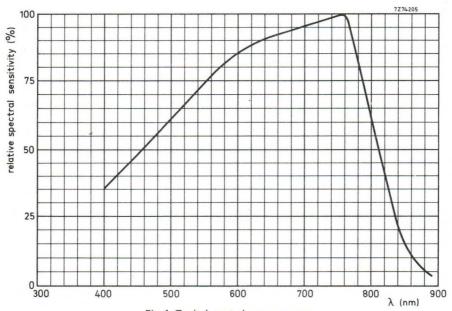


Fig. 1 Typical spectral response curve.

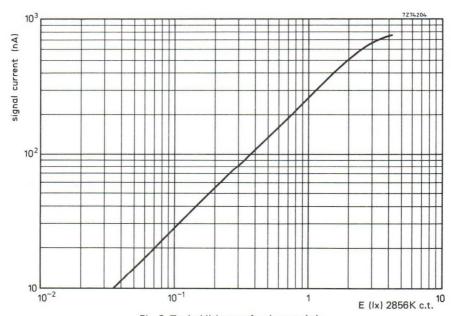


Fig. 2 Typical light transfer characteristic.

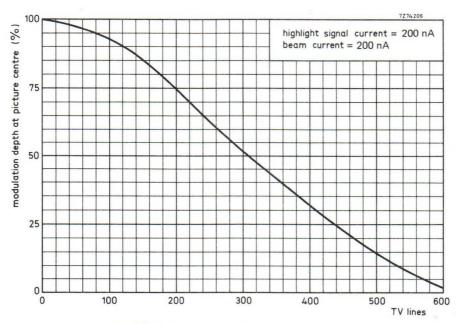


Fig. 3 Typical uncompensated square wave response curve.

CAMERA TUBE

NEWVICON® television camera tube with a photoconductive target composed of cadmium and zinc tellurides featuring high resolution and an extremely high sensitivity.

The XQ1275 is a 2/3 in diameter camera tube with low heater power, separate mesh, electrostatic focusing and magnetic deflection. It is mechanically interchangeable with vidicons like XQ1272 and has the same pin connections.

The XQ1275 is intended for use in ultra-compact cameras for security and surveillance applications, for example, where its high sensitivity and resolution, small size and low power consumption are essential.

QUICK REFERENCE DATA

Separate mesh		
Focusing		electrostatic
Deflection		magnetic
Diameter		17,7 mm
Length	max.	108 mm
Spectral response, max. at cut-off at	approx.	750 nm 900 nm
Heater		6,3 V, 95 mA
Limiting resolution		600 TV lines

OPTICAL

Diagonal of quality rectangle on photoconductive layer (aspect ratio 3:4)

11 mm

Orientation of image on photoconductive layer:

The direction of the horizontal scan should be essentially parallel to the plane passing through the longitudinal tube axis and pin 4.

Spectral response, curve see Fig. 1

Faceplate thickness 1,5 mm refractive index 1,61

HEATING Indirect by a.c. or d.c.; parallel or series supply

Heater voltage V_f 6,3 V \pm 10% Heater current, at V_f = 6.3 V

When the tube is used in a series heater chain, the heater voltage must not exceed an r.m.s. value of 9,5 V when the supply is switched on.

[®] Registered trade mark for television camera tubes.

CAPACITANCES

Signal electrode to all


Cas


≈ 2 pF


This capacitance, which is effectively the output impedance of the tube, increases when the tube is inserted into the deflection unit.

MECHANICAL DATA

Dimensions in mm

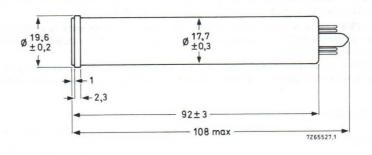

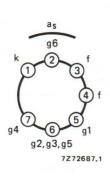

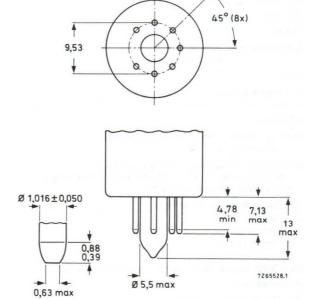

Mounting position: any

Net mass: $\approx 25 \text{ g}$

Base: JEDEC no. E7-91

ACCESSORIES

Socket

special miniature 7-pin, type 56049

or equivalent

Deflection coil unit

KV19G or equivalent

DEFLECTION

magnetic

FOCUSING

electrostatic (unipotential focusing electron optics)

LIMITING VALUES (Absolute max. rating system)

for a scanned area of 6,6 mm x 8,8 mm.

"Full-size scanning" i.e. scanning of a 6,6 mm \times 8,8 mm area of the photoconductive layer should always be applied. Underscanning, i.e. scanning of an area smaller than 6,6 mm \times 8,8 mm, may cause permanent damage to the specified full-size area.

Vas	max.	50	V *
V _g 6	max.	600	V
V_{g4}	max.	350	V
$V_{g2}, 3 + 5$	max.	350	V
$-V_{a1}$	max.	300	V
V_{g1}	max.	0	V
V_{kfp}	max.	125	V
$-V_{kfp}$	max.	10	V
lasp	max.	800	nA**
Е	max.	10 000	Ix A
T	max.	70	oC
^t h	min.	1	min
	Vg6 Vg4 Vg2, 3 + 5 -Vg1 Vg1 Vkfp -Vkfp Iasp E	$\begin{array}{cccc} V_{g6} & \text{max.} \\ V_{g4} & \text{max.} \\ V_{g2}, 3+5 & \text{max.} \\ -V_{g1} & \text{max.} \\ V_{g1} & \text{max.} \\ V_{kfp} & \text{max.} \\ -V_{kfp} & \text{max.} \\ I_{asp} & \text{max.} \\ E & \text{max.} \\ T & \text{max.} \\ \end{array}$	$\begin{array}{cccccccccccccccccccccccccccccccccccc$

** Video amplifiers should be capable of handling signal electrode currents of this magnitude without overloading the amplifier or distorting the picture.

White light, uniformly diffused over entire tube face.
 Care must be taken not to focus the solar image on the target through a lens opening wider than f: 11 to avoid instantaneous breakdown.

^{*} Newvicon tubes do not permit automatic sensitivity control by means of regulation of the signal electrode voltage. Adequate control is therefore to be achieved by other means (iris control and neutral density filters). If the tube is applied in cameras originally designed for vidicon tubes, the automatic sensitivity control circuitry should be made inoperative and the signal electrode voltage set to the value indicated in the test sheet. See General Operational Notes.

OPERATING CONDITIONS AND PERFORMANCE

Spurious signals (spots and blemishes)

for a scanned area of 6,6 mm x 8,8 mm, a faceplate temperature of 25 to 35 $^{\circ}\text{C}$ and standard TV scanning rate.

	Conditions						notes	
-	Signal electrode voltage	Vas		10	to 35	V	1	
	Grid 6 (decelerator) voltage	V_{q6}			500	V	2	
	Grid 4 (beam focus electrode) voltage	V_{q4}		35	to 55	V	3	
	Grid 2, 3 and 5 voltage	Vg2+	3+5		300	V	2,4	
	Grid 1 voltage for picture cut off (no blanking applied)	V_{q1}		-80 to	o -30	V		
	Blanking voltage, peak to peak when applied to grid 1 when applied to cathode	3			75 20			
	Flux density of adjustable alignment coil or magnet			0	to 0 ,4	mΤ		
	Performance		min.	typ.	max.			
-	Dark current (at 25 °C)			2	4	nA		
	Signal current, white light faceplate illumination 1 lx c.t. 2856 K	Is	200	260		nA		
	Decay: residual signal current 60 ms after cessation of the illumination initial signal current 200 nA			10	15	%		
	Limiting resolution, at picture centre at picture corners		500 350	600 450		TV li TV li	nes 5 nes 5	
	Average γ of transfer characteristic, see Fig. 2			≈ 1				

6

Notes

- 1. The signal electrode voltage should be adjusted to the value indicated by the tube manufacturer as printed on the envelope ($E_{sj} = \dots V$). To minimize picture sticking effects the signal electrode should be adjusted with an inaccuracy of $\pm 2 V$; the voltage drop across R_1 should be kept small. In the case of cathode blanking the voltage drop across the cathode resistor during read-out should be taken into account.
- 2. Grid 6 voltage must always be higher than grids 2 + 3 + 5 voltage.

 The recommended ratio of grid 6 voltage to grids 2 + 3 + 5 voltage for best geometry and most uniform signal output depends upon the type of coil used and will be 5 : 3 for the recommended type (see "Accessories").
- 3. Adjusted for correct electrical focus.
- 4. Grids 2 + 3 + 5 voltage should be > 250 V to provide sufficient beam current.
- 5. On EIA resolution test chart: faceplate illumination adjusted for a peak output current of 200 nA. The resolution is highly dependent on the coil used; the indicated figures are only valid for the recommended coil.

6. Conditions

The camera focused on a uniformly illuminated two-zone test pattern, the diameter of the centre zone (1) being equal to the raster height. Zone (2) being defined as the remainder of the scanned area.

Faceplate illumination adjusted to produce 200 nA signal current, beam current adjusted for correct stabilization.

Monitor set-up and contrast control adjusted for faint raster when lens of camera is capped and for non-blooming bright raster when lens of camera is uncapped.

Under above conditions the number and size of spots per 20ne visible in the monitor picture will not exceed the limits stated below. Both black and white spots must be counted, unless their contrast is less than 50% of peak white signal as observed on a waveform oscilloscope. Spots having a contrast \geq 100% are fully counted, spots having a contrast \geq 50% but \leq 100% will be considered as having half their actual size.

Spot size in % of raster height	Maximum number of spots				
> 1,2	none	none			
≤ 1,0 to 0,8	none	1			
$\leq 0.8 \text{ to } 0.4$	4	4			
$\leq 0.4 \text{ to } 0.2$	4	4			
≤0,2	*	*			
total (max.)		8			

^{*} Do not count spots of this size unless concentration causes a smudgy appearance.

Tubes are rejected for: smudges, lines, streaks, mottled, grainy or uneven background having contrast > 50%.

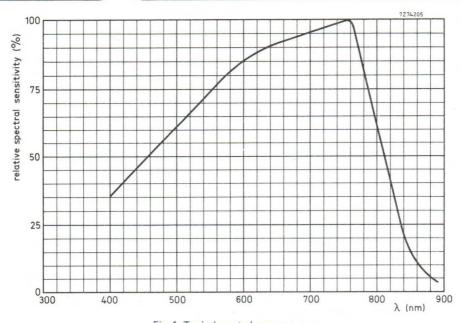
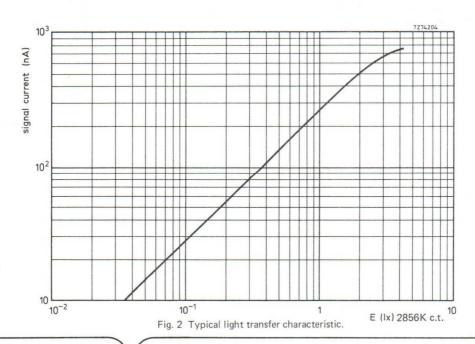


Fig. 1 Typical spectral response curve.



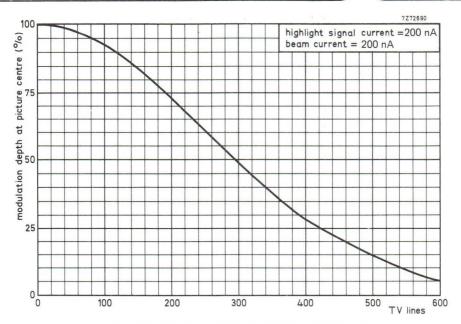


Fig. 3 Typical uncompensated square wave response curve. Focusing electrostatic and magnetic combined.

CAMERA TUBE

NEWVICON® television camera tube with a photoconductive target composed of cadmium and zinc tellurides featuring high resolution and an extremely high sensitivity extending into the near infrared region.

The XQ1276 is a 2/3 in diameter camera tube with low heater power, separate mesh, magnetic focusing and deflection, and is mechanically interchangeable with vidicons like the XQ1271 and Newvicon tubes XQ1274 and has the same pin connections.

The XQ1276 is intended for use in ultra-compact cameras for security and surveillance applications, for example, where its high sensitivity extending into the near infrared, and its high resolution, small size and low power consumption are essential.

QUICK REFERENCE DATA

magnetic
magnetic
17,7 mm
108 mm
ox. 775 nm ox. 1000 nm
6,3 V, 95 mA
650 TV lines

OPTICAL

Diagonal of quality rectangle on photoconductive layer (aspect ratio 3:4)

11 mm

Orientation of image on photoconductive layer:

The direction of the horizontal scan should be essentially parallel to the plane passing through the longitudinal tube axis and pin 4.

Spectral response curve see Fig. 1.

Face plate

thickness 1,5 mm refractive index 1,61

HEATING Indirect by a.c. or d.c.; parallel or series supply

Heater voltage V_{f} 6,3 $V \pm 10\%$

Heater current at $V_f = 6.3 \text{ V}$ 95 mA

When the tube is used in a series heater chain, the heater voltage must not exceed an r.m.s. value of 9,5 V when the supply is switched on.

[®] Registered trade mark for television camera tubes.

CAPACITANCES

Signal electrode to all


Cas


pF ≈ 2

This capacitance, which is effectively the output impedance of the tube, increases when the tube is inserted into the deflection and focusing coil unit.

MECHANICAL DATA

Dimensions in mm

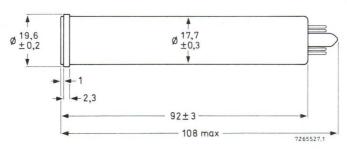

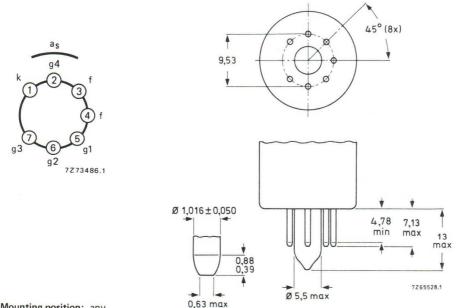

Mounting position: any

Net mass:

≈ 23 g

Base:

JEDEC no. E7-91.

ACCESSORIES

Socket

special miniature 7-pin, type 56049 or equivalent

Deflection and focusing coil unit

KV12S or equivalent

DEFLECTION

magnetic

FOCUSING

magnetic

LIMITING VALUES (Absolute maximum rating system)

for a scanned area of 6,6 mm x 8,8 mm.

"Full-size scanning" i.e. scanning of a 6,6 mm \times 8,8 mm area of the photoconductive layer should always be applied. Underscanning, i.e. scanning of an area smaller than 6,6 mm \times 8,8 mm, may cause permanent damage to the specified full-size area.

Signal electrode voltage	Vas	max.	50	V*	
Grid 4 voltage	V_{g4}	max.	750	V	
Grid 3 voltage	V_{g3}	max.	750	V	
Grid 2 voltage	V_{g2}	max.	350	V	
Grid 1 voltage,					
negative	$-V_{g1}$	max.	300	V	
positive	V_{g1}	max.	0	V	
Cathode-to-heater voltage,					
peak positive	Vkfp	max.	125	V	
peak negative	$-V_{kfp}$	max.	10	V	
Output current, peak	l _{as p}	max.	800	nA**	
Faceplate illumination	E	max.	10 000	Ix ▲	
Faceplate temperature, storage and operation	T	max.	60	oC	
Cathode heating time before drawing cathode current	th	min.	1	min	

- * Newvicon tubes do not permit automatic sensitivity control by means of regulation of the signal electrode voltage. Adequate control is therefore to be achieved by other means (iris control and neutral density filters). If the tube is applied in cameras originally designed for vidicon tubes, the automatic sensitivity control circuitry should be made inoperative and the signal electrode voltage set to the value indicated by the tube manufacturer. See General Operational Notes.
- ** Video amplifiers should be capable of handling signal-electrode currents of this magnitude without overloading the amplifier or distorting the picture.
- ▲ White light, uniformly diffused over entire tube face.

 Care must be taken not to focus the solar image on the target through a lens opening wider than f: 11 to avoid instantaneous breakdown.

OPERATING CONDITIONS AND PERFORMANCE

for a scanned area of 6,6 mm x 8,8 mm, a faceplate temperature of 25 to 35 $^{\rm o}{\rm C}$ and standard TV scanning rate.

Conditions					notes
Signal electrode voltage	V_{as}		10	to 25 V	1
Grid 4 (decelerator) voltage	V_{g4}			400 V	2
Grid 3 (beam focus electrode) voltage	V_{g3}			300 V	3
Grid 2 (accelerator) voltage	V_{g2}			300 V	
Grid 1 voltage for picture cut-off (no- blanking applied)	V_{g1}		-80 to	-35 V	
Blanking voltage, peak to peak when applied to grid 1 when applied to cathode				75 V 20 V	
Flux density at centre of focusing coil			5,01	to 5,6 m	Т
Flux density of adjustable alignment coil or magnet			0 to 0,4		Т
Performance		min.	typ.	max.	
Dark current (at 25 °C)			5	10 n/	4
Signal current, white light faceplate illumination 1 lx c.t. 2856 K	Is	250	320	n/	A
Signal current, near infrared illumination 1 lx, c.t. 2856 K infrared transmitting filter interposed (transmission curve see Fig. 2)	Is	50	80	n/	A
Decay: residual signal current 60 ms after cessation of the illumination initial signal current 200 nA	3		8	13 %	
Limiting resolution, at picture centre at picture corners		550 350	650 450		V lines 4 V lines 4
Average γ of transfer characteristic, see Fig. 3			≈ 1		

5

Spurious signals (spots and blemishes)

Notes

1. The signal electrode voltage should be adjusted to the value indicated by the tube manufacturer as printed on the envelope ($E_{Si} = \dots V$).

To minimize picture sticking effects the signal electrode voltage should be adjusted with an inaccuracy of ± 2 V; the voltage drop across R_I should be kept small. In case of cathode blanking the voltage drop across the cathode resistor during read-out should be taken into account.

- 2. Grid 4 voltage must always be higher than grid 3 voltage. The recommended ratio of grid 4 voltage to grid 3 voltage both for best geometry and most uniform signal output depends upon the type of coil unit used and will be 4: 3 for the recommended type (see 'Accessories').
- Resolution decreases with decreasing grid 3 voltage. In general grid 3 should be operated above 250 V.
- On EIA resolution test chart; faceplate illumination adjusted for a peak output current of 200 nA.

5. Conditions

The camera focused on a uniformly illuminated two-zone test pattern, the diameter of the centre zone (1) being equal to the raster height. Zone (2) being defined as the remainder of the scanned area.

Faceplate illumination adjusted to produce 200 nA signal current, beam current adjusted for correct stabilization.

Monitor set-up and contrast control adjusted for faint raster when lens of camera is capped and for non-blooming bright raster when lens of camera is uncapped.

Under above conditions the number and size of spots per zone visible in the monitor picture will not exceed the limits stated below. Both black and white spots must be counted, unless their contrast is less than 50% of peak white signal as observed on a waveform oscilloscope. Spots having a contrast ≥100% are fully counted, spots having a contrast >50% but <100% will be considered as having half their actual size.

spot size in % of raster height	maximum number of spots zone 1 zone 2			
> 1,2	none	none		
≤ 1,2 to 0,8	none	1		
$\leq 0.8 \text{ to } 0.4$	4	5		
$\leq 0.4 \text{ to } 0.2$	5	5		
≤0,2	*	*		
total (max.)	5	7		

^{*} Do not count spots of this size unless concentration causes a smudgy appearance.

Tubes are rejected for: smudges, lines, streaks, mottled, grainy or uneven background having contrast > 50%.

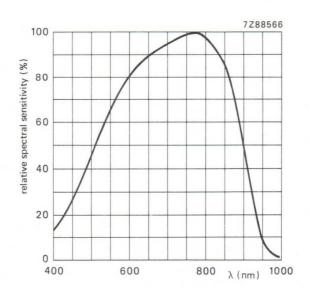
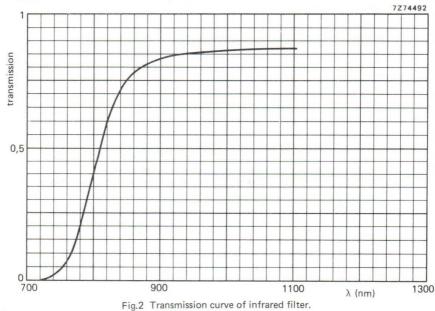


Fig.1 Typical spectral response curve.



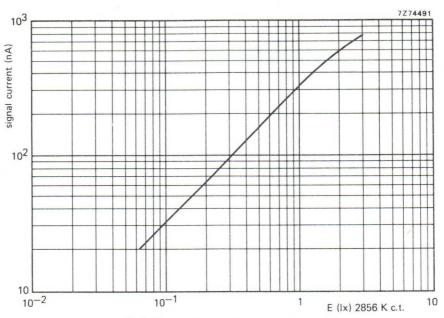


Fig.3 Typical light transfer characteristic.

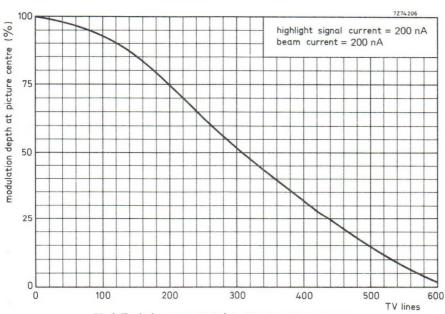


Fig.4 Typical uncompensated square wave response curve.

NEWVICON® television camera tube with a photoconductive target composed of cadmium and zinc tellurides featuring high resolution and an extremely high sensitivity extending into the near infrared region.

The XQ1277 is a 2/3 in diameter camera tube with low heater power, separate mesh, electrostatic focusing and magnetic deflection and is mechanically interchangeable with vidicons such as XQ1272. XQ1590 and newvicons XQ1275. Pin configuration is similar.

The XQ1277 is intended for use in ultra-compact cameras for security and surveillance applications, for example, where its high sensitivity extending into the near infrared, small size and low power consumption are essential.

QUICK REFERENCE DATA

Separate	mesh
----------	------

Focusing (bi-potential focusing lens)

Deflection

Diameter

Length

Spectral response, max, at

cut-off at

Heater

Limiting resolution

electrostatic magnetic

17,7 mm

108 mm

max.

approx.

approx. 775 nm 1000 nm

6,3 V, 95 mA

550 TV lines

OPTICAL

Diagonal of quality rectangle on photoconductive layer

(aspect ratio 3:4)

11 mm

Orientation of image on photoconductive layer:

The direction of the horizontal scan should be essentially parallel to the plane passing through the longitudinal tube axis and pin 4.

Face plate

thickness

1,5 mm

refractive index

1.61

Spectral response, curve see Fig. 1

HEATING Indirect by a.c. or d.c.; parallel or series supply

Heater voltage

Vf

6.3 V ± 10%

Heater current at Vf = 6,3 V

If

95 mA

When the tube is used in a series heater chain, the heater voltage must not exceed an r.m.s. value of 9,5 V when the supply is switched on.

® Registered trade mark for television camera tubes.

CAPACITANCES


Signal electrode to all

 $C_{as} \approx 2 pF$

This capacitance, which is effectively the output impedance of the tube increases when the tube is inserted into the deflection unit.

MECHANICAL DATA

Dimensions in mm

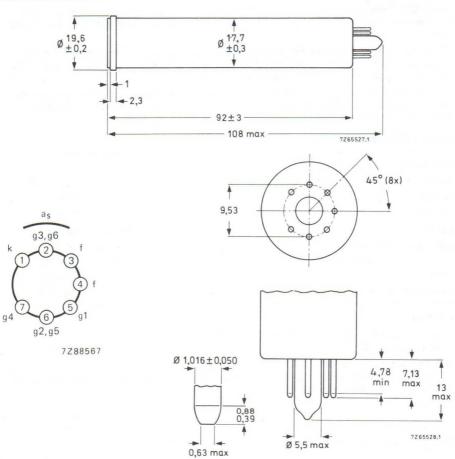

Mounting position: any

Net mass:

≈ 25 g

Base:

JEDEC no. E7-91

Camera tube XQ1277

ACCESSORIES

Socket

special miniature 7-pin, type 56049 or equivalent

Deflection coil unit

KV19G or equivalent

DEFLECTION

magnetic

FOCUSING

electrostatic (bipotential focusing electron optics)

LIMITING VALUES (Absolute maximum rating system)

for a scanned area of 6,6 mm x 8,8 mm.

"Full-size scanning" i.e. scanning of a 6,6 mm \times 8,8 mm area of the photoconductive layer should always be applied. Underscanning, i.e. scanning of an area smaller than 6,6 mm \times 8,8 mm, may cause permanent damage to the specified full-size area.

Signal electrode voltage	Vas	max.	50 V*
Grid 3 and 6 voltage	Vg3,6	max.	750 V
Grid 4 voltage	V_{g4}	max.	350 V
Grid 2 and 5 voltage	$V_{g2,5}$	max.	350 V
Grid 1 voltage, negative	$-V_{q1}$	max.	300 V
positive	V _g 1	max.	0 V
Cathode-to-heater voltage, peak positive	V_{kfp}	max.	125 V
peak negative	$-V_{kfp}$	max.	10 V
Output current, peak	lasp	max.	800 nA**
Faceplate illumination	E	max.	10 000 lx ▲
Faceplate temperature, storage and operation	Т	max.	60 °C
Cathode heating time before drawing			
cathode current	t _h	min.	1 min

- * Newvicon tubes do not permit automatic sensitivity control by means of regulation of the signal electrode voltage. Adequate control is therefore to be achieved by other means (iris control and neutral density filters). If the tube is applied in cameras originally designed for vidicon tubes, the automatic sensitivity control circuitry should be made inoperative and the signal electrode voltage set to the value indicated on the tube. See General Operational Notes.
- ** Video amplifiers should be capable of handling signal electrode currents of this magnitude without overloading the amplifier or distorting the picture.
- White light, uniformly diffused over entire tube face.
 Care must be taken not to focus the solar image on the target through a lens opening wider than f: 11 to avoid instantaneous breakdown.

OPERATING CONDITIONS AND PERFORMANCE

for a scanned area of 6,6 mm x 8,8 mm, a faceplate temperature of 25 to 35 $^{\rm o}{\rm C}$ and standard TV scanning rate.

Conditions			notes
Signal electrode voltage	Vas	10 to 25 V	1
Grid 3 and 6 (decelerator) voltage	$V_{g3,6}$	500 V	2
Grid 4 (beam focus electrode) voltage	V_{g4}	60 to 85 V	3
Grid 2 and 5 voltage	$V_{g2,5}$	300 V	2, 4
Grid 1 voltage for picture cut-off (no blanking applied)	V_{g1}	−80 to −30 V	
Blanking voltage, peak to peak when applied to grid 1 when applied to cathode		75 V 20 V	
Flux density of adjustable alignment coils or magnets		0 to 0,4 mT	

Performance

		min.	typ.	max.	
Dark current (at 25 °C)			5	10 nA	
Signal current, white light faceplate illumination 1 lx c.t. 2856 K	Is	250	320	nA	
Signal current, near infrared illumination 1 lx, c.t. 2856 K infrared transmitting filter imposed (transmission curve, see Fig. 2)	Is	50	80	nA	
Decay: residual signal current 60 ms after cessation of the illumination initial signal current 200 nA			10	15 %	
Limiting resolution at picture centre at corner of picture		500 400	550 450	TV lines TV lines	5 5
Average γ of transfer characteristic, see Fig. 3			≈ 1		
Spurious signals (spots and blemishes)					6

Notes

- 1. The signal electrode voltage should be adjusted to the value indicated by the tube manufacturer as printed on the envelope ($E_{sj} = \dots V$). To minimize picture sticking effects the signal electrode should be adjusted with an inaccuracy of $\pm 2 V$; the voltage drop across R_l should be kept small. In the case of cathode blanking the voltage drop across the cathode resistor during read-out should be taken into account.
- 2. Grids 3 + 6 voltage must always be higher than grids 2 + 5 voltage.

 The recommended ratio of grids 3 + 6 voltage to grids 2 + 5 voltage for best geometry and most uniform signal output depends upon the type of coil used and will be 5 : 3 for the recommended types (see "Accessories").
- Adjusted for correct electrical focus, This voltage range is higher than that of unipotential electrostatic focus, such as XQ1275.
- 4. Grids 2 + 5 voltage should be > 250 V to provide sufficient beam current.
- On EIA resolution test chart: faceplate illumination adjusted for a peak output current of 200 nA.
 The resolution is highly dependent on the coil used; the indicated figures are only valid for the recommended coil.

6. Conditions

The camera focused on a uniformly illuminated two-zone test pattern, the diameter of the centre zone (1) being equal to the raster height. Zone (2) being defined as the remainder of the scanned area.

Faceplate illumination adjusted to produce 200 nA signal current, beam current adjusted for correct stabilization.

Monitor set-up and contrast control adjusted for faint raster when lens of camera is capped and for non-blooming bright raster when lens of camera is uncapped.

Under above conditions the number and size of spots per zone visible in the monitor picture will not exceed the limits stated below. Both black and white spots must be counted, unless their contrast is less than 50% of peak white signal as observed on a waveform oscilloscope. Spots having a contrast \geq 100% are fully counted, spots having a contrast \geq 50% but < 100% will be considered as having half their actual size.

Spot size in	The state of the s	mber of spots
% of raster height	zone 1	zone 2
> 1,2	none	none
≤ 1,2 to 0,8	none	1
\leq 0,8 to 0,4	4	5
\leq 0,4 to 0,2	5	5
≤ 0,2	*	*
total (max.)	5	7

* Do not count spots of this size unless concentration causes a smudgy appearance. Tubes are rejected for: smudges, lines, streaks, mottled, grainy or uneven background having contrast > 50%. 103

10²

10-2

signal current (nA)

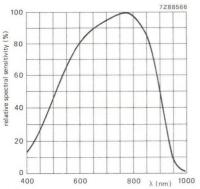


Fig. 1 Typical spectral response curve.



7Z86671

10

E (Ix) 2856 K c.t.

Fig. 3 Typical light transfer characteristic.

10-1

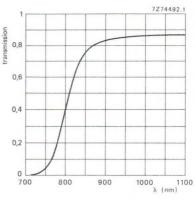


Fig. 2 Transmission curve of infrared filter.

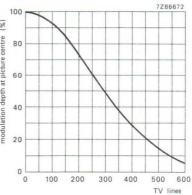


Fig. 4 Typical uncompensated square wave response curve. Highlight signal current 200 nA; beam current 200 nA.
Focusing electrostatic and magnetic combined.

NEWVICON® television camera tube with a photoconductive target composed of cadmium and zinc tellurides featuring high resolution and an extremely high sensitivity.

The XQ1278 is a 2/3 in diameter camera tube with low heater power, separate mesh, electrostatic focusing and magnetic deflection and is mechanically interchangeable with vidicons such as XQ1272, XQ1590 and newvicons XQ1275. Pin configuration is similar.

The XQ1278 is intended for use in ultra-compact cameras for security and surveillance applications, for example, where its high sensitivity, small size and low power consumption are essential.

QUICK REFERENCE DATA

0			
Sepa	rate	mesh	١

Focusing (bi-potential focusing lens)

Deflection

Diameter

Length

Spectral response, max, at

cut-off at

Heater

Limiting resolution

electrostatic

magnetic

17.7 mm

max. 108 mm

approx. 750 nm

approx. 900 nm

6,3 V, 95 mA

550 TV lines

OPTICAL

Diagonal of quality rectangle on photoconductive layer

(aspect ratio 3:4)

11 mm

Orientation of image on photoconductive layer:

The direction of the horizontal scan should be essentially parallel to the plane passing through the longitudinal tube axis and pin 4.

Face plate

thickness

refractive index

1.5 mm

1,61

Spectral response, curve see Fig. 1

HEATING Indirect by a.c. or d.c.; parallel or series supply

Heater voltage

Vf 6.3 V ± 10%

If Heater current at Vf = 6,3 V

When the tube is used in a series heater chain, the heater voltage must not exceed an r.m.s. value of 9,5 V when the supply is switched on.

[®] Registered trade mark for television camera tubes.

CAPACITANCES


Signal electrode to all


 $C_{as} \approx 2 pF$


This capacitance, which is effectively the output impedance of the tube increases when the tube is inserted into the deflection unit.


MECHANICAL DATA

Dimensions in mm

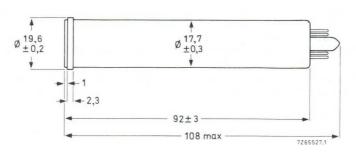

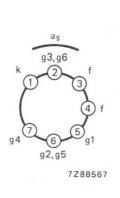

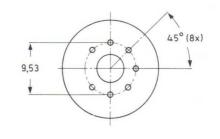

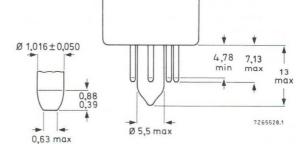

Mounting position: any

Net mass:

≈ 25 g

Base:

JEDEC no. E7-91

ACCESSORIES

Socket

special miniature 7-pin, type 56049 or equivalent

Deflection coil unit

KV19G or equivalent

DEFLECTION

magnetic

FOCUSING

electrostatic (bipotential focusing electron optics)

LIMITING VALUES (Absolute maximum rating system)

for a scanned area of 6.6 mm x 8.8 mm.

"Full-size scanning" i.e. scanning of a 6,6 mm \times 8,8 mm area of the photoconductive layer should always be applied. Underscanning, i.e. scanning of an area smaller than 6,6 mm \times 8,8 mm, may cause permanent damage to the specified full-size area.

Signal electrode voltage	Vas	max.	50	V*
Grid 3 and 6 voltage	Vg3,6	max.	750	V
Grid 4 voltage	V_{g4}	max.	350	V
Grid 2 and 5 voltage	$V_{g2,5}$	max.	350	V
Grid 1 voltage, negative	$-V_{q1}$	max.	300	V
positive	Vg1	max.	0	V
Cathode-to-heater voltage, peak positive	V_{kfp}	max.	125	V
peak negative	$-V_{kfp}$	max.	10	V
Output current, peak	lasp	max.	800	nA**
Faceplate illumination	E	max.	10 000	1x [*]
Faceplate temperature, storage and operation	Т	max.	70	oC
Cathode heating time before drawing cathode current	th	min.	1	min

- * Newvicon tubes do not permit automatic sensitivity control by means of regulation of the signal electrode voltage. Adequate control is therefore to be achieved by other means (iris control and neutral density filters). If the tube is applied in cameras originally designed for vidicon tubes, the automatic sensitivity control circuitry should be made inoperative and the signal electrode voltage set to the value indicated on the tube. See General Operational Notes.
- ** Video amplifiers should be capable of handling signal electrode currents of this magnitude without overloading the amplifier or distorting the picture.
- White light, uniformly diffused over entire tube face.

 Care must be taken not to focus the solar image on the target through a lens opening wider than f:11 to avoid instantaneous breakdown.

OPERATING CONDITIONS AND PERFORMANCE

for a scanned area of 6,6 mm x 8,8 mm, a faceplate temperature of 25 to 35 $^{\rm o}{\rm C}$ and standard TV scanning rate.

	Conditions						notes
-	Signal electrode voltage	Va	S	10	to 35	V	1
	Grid 3 and 6 (decelerator) voltage	Vg	3,6		500	V	2
	Grid 4 (beam focus electrode) voltage	Vg		60	to 85	V	3
	Grid 2 and 5 voltage	Vg	2,5		300	V	2, 4
	Grid 1 voltage for picture cut-off (no blanking applied)	Vg		−80 t	o -30	V	
	Blanking voltage, peak to peak when applied to grid 1 when applied to cathode				75 20		
	Flux density of adjustable alignment coil or magnet			0	to 0,4	mΤ	
	Performance		min.	typ.	max.		
-	Dark current (at 25 °C)			2	4	nA	
	Signal current, white light faceplate illumination 1 lx c.t. 2856 K	Is	200	260		nA	
	Decay: residual signal current 60 ms after cessation of the illumination initial signal current 200 nA			10	15	%	
	Limiting resolution, at picture centre at corner of picture		500 400	550 450		TV lines	5 5
	Average γ of transfer characteristic, see Fig. 2			≈ 1			
	Spurious signals (spots and blemishes)						6

Notes

- The signal electrode voltage should be adjusted to the value indicated by the tube manufacturer as printed on the envelope (E_{sj} = ... V). To minimize picture sticking effects the signal electrode should be adjusted with an inaccuracy of ± 2 V; the voltage drop across R₁ should be kept small. In the case of cathode blanking the voltage drop across the cathode resistor during read-out should be taken into account.
- Grids 3 + 6 voltage must always be higher than grids 2 + 5 voltage.
 The recommended ratio of grids 3 + 6 voltage to grids 2 + 5 voltage for best geometry and most uniform signal output depends upon the type of coil used and will be 5 : 3 for the recommended types (see "Accessories").
- Adjusted for correct electrical focus. This voltage range is higher than that of unipotential electrostatic focus, such as XQ1275.
- 4. Grids 2 + 5 voltage should be > 250 V to provide sufficient beam current.
- On EIA resolution test chart: faceplate illumination adjusted for a peak output current of 200 nA.
 The resolution is highly dependent on the coil used; the indicated figures are only valid for the
 recommended coil.

6. Conditions

The camera focused on a uniformly illuminated two-zone test pattern, the diameter of the centre zone (1) being equal to the raster height. Zone (2) being defined as the remainder of the scanned area.

Faceplate illumination adjusted to produce 200 nA signal current, beam current adjusted for correct stabilization.

Monitor set-up and contrast control adjusted for faint raster when lens of camera is capped and for non-blooming bright raster when lens of camera is uncapped.

Under above conditions the number and size of spots per zone visible in the monitor picture will not exceed the limits stated below. Both black and white spots must be counted, unless their contrast is less than 50% of peak white signal as observed on a waveform oscilloscope. Spots having a contrast \geq 100% are fully counted, spots having a contrast \geq 50% but < 100% will be considered as having half their actual size.

Spot size in % of raster height	Maximum nu zone 1	mber of spots zone 2
> 1,2	none	none
≤ 1,0 to 0,8	none	1
\leq 0,8 to 0,4	4	4
\leq 0,4 to 0,2	4	4
≤ 0,2	*	*
total (max.)	8	

^{*} Do not count spots of this size unless concentration causes a smudgy appearance.

Tubes are rejected for: smudges, lines, streaks, mottled, grainy or uneven background having contrast > 50%.

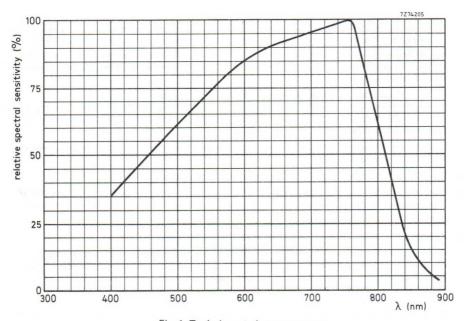


Fig. 1 Typical spectral response curve.

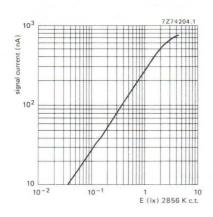


Fig. 2 Typical light transfer characteristic.

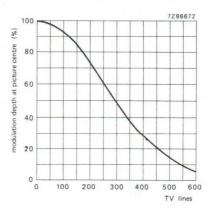


Fig. 3 Typical uncompensated square wave response curve. Highlight signal current 200 nA; beam current 200 nA.
Focusing electrostatic and magnetic combined.

Newvicon[®] camera tube, mechanically and electron-optically identical to the XQ1274, the major difference being the radiation resistant (anti-browning) faceplate.

The XQ1380 is intended for use in compact cameras which are subjected to high doses of ionizing radiation.

RADIATION RESISTANT FACEPLATE

The faceplate of the XQ1380 is made of a special type of glass and does not turn brown under the influence of high doses of gamma radiation.

- Maximum dose rate per hour: 5 x 10⁵ Röntgen/hour
- Maximum cumulative dose: 5 x 10⁷ Röntgen
- Maximum decrease of transmission of faceplate:

Maximum decrease	After a cumulative dose of
3%	10 ⁵ Röntgen
10%	10 ⁶ Röntgen
15%	5 x 10 ⁷ Röntgen

- Maximum increase of dark current at 25 °C after a cumulative dose of 5 x 10⁷ Röntgen: 75%

SENSITIVITY

The typical sensitivity of the XQ1380 is approximately 10% less than for the XQ1274.

For all other information see data of XQ1274.

[®] Registered trade mark for television camera tubes.

Newvicon $^{\circledR}$ camera tube, mechanically and electron-optically identical to the XQ1275, the major difference being the radiation resistant (anti-browning) faceplate.

The XQ1381 is intended for use in compact cameras which are subjected to high doses of ionizing radiation.

RADIATION RESISTANT FACEPLATE

The faceplate of the XQ1381 is made of a special type of glass and does not turn brown under the influence of high doses of gamma radiation.

- Maximum dose rate per hour: 5 x 10⁵ Röntgen/hour
- Maximum cumulative dose: 5 x 10⁷ Röntgen
- Maximum decrease of transmission of faceplate:

Maximum decrease	After a cumulative dose of
3%	10 ⁵ Röntgen
10%	10 ⁶ Röntgen
15%	5 x 10 ⁷ Röntgen

- Maximum increase of dark current at 25 °C after a cumulative dose of 5 x 10⁷ Röntgen: 75%

SENSITIVITY

The typical sensitivity of the XQ1381 is approximately 10% less than for the XQ1275.

For all other information see data of XQ1275.

[®] Registered trade mark for television camera tubes.

NEWVICON[®] television camera tube with a photoconductive target composed of cadmium and zinc tellurides featuring high resolution and an extremely high sensitivity.

The XQ1440 is a 1 in diameter camera tube with low heater power, separate mesh, magnetic focusing and deflection, and is mechanically interchangeable with vidicons like the XQ1240 and has the same pin connections.

The XQ1440 is intended for use in cameras for security and surveillance applications, for example, where its high sensitivity and resolution are essential.

QUICK REFERENCE DATA

Separate mesh			
Focusing		magnetic	
Deflection		magnetic	
Diameter		25,9	mm
Length		159	mm
Spectral response, max. at	approx.	750	nm
cut-off at	approx.	900	nm
Heater		6,3 V, 95	mA
Limiting resolution		750	TV lines

OPTICAL

Diagonal of quality rectangle on photoconductive layer (aspect ratio 3 : 4)

16 mm

Orientation of image on photoconductive layer:

The direction of the horizontal scan should be essentially parallel to the plane passing through the longitudinal tube axis and the short index pin.

Spectral response curve see Fig. 1

Faceplate

thickness 2,5 mm refractive index 1,61

HEATING

Indirect by a.c. or d.c.; parallel or series supply

Heater voltage $V_f \qquad 6.3 \ V \pm 10\%$ Heater current, at V_f = 6,3 V

When the tube is used in a series heater chain, the heater voltage must not exceed an r.m.s. value of 9,5 V when the supply is switched on.

[®] Registered Trade Mark for television camera tubes.

CAPACITANCES


Signal electrode to all


 $C_{as} \approx 4.6 pF$


This capacitance, which is effectively the output impedance of the tube, increases when the tube is inserted into the deflection and focusing coil unit.


MECHANICAL DATA

Dimensions in mm

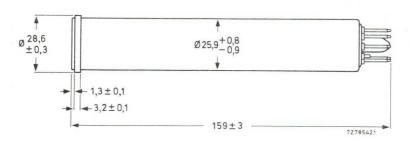

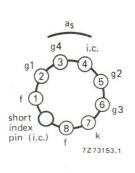

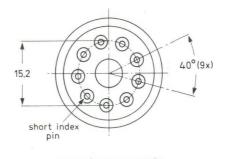

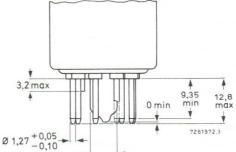

Ø 6,7 max

Base:

JEDEC no. E8-11

Mounting position: any

Net mass:

≈ 62 g

Camera tube XQ1440

ACCESSORIES

Socket

56098

or equivalent

Deflection and focusing coil unit

KV9G or equivalent

DEFLECTION

magnetic

FOCUSING

magnetic

LIMITING VALUES (Absolute maximum rating system)

for a scanned area of 9,6 mm x 12,8 mm.

"Full-size scanning" i.e. scanning of a 9,6 mm \times 12,8 mm area of the photoconductive layer should always be applied. Underscanning, i.e. scanning of an area smaller than 9,6 mm \times 12,8 mm, may cause permanent damage to the specified full-size area.

Signal electrode voltage	Vas	max.	50	V *
Grid 4 voltage	V_{g4}	max.	1000	V
Grid 3 voltage	V_{g1}	max.	1000	V
Grid 2 voltage	V_{g2}	max.	750	V
Grid 1 voltage, negative	$-V_{q1}$	max.	300	V
positive	V_{g1}	max.	0	V
Cathode-to-heater voltage, peak positive	V_{kfp}	max.	125	V
peak negative	$-V_{kfp}$	max.	10	V
Output current, peak	lasp	max.	800	nA**
Faceplate illumination	E	max.	10 000	Ix 📥
Faceplate temperature, storage and operation	T	max.	70	oC
Cathode heating time before drawing cathode				
current	th	min.	1	min

- * Newvicon tubes do not permit automatic sensitivity control by means of regulation of the signal electrode voltage. Adequate control is therefore to be achieved by other means (iris control and neutral density filters). If the tube is applied in cameras originally designed for vidicon tubes, the automatic sensitivity control circuitry should be made inoperative and the signal electrode voltage set to the value indicated by the tube manufacturer. See General Operational Notes.
- ** Video amplifiers should be capable of handling signal electrode currents of this magnitude without overloading the amplifier or distorting the picture.
- White light, uniformly diffused over entire tube face. Care must be taken not to focus the solar image on the target through a lens opening wider than f: 11 to avoid instantaneous breakdown.

OPERATING CONDITIONS AND PERFORMANCE

for a scanned area of 9,6 mm x 12,8 mm, a faceplate temperature of 25 to 35 $^{\rm o}{\rm C}$ and standard TV scanning rate.

	Conditions				no	tes
-	Signal electrode voltage	V_{as}		10	to 35 V	1
	Grid 4 (decelerator) voltage	V_{g4}			500 V	2
	Grid 3 (beam focus electrode) voltage	V_{g3}			300 V	3
	Grid 2 (accelerator) voltage	V_{g2}			300 V	
	Grid 1 voltage for picture cut-off (no blanking applied)	V_{g1}		-100 to	-45 V	
	Blanking voltage, peak to peak when applied to grid 1 when applied to cathode				75 V 20 V	
	Flux density at centre of focusing coil			3,81	o 4,4 mT	
	Flux density of adjustable alignment coil or magnet			0 1	o 0,4 mT	
	Performance		min.	typ.	max.	
-	Dark current (at 25 °C)			3,5	7 nA	
	Signal current, white light faceplate illumination 0,5 lx c.t. 2856 K	I _s	200	240	nA	
-	Decay: residual signal current 60 ms after cessation of the illumination (c.t. 2856 K), initial signal current 200 nA			17	25%	
	Limiting resolution, at picture centre at picture corners		650 400	750 500	TV lines	
	Average γ of transfer characteristic			≈ 1		
	Spurious signals (spots and blemishes)					5

Notes

- The signal electrode voltage should be adjusted to the value indicated by the tube manufacturer as printed on the envelope (E_{Si} = . . . V).
 - To minimize picture sticking effects the signal electrode voltage should be adjusted with an inaccuracy of \pm 2 V; the voltage drop across R_I should be kept small. In the case of cathode blanking the voltage drop across the cathode resistor during read-out should be taken into account.
- 2. Grid 4 voltage must always be higher than grid 3 voltage. The recommended ratio of grid 4 voltage to grid 3 voltage both for best geometry and most uniform signal output depends upon the type of coil unit used and will be 5:3 for the recommended type (see "Accessories").
- 3. Resolution decreases with decreasing grid 3 voltage. In general grid 3 should be operated above 250 V.
- 4. On EIA resolution test chart: faceplate illumination adjusted for a peak output current of 200 nA.
- 5. Conditions

The camera focused on a uniformly illuminated two-zone test pattern, the diameter of the centre zone (1) being equal to the raster height. Zone (2) being defined as the remainder of the scanned area. Faceplate illumination adjusted to produce 200 nA signal current, beam current adjusted for correct stabilization.

Monitor set-up and contrast control adjusted for faint raster when lens of camera is capped and for non-blooming bright raster when lens of camera is uncapped.

Under above conditions the number and size of spots per zone visible in the monitor picture will not exceed the limits stated below. Both black and white spots must be counted, unless their contrast is less than 50% of peak white signal as observed on a waveform oscilloscope. Spots having a contrast \geq 100% are fully counted, spots having a contrast \geq 50% but < 100% will be considered as having half their actual size.

Spot size in % of raster height	Maximum nu zone 1	mber of spots
>12		
> 1,2	none	none
≤ 1,0 to 0,8	none	1
\leq 0,8 to 0,4	4	4
\leq 0,4 to 0,2	4	4
≤0,2	*	*
total (max.)		8

^{*} Do not count spots of this size unless concentration causes a smudgy appearance.

Tubes are rejected for: smudges, lines, streaks, mottled, grainy or uneven background having contrast > 50%.

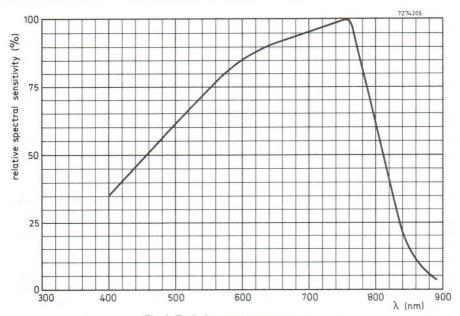


Fig. 1 Typical spectral response curve.

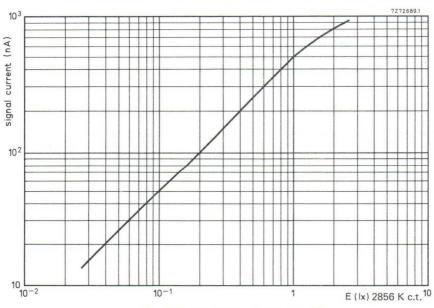


Fig. 2 Typical light transfer characteristic.

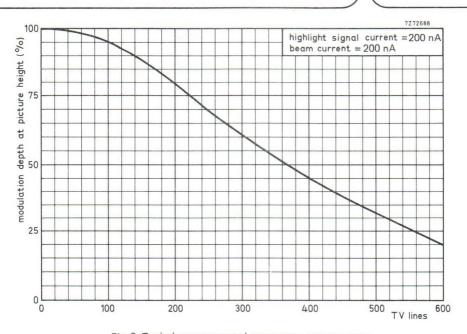


Fig. 3 Typical uncompensated square wave response curve.

NEWVICON[®] television camera tube with a photoconductive target composed of cadmium and zinc tellurides featuring high resolution and an extremely high sensitivity.

The XQ1442 is a 1 in diameter camera tube with low heater power, separate mesh, magnetic focusing and deflection, a fibre optic faceplate, and is mechanically and electrically interchangeable with the Newvicon tube type XQ1440.

The XQ1442 is intended for use in low light level cameras, in which it is coupled directly to a fibre optic output window of an image intensifier, for scientific, industrial, surveillance and security applications.

QUICK REFERENCE DATA

Separate mesh			
Focusing		magnetic	
Deflection		magnetic	
Diameter		25,9	mm
Length		159	mm
Faceplate		fibre opti	С
Spectral response, max. at	approx.	750	nm
cut-off at	approx.	900	nm
Heater		6,3 V, 95	mA
Limiting resolution		650	TV lines

OPTICAL

Diagonal of quality rectangle on photoconductive layer (aspect ratio 3 : 4)

16 mm

Orientation of image on photoconductive layer

The direction of the horizontal scan should be essentially parallel to the plane passing through the longitudinal tube axis and the short index pin.

Spectral response curve see Fig. 1

Faceplate

thickness refractive index

3,0 mm

1,00

HEATING

Indirect by a.c. or d.c. parallel or series supply

Heater voltage

Vf

6,3 V ± 10%

Heater current, at V_f = 6,3 V

lf

95 mA

When the tube is used in a series heater chain, the heater voltage must not exceed an r.m.s. value of 9,5 V when the supply is switched on.

[®]Registered trade mark for television camera tubes.

CAPACITANCES


Signal electrode to all


 $C_{as} \approx 4.6 pF$

This capacitance, which is effectively the output impedance of the tube, increases when the tube is inserted into the deflection and focusing coil unit.

MECHANICAL DATA

Dimensions in mm

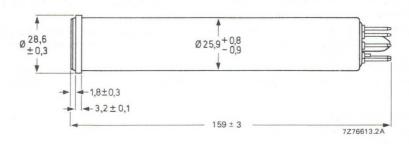

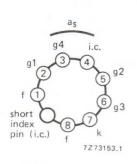

15.2 40°(9x)
short index
pin

3.2 max 9,35 0 min min max 7261972.3

Base:

JEDEC no. E8-11

Mounting position: any

Net mass:

≈ 62 g

ACCESSORIES

Socket

56098

or equivalent

Deflection and focusing coil unit

KV9G or equivalent

DEFLECTION

magnetic

FOCUSING

magnetic

LIMITING VALUES (Absolute maximum rating system) for a scanned area of 9,6 mm x 12,8 mm.

'Full-size scanning' i.e. scanning of a $9.6 \text{ mm} \times 12.8 \text{ mm}$ area of the photoconductive layer should always be applied. Underscanning i.e. scanning of an area smaller than $9.6 \text{ mm} \times 12.8 \text{ mm}$, may cause permanent damage to the specified full-size area.

Signal electrode voltage	Vas	max	50	V*
Grid 4 voltage	V_{g4}	max	1000	V
Grid 3 voltage	V_{g3}	max	1000	V
Grid 2 voltage	V_{g2}	max	750	V
Grid 1 voltage, negative	$-V_{g1}$	max	300	V
positive	V_{g1}	max	0	V
Cathode-to-heater voltage, peak positive	Vkfp	max	125	V
peak negative	$-V_{kfp}$	max	10	V
Output current, peak	lasp	max	800	nA**
Faceplate illumination	E	max	10 000	l× 📥
Faceplate temperature, storage and operation	T	max	70	oC
Cathode heating time before drawing cathode current	th	min	1	min

^{*} Newvicon tubes do not permit automatic sensitivity control by means of regulation of the signal electrode voltage. Adequate control is therefore to be achieved by other means (iris control and neutral density filters). If the tube is applied in cameras originally designed for vidicon tubes, the automatic sensitivity control circuitry should be made inoperative and the signal electrode voltage set to the value indicated by the tube manufacturer. See General Operational Notes.

^{**} Video amplifiers should be capable of handling signal electrode currents of this magnitude without overloading the amplifier or distorting the picture.

[▲] White light, uniformly diffused over entire tube face. Care must be taken not to focus the solar image on the target through a lens opening wider than f:11 to avoid instantaneous breakdown.

OPERATING CONDITIONS AND PERFORMANCE

for a scanned area of 9,6 mm x 12,8 mm, a faceplate temperature of 25 to 35 $^{\rm o}{\rm C}$ and standard TV scanning rate.

Conditions				notes
Signal electrode voltage	Vas	10	to 25 V	1
Grid 4 (decelerator) voltage	V _{g4}	, ,	500 V	2
Grid 3 (beam focus electrode) voltage	V _{g3}		300 V	3
Grid 2 (accelerator) voltage	V_{g2}		300 V	
Grid 1 voltage picture cut-off (no blanking applied)	V_{g1}	-100 to	o -45 V	
Blanking voltage, peak to peak when applied to grid 1 when applied to cathode	3.		75 V 20 V	
Flux density at centre of focusing coil		3,8	to 4,4 mT	
Flux density of adjustable alignment coil or magnet		0	to 0,4 mT	
Performance	mir	i. typ.	max.	
Dark current (at 25 °C)	-	7	16 nA	
Signal current, white light faceplate illuminance 0,5 lx, c.t. 2856 K	I _s 140	180	nA	
Decay: residual signal current 60 ms after cessation of the illumination (c.t. 2856 K), initial signal current 200 nA		17	22 %	
Limiting resolution, at picture centre at picture corners	550	650 450		ines 4
Average γ of transfer characteristic		≈ 1		
Spurious signals (spots and blemishes)		1		5

Notes

- 1. The signal electrode voltage should be adjusted to the value indicated by the tube manufacturer as printed on the envelope ($E_{si} = ... V$).
 - To minimize picture sticking effects the signal electrode voltage should be adjusted with an inaccuracy of \pm 2 V, the voltage drop across R_I should be kept small. In the case of cathode blanking, the voltage drop across the cathode resistor during read-out should be taken into account.
- 2. Grid 4 voltage must always be higher than grid 3 voltage. The recommended ratio of grid 4 voltage to grid 3 voltage both for best geometry and most uniform signal output depends upon the type of coil unit used and will be 5:3 for the recommended types (see "Accessories").
- 3. Resolution decreases with decreasing grid 3 voltage. In general grid 3 should be operated above 250 V.
- 4. On EIA resolution test chart; faceplate illumination adjusted for a peak output current of 200 nA.

5. Conditions

The camera focused on a uniformly illuminated two-zone test pattern, the diameter of the centre zone (1) being equal to the raster height. Zone (2) being defined as the remainder of the scanned area.

Faceplate illumination adjusted to produce 200 nA signal current, beam current adjusted for correct stabilization.

Monitor set-up and contrast control adjusted for faint raster when lens of camera is capped and for non-blooming bright raster when lens of camera is uncapped.

Under the above conditions the number and size of spots per zone visible in the monitor picture, under both capped and uncapped conditions will not exceed the limits stated below. Both black and white spots must be counted unless their contrast is less than 10% of peak white signal as observed on a waveform oscilloscope.

Background lines, originating from the structure of the fibre optic faceplate will have a contrast of ≤ 25% of peak white signal and will not exceed a width of 0.4%, or a length of 6% of picture height.

	spot size in	maximum nu	mber of spots
	% of raster height	zone 1	zone 2
white and black	> 1,4	none	none
spots	≤ 1,4 to 0,8	none	1
	≤ 0,8 to 0,6	2	3
white spots	≤ 0,6 to 0,2	4	6
	≤ 0,2	*	*
black spots	≤ 0,6 to 0,4 ≤ 0,4	8	10 *

^{*} Do not count spots of this size unless concentration causes a smudgy appearance.

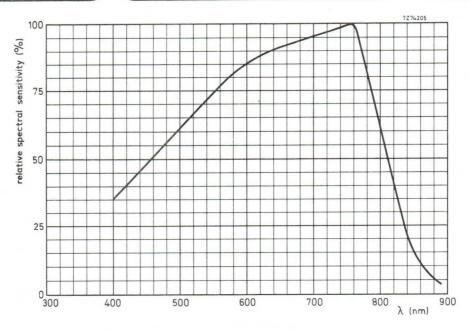


Fig.1 Typical spectral response curve.

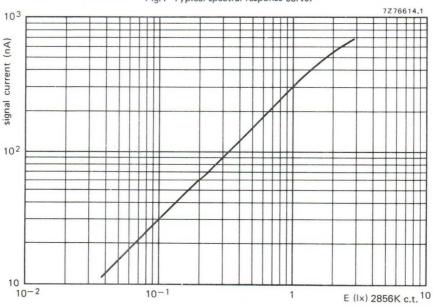


Fig.2 Typical light transfer characteristic.

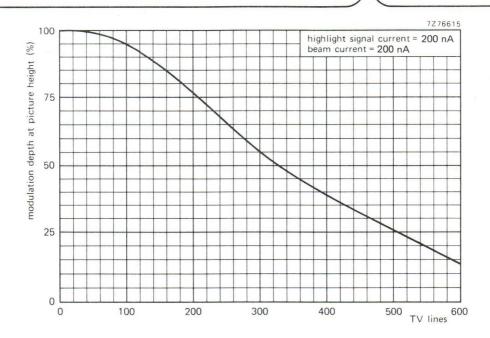


Fig.3 Typical uncompensated square-wave response curve.

NEWVICON $^{\circledR}$ television camera tube with a photoconductive target composed of cadmium and zinc tellurides featuring high resolution and an extremely high sensitivity extending into the near infrared region.

The XQ1443 is a 1 in diameter camera tube with low heater power, separate mesh, magnetic focusing and deflection, and is mechanically interchangeable with vidicons like the XQ1240/XQ1241 and Newvicon tube XQ1440 and has the same pin connections.

The XQ1443 is intended for use in ultra-sensitive cameras for security and surveillance applications, for example, where its high sensitivity extending into the near infrared, and its high resolution, small size and low power consumption are essential.

OUICK REFERENCE DATA

Separate mesh

Focusing	magnetic	
Deflection	magnetic	
Diameter	25,9 mm	
Length	159 mm	
Spectral response, max. at	approx. 775 nm	
Spectral response, cut-off at	approx. 1000 nm	

Spectral response, cut-off at

Heater 6,3 V, 95 mA Limiting resolution 750 TV lines

OPTICAL

Diagonal of quality rectangle on photoconductive layer

(aspect ratio 3:4)

16 mm

Orientation of image on photoconductive layer:

The direction of the horizontal scan should be essentially parallel to the plane passing through the longitudinal tube axis and the short index pin.

Faceplate

thickness 2,5 mm refractive index 1,61

Spectral response curve see Fig. 1

HEATING

Indirect by a.c. or d.c.; parallel or series supply

Heater voltage $V_f \qquad \qquad 6,3 \ V \pm 10\%$ Heater current at V_f = 6,3 V $\qquad \qquad I_f \qquad \qquad 95 \ mA$

When the tube is used in a series heater chain, the heater voltage must not exceed an r.m.s. value of 9,5 V when the supply is switched on.

® Registered trade mark for television camera tubes.

CAPACITANCES


Signal electrode to all


 $C_{as} \approx 4.6 \text{ pF}$


This capacitance, which is effectively the output impedance of the tube, increases when the tube is inserted in the deflection and focusing coil unit.

MECHANICAL DATA

Dimensions in mm

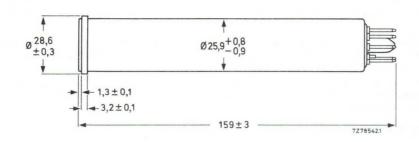

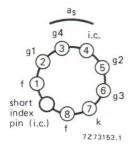

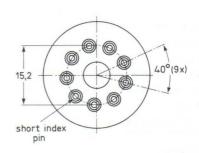


BASE PIN CONNECTIONS (Bottom view)

Pin 1	heater
Pin 2	grid 1
Pin 3	grid 4
Pin 4	i.c. (internally connected)
Pin 5	grid 2
Pin 6	grid 3
Pin 7	cathode
Pin 8	heater
Short index pin	i.c.
Flange	target (signal electrode)



Net mass $\approx 70 \text{ g}$

Base JEDEC No. E8-11

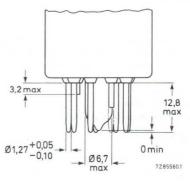

XQ1443

ACCESSORIES

Socket

type 56098 or equivalent

Deflection and focusing coil unit

KV9G or equivalent

DEFLECTION

magnetic

FOCUSING

magnetic

LIMITING VALUES (Absolute maximum rating system)

for a scanned area of 9,6 mm x 12,8 mm.

'Full-size scanning' i.e. scanning of a $9.6 \text{ mm} \times 12.8 \text{ mm}$ area of the photoconductive layer should always be applied. Underscanning, i.e. scanning of an area smaller than $9.6 \text{ mm} \times 12.8 \text{ mm}$, may cause permanent damage to the specified full-size area.

Signal electrode voltage	Vas	max.	50	V *
Grid 4 voltage	V_{g4}	max.	1000	V
Grid 3 voltage	V_{g3}	max.	1000	V
Grid 2 voltage	V_{g2}	max.	750	V
Grid 1 voltage, negative	$-V_{g1}$	max.	300	V
Grid 1 voltage, positive	V_{g1}	max.	0	V
Cathode-to-heater voltage, peak positive	V_{kfp}	max.	125	V
Cathode-to-heater voltage, peak negative	$-V_{kfp}$	max.	10	V
Output current, peak	lasp	max.	800	nA**
Faceplate illumination	E	max.	10 000	lx ▲
Faceplate temperature, storage and operation	T	max.	60	oC
Cathode heating time before drawing cathode current	th	min.	1	min

- * Newvicon tubes do not permit automatic sensitivity control by means of regulation of the signal electrode voltage. Adequate control is therefore to be achieved by other means (iris control and neutral density filters). If the tube is applied in cameras originally designed for vidicon tubes, the automatic sensitivity control circuitry should be made inoperative and the signal electrode voltage set to the value indicated by the tube manufacturer. See General Operational Notes.
- ** Video amplifiers should be capable of handling signal-electrode currents of this magnitude without overloading the amplifier or distorting the picture.
- White light, uniformly diffused over entire tube face.

 Care must be taken not to focus the solar image on the target through a lens opening wider than f: 11 to avoid instantaneous breakdown.

OPERATING CONDITIONS AND PERFORMANCE

for a scanned area of 9,6 mm \times 12,8 mm and a faceplate temperature of 25 to 35 $^{\rm o}{\rm C}$ and standard TV scanning rate.

Conditions				n	otes
Signal electrode voltage		V_{as}	10	to 25 V	1
Grid 4 (decelerator) voltage		V_{g4}		500 V	2
Grid 3 (beam focus electrode) voltage		V_{g3}		300 V	3
Grid 2 (accelerator) voltage		V _{g2}		300 V	
Grid 1 voltage for picture cut-off (no blanking applied)		V_{g1}	-100 to	o -45 V	
Blanking voltage, peak to peak when applied to grid 1 when applied to cathode		771 N 1/)		75 V 25 V	
Flux density at centre of focusing coil			3,8	to 4,4 mT	
Flux density of adjustable alignment coil or magnet			0	to 0,4 mT	15
Performance		min.	typ.	max.	
Dark current (at 25 °C)			8	15 nA	
Signal current, white light faceplate illumination 0,5 lx c.t. 2856 K	Is	240	270	nA	
Signal current, near infrared illumination 0,5 lx, c.t. 2856 K infrared transmitting filter interposed (transmission curve see Fig. 2)	Is	50	75	nA	
Decay: residual signal current 60 ms after cessation of the illumination (c.t. 2856 K) initial signal current 200 nA			17	%	
Limiting resolution, at picture centre		650	750	TV	lines 4
Limiting resolution, at picture corners		400	500	TV	lines 4
Average γ of transfer characteristic			≈ 1		
Spurious signals (spots and blemishes)					5

Notes

1. The signal electrode voltage should be adjusted to the value indicated by the tube manufacturer as printed on the envelope $(E_{si} = \dots V)$.

To minimize picture sticking effects the signal electrode voltage should be adjusted within a tolerance of \pm 2 V; the voltage drop across R_I should be kept small. In case of cathode blanking the voltage drop across the cathode resistor during read-out should be taken into account.

- 2. Grid 4 voltage must always be higher than grid 3 voltage. The recommended ratio of grid 4 voltage to grid 3 voltage both for best geometry and most uniform signal output depends upon the type of coil unit used and will be 5:3 for the recommended type (see 'Accessories').
- 3. Resolution decreases with decreasing grid 4 voltage. In general grid 3 should be operated above 250 V.
- 4. On EIA resolution test chart; faceplate illumination adjusted for a peak output current of 200 nA.

5. Conditions

The camera focused on a uniformly illuminated two-zone test pattern, the diameter of the centre zone (1) being equal to the raster height. Zone (2) being defined as the remainder of the scanned area.

Faceplate illumination adjusted to produce 200 nA signal current, beam current adjusted for correct stabilization.

Monitor set-up and contrast control adjusted for faint raster when lens of camera is capped and for non-blooming bright raster when lens of camera is uncapped.

Under above conditions the number and size of spots per zone as visible in the monitor picture will not exceed the limits stated below. Both black and white spots must be counted, unless their contrast is less than 50% of peak white signal as observed on a waveform oscilloscope. Spots having a contrast \geq 100% are fully counted, spots having a contrast \geq 50% but \leq 100% will be considered as having half their actual size.

spot size in % of raster height	The state of the s	umber of spots
> 1,2	none	none
≤ 1,2 to 0,8	none	1
\leq 0.8 to 0.4	4	5
\leq 0.4 to 0.2	5	5
≤ 0,2	*	*
total (max.)	5	7

^{*} Do not count spots of this size unless concentration causes a smudgy appearance. Tubes are rejected for: smudges, lines, streaks, mottled, grainy or uneven background having contrast > 50%.

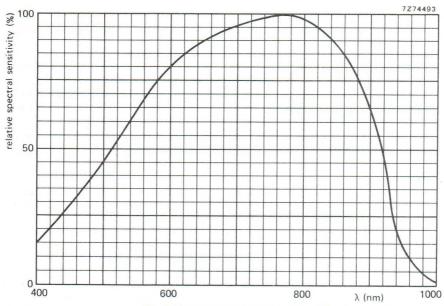


Fig. 1 Typical spectral response curve, C2.

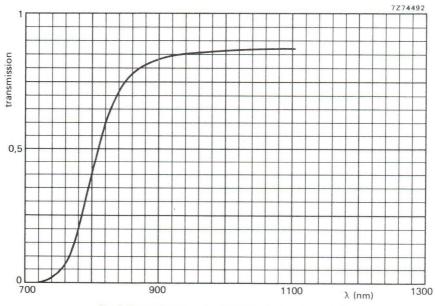


Fig. 2 Transmission curve of infrared filter (Hoya IR80).

0

0

200

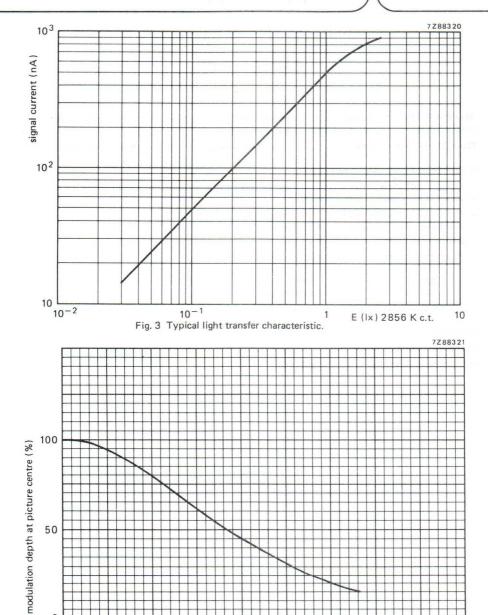


Fig. 4 Typical uncompensated square wave response curve. Highlight signal current $200\ nA$, beam current $200\ nA$.

600

number of TV lines

400

CAMERA TUBE

Newvicon® camera tube, mechanically and electron-optically identical to the XQ1440, the major difference being the radiation resistant (anti-browning) faceplate.

The XQ1444 is intended for use in cameras which are subjected to high doses of ionizing radiation.

RADIATION RESISTANT FACEPLATE

The faceplate of the XQ1444 is made of a special type of glass and does not turn brown under the influence of high doses of gamma radiation.

- Maximum dose rate per hour: 5 x 10⁵ Röntgen/hour
- Maximum cumulative dose: 5 x 10⁷ Röntgen
- Maximum decrease of transmission of faceplate:

Maximum decrease	After a cumulative dose of
3%	10 ⁵ Röntgen
10%	10 ⁶ Röntgen
15%	5 x 10 ⁷ Röntgen

- Maximum increase of dark current at 25 °C after a cumulative dose of 5 x 10⁷ Röntgen: 75%

SENSITIVITY

The typical sensitivity of the XQ1444 is approximately 10% less than for the XQ1440.

For all other information see data of XQ1440.

[®] Registered trade mark for television camera tubes.

CAMERA TUBE

NEWVICON® television camera tube with a photoconductive target composed of cadmium and zinc tellurides featuring high resolution and an extremely high sensitivity.

The XQ1601 is a ½ in diameter camera tube with very low heater power, separate mesh, electrostatic focusing and magnetic deflection. It is mechanically interchangeable with vidicons like XQ1600 and has the same pin connections.

The XQ1601 is intended for use in ultra-compact cameras for security and surveillance applications, for example, where its high sensitivity and resolution, small size and low power consumption are essential.

QUICK REFERENCE DATA

Focusing

Deflection

Diameter

Length

Spectral response, max, at cut-off at

Heater

Limiting resolution

max. approx. approx. 85 mm 750 nm

900 nm

electrostatic

magnetic

13.5 mm

2.8 V, 107 mA 450 TV lines

OPTICAL

Diagonal of quality rectangle on photoconductive

layer (aspect ratio 3:4)

7,75 mm

Orientation of image on photoconductive layer:

The direction of the horizontal scan should be essentially parallel to the plane passing through the short index pin and the longitudinal axis of the tube.

Spectral response, curve see Fig. 1

Faceplate thickness

refractive index

1,6 mm 1,611

HEATING Indirect by a.c. or d.c.; parallel or series supply

Heater voltage

Heater current, at Vf = 2,8 V

3,5 V when the supply is switched on.

Vf

2.8 V ± 5%

107 mA ± 10% When the tube is used in a series heater chain, the heater voltage must not exceed an r.m.s. value of

[®] Registered Trade Mark for television camera tubes.

CAPACITANCES

Signal electrode to all


Cas


1,5 pF


This capacitance, which is effectively the output impedance of the tube, increases when the tube is inserted into the deflection coil unit.


MECHANICAL DATA

Dimensions in mm

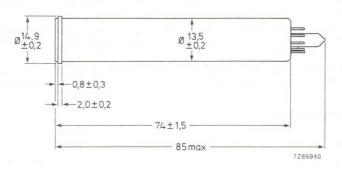

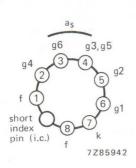

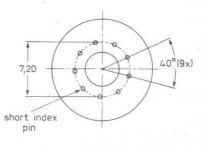

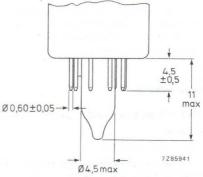

Mounting position: any

Net mass:

 $\approx 12 \text{ g}$

ACCESSORIES

Socket

special miniature 8-pin, type 56600 or equivalent

Deflection coil unit

KV29E or equivalent

DEFLECTION

magnetic

FOCUSING

electrostatic

LIMITING VALUES

(Absolute maximum rating system) for scanned area of 4,65 mm x 6,2 mm.

"Full-size scanning" i.e. scanning of a $4,65\,\mathrm{mm}\times6,2\,\mathrm{mm}$ area of the photoconductive layer should always be applied. Underscanning, i.e. scanning of an area smaller than $4,65\,\mathrm{mm}\times6,2\,\mathrm{mm}$, may cause permanent damage to the specified full-size area.

Signal electrode voltage	Vas	max.	50	V*
Grid 6 voltage	V_{g6}	max.	600	V
Grid 4 (beam focus electrode) voltage	V_{g4}	max.	350	V
Grid 3 and 5 voltage	$V_{g3,g5}$	max.	450	V
Grid 2 voltage	V_{g2}	max.	400	V
Grid 1 voltage, negative positive	$_{V_{g1}}^{-V_{g1}}$	max.	300	V V
Cathode-to-heater voltage peak positive peak negative	V _{kfp} -V _{kfp}	max. max.	125 10	
Output current, peak	lasp	max.	500	nA**
Faceplate illumination	E	max.	10 000	X ▲
Faceplate temperature, storage and operation	T	max.	70	oC
Cathode heating time before drawing cathode current	th	min.	1	min

- * Newvicon tubes do not permit automatic sensitivity control by means of regulation of the signal electrode voltage. Adequate control is therefore to be achieved by other means (iris control and neutral density filters). If the tube is applied in cameras originally designed for vidicon tubes, the automatic sensitivity control circuitry should be made inoperative and the signal electrode voltage set to the value indicated in the test sheet. See General Operational Notes.
- ** Video amplifiers should be capable of handling signal electrode currents of this magnitude without overloading the amplifier or distorting the picture.
- ▲ White light, uniformly diffused over entire tube face.

 Care must be taken not to focus the solar image on the target through a lens opening wider than f: 11 to avoid instantaneous breakdown.

OPERATING CONDITIONS AND PERFORMANCE

For a scanned area of 4,65 mm x 6,2 mm, a faceplate temperature of 25 to 35 $^{\rm o}{\rm C}$ and standard TV scanning rate.

Conditions						notes	5
Signal electrode voltage	Vas		10	to 35	V	1	
Grid 6 (decelerator) voltage	V_{g6}			500	٧	2	
Grid 4 (beam focus electrode) voltage	V_{g4}		31	to 55	V	3	
Grid 3 and 5 voltage	V _{g3+5}			250	V	2	
Grid 2 voltage	V_{g2}			300	V		
Grid 1 voltage for picture cut off (no blanking applied)	V_{g1}		-100 to	-40	V		
Blanking voltage, peak to peak when applied to grid 1 when applied to cathode	3.			75 20			
Flux density of adjustable alignment coil or magnet			0 1	0 0,4	mT		
Performance	r	min.	typ.	max			
Dark current (at 25 °C)			3	4,5	nA		
Signal current, white light faceplate illumination 1 lx c.t. 2856 K	I _s	90	110		nA		
Decay: residual signal current 60 ms							

10

TV lines 4

5

480

≈ 1

after cessation of the illumination initial signal current 100 nA

Limiting resolution at picture centre

Spurious signals (spots and blemishes)

Average γ of transfer characteristic

Notes

- 1. The signal electrode voltage should be adjusted to the value indicated by the tube manufacturer as printed on the envelope (V_{esj} = V). To minimize picture sticking effects the signal electrode should be adjusted with an inaccuracy of ± 2 V; the voltage drop across R_I should be kept small. In the case of cathode blanking the voltage drop across the cathode resistor during read-out should be taken into account.
- 2. Grid 6 voltage must always be higher than grids 3 + 5 voltage. The recommended ratio of grid 6 voltage to grids 3 + 5 voltage for best geometry and most uniform signal output depends upon the type of coil used and will be 2 : 1 for the recommended type (see "Accessories").
- 3. Adjusted for correct electrical focus.
- 4. On EIA resolution test chart: faceplate illumination adjusted for a peak output current of 100 nA. The resolution is highly dependent on the coil used; the indicated figures are only valid for the recommended coil.
- 5. Conditions

The camera focused on a uniformly illuminated two-zone test pattern, the diameter of the centre zone (1) being equal to the raster height. Zone (2) being defined as the remainder of the scanned area.

Faceplate illumination adjusted to produce 100 nA signal current, beam current adjusted for correct stabilization.

Monitor set-up and contrast control adjusted for faint raster when lens of camera is capped and for non-blooming bright raster when lens of camera is uncapped.

Under above conditions the number and size of spots per zone visible in the monitor picture will not exceed the limits stated below. Both black and white spots must be counted, unless their contrast is less than 50% of peak white signal as observed on a waveform oscilloscope. Spots having a contrast \geq 100% are fully counted, spots having a contrast \geq 50% but < 100% will be considered as having half their actual size.

Spot size in % of raster height	Maximum nur	mber of spots
76 Of raster fleight	ZOTIE 1	ZOTIE Z
> 1,2	none	none
\leq 1,2 to 0,8	none	1
\leq 0,8 to 0,4	4	5
\leq 0,4 to 0,2	5	5
≤ 0,2	*	*
total (max.)	5	7

* Do not count spots of this size unless concentration causes a smudgy appearance. Tubes are rejected for: smudges, lines, streaks, mottled, grainy or uneven background having contrast > 50%.

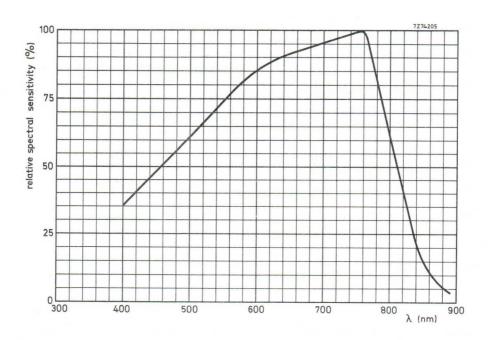


Fig. 1 Typical spectral response curve.

CAMERA TUBE

Newvicon® camera tube, mechanically and electron-optically identical to the XQ1601, the major difference being the radiation resistant (anti-browning) faceplate.

The XQ1602 is intended for use in cameras which are subjected to high doses of ionizing radiation.

RADIATION RESISTANT FACEPLATE

The faceplate of the XQ1602 is made of a special type of glass and does not turn brown under the influence of high doses of gamma radiation.

- Maximum dose rate per hour: 5 x 10⁵ Röntgen/hour
- Maximum cumulative dose: 5 x 10⁷ Röntgen
- Maximum decrease of transmission of faceplate:

Maximum decrease	After a cumulative dose of
3%	10 ⁵ Röntgen
10%	10 ⁶ Röntgen
15%	5 x 10 ⁷ Röntgen

- Maximum increase of dark current at 25 $^{\rm o}$ C after a cumulative dose of 5 x 10 $^{\rm 7}$ Röntgen: 75%

SENSITIVITY

The typical sensitivity of the XQ1602 is approximately 10% less than for the XQ1601.

For all other information see data of XQ1601.

[®] Registered trade mark for television camera tubes.

DEFLECTION UNITS

DEFLECTION UNIT FOR 1-inch VIDICON

QUICK REFERENCE DATA

	inductance	resistance	
Line deflection coils	1,6 mH	4,4 Ω	
Frame deflection coils	70 mH	120 Ω	
Focus coil	_	100 Ω	

APPLICATION

The KV9G is for use in black and white cameras using front-loading 1-inch camera tubes.

DESCRIPTION

The deflection unit consists of deflection, focus coils and alignment ring magnets for 25 mm (1-inch) diameter vidicon, Newvicon® and similar television camera tubes (e.g. XQ1031, XQ1240, XQ1241 and XQ1440).

CATALOGUE NUMBER

The catalogue number is 9390 288 80000.

[®] Registered trade mark for television camera tubes.

M3×15 (2x)

500 g approx. Mass

Magnet rotation torque (with one ring fixed) 0,007 to 0,20 Nm Alignment ring magnets

max. 0,4 mT Flux density

min. 0,05 mT

Operating temperature -10 to +60 oC

Leads

Frame deflection coil Line deflection coil


red-blue

green-yellow brown-white

Focus coil

The ends of the leads are stripped for 5 mm Length from rear of unit 190 ± 10 mm

ELECTRICAL DATA

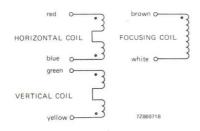

coils	inductance mH	resistance Ω
line deflection	1,6 ± 10%	4,4 ± 10%
frame deflection	70 ± 10%	120 ± 10%
focus*		100 ± 10%

Required currents for normal operation

Line deflection, peak-peak	150 mA ± 5%
Frame deflection, peak-peak	33 mA \pm 5%
Focus current, at 4 mT	90 mA ± 10%

Insulation resistance

Between coils, and between coils and earth, at 100 V d.c.

> 50 M Ω

Geometric distortion

Barrel, keystone and pin cushion distortion are within 2% of picture height

Skew: $90^{\circ} \pm 2^{\circ}$ (4% of picture height).

153

^{*} If a positive voltage is applied to the brown lead, the north-seeking pole of a compass should be attracted to the image end of the unit.

DEFLECTION UNIT FOR %-inch CAMERA TUBES

QUICK REFERENCE DATA

	inductance	resistance
Line deflection coils	0,88 mH	2,9 5
Frame deflection coils	32 mH	146 5
Focus coil		55 \$

APPLICATION

The KV12S is for use in black and white cameras using front loading $\frac{2}{3}$ -inch camera tubes.

DESCRIPTION


The deflection unit consists of deflection and focusing coils and alignment ring magnets for 17,7 mm (²/₃-inch) vidicon, Newvicon® and similar camera tubes (e.g. XQ1270, XQ1271, XQ1274).

CATALOGUE NUMBER

The catalogue number is 9390 258 20000.

[®] Registered trade mark for television camera tubes.

Dimensions in mm

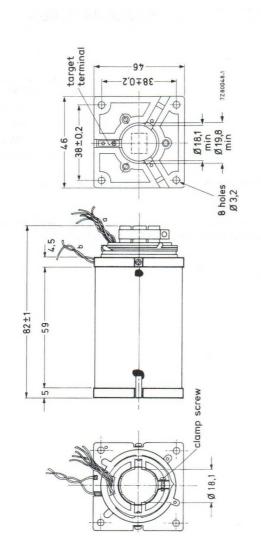

Mass
Alignment ring magnets
Magnet rotation torque (with one ring fixed) 0,005 to 0,15 Nm Flux density

green-yellow brown-white

Line deflection coil Frame deflection coil

Leads

Focusing coil Shield

black

red-blue

0,4 mT

-10 to +60 °C


Operating temperature

Length from rear of unit 190 \pm 10 mm The ends of the leads are stripped for 5 mm

max.

September 1983

ELECTRICAL DATA

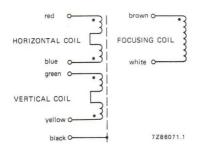

coils	inductance mH	resistance Ω
ine deflection coils	0,88 ± 10%	2,9 ± 10%
frame deflection coils	32 ± 10%	146 ± 10%
focusing coil*		55 ± 10%

Required currents for normal operation

Line deflection, peak-peak	150 mA ± 5%
Frame deflection, peak-peak	20 mA ± 5%
Focusing, at 5 mT	120 mA ± 10%

Insulation resistance

Between coils, and between coils and earth shield, at 100 V d.c.

>50 M Ω

Geometric distortion

Barrel, keystone and pin cushion distortion are within 2% at picture height.

Skew: 90° ± 2° (4% of picture height).

^{*} If a positive voltage is applied to the brown lead, the north-seeking pole of a compass should be attracted to the image end of the unit.

DEFLECTION UNIT FOR 3-inch CAMERA TUBES

with electrostatic focusing

QUICK REFERENCE DATA

	inductance	resistance
Line deflection coils	0,9 mH	4,4 Ω
Frame deflection coils	26 mH	145 Ω

APPLICATION

The KV19G is for use in black and white cameras using front loading ²/₃-inch camera tubes.

DESCRIPTION

The deflection unit consists of deflection coils and alignment ring magnets for 17,7 mm ($^2/_3$ -inch) vidicon, Newvicon[®] and similar camera tubes (e.g. XQ1272, XQ1275).


CATALOGUE NUMBER

The catalogue number is 9390 271 20000.

[®] Registered trade mark for television camera tubes.

Dimensions in mm

ELECTRICAL DATA

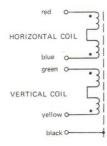

7Z86071.1B

coils	inductance mH	resistance Ω
line deflection coils	0,9 ± 10%	4,4 ± 10%
frame deflection coils	26 ± 10%	145 ± 10%

Required currents for normal operation

Line deflection, peak-peak

Frame deflection, peak-peak

100 mA ± 5%

16 mA ± 5%

Insulation resistance

Between coils, and between coils and earth shield

>50 M Ω

Geometric distortion

Barrel, keystone and pin cushion distortion within 2% of picture height.

Skew: 900 ± 20 (4% of picture height).



DEFLECTION UNIT FOR 2/3-inch CAMERA TUBES

with electrostatic focusing

QUICK REFERENCE DATA

	inductance	resistance
Line deflection coils	0,9 mH	4,4 Ω
Frame deflection coils	26 mH	145 Ω

APPLICATION

The KV19L is for use in black and white cameras using front-loading ²/₃-inch camera tubes.


DESCRIPTION

The deflection unit consists of deflection coils and alignment ring magnets for 17,7 mm (2 /₃-inch) diameter Vidicon, Newvicon [®] and similar television camera tubes (e.g. XQ1272, XQ1275).


CATALOGUE NUMBER

The catalogue number is 9390 299 00000.

[®] Registered trade mark for television camera tubes.

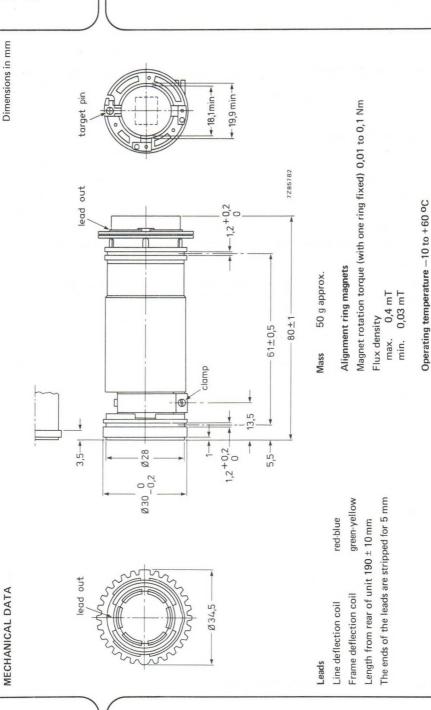

ELECTRICAL DATA

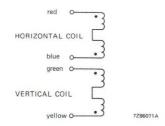

coils	inductance mH	resistance Ω
line deflection	0,9 ± 10%	4,4 ± 10%
frame deflection	26 ± 10%	145 ± 10%

Required currents for normal operation

Line deflection, peak-peak

100 mA ± 5%

Frame deflection, peak-peak

16 mA ± 5%

Insulation resistance

Between coils, and between coils and earth shield, at 100 V d.c.

> 50 M Ω

Geometric distortion

Barrel, keystone and pin cushion distortion are within 2% of picture height.

Skew: 90° ± 2° (4% of picture height).

is is

DEFLECTION UNIT FOR 2/3-inch CAMERA TUBES

QUICK REFERENCE DATA

	inductance	resistance
Line deflection coils	0,86 mH	3,2 Ω
Frame deflection coils	28 mH	146 Ω
Focus coil	_	55 Ω

APPLICATION

The KV22B is for use in black and white cameras using front-loading ²/₃-inch camera tubes.


DESCRIPTION

The deflection unit consists of deflection, focus coils and alignment ring magnets for 17,7 mm (2 /₃-inch) diameter vidicon, Newvicon $^{\textcircled{8}}$ and similar television camera tubes (e.g. XQ1270, XQ1271 and XQ1274).


CATALOGUE NUMBER

The catalogue number is 9390 299 10000.

[®] Registered trade mark for television camera tubes.

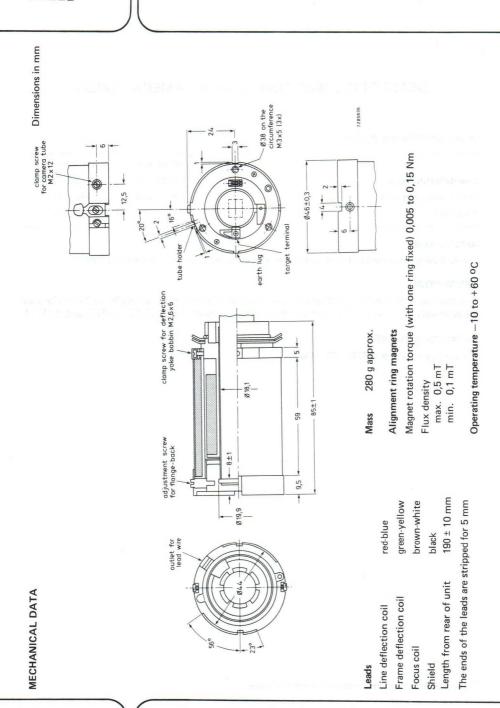

ELECTRICAL DATA

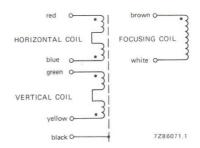

coils	inductance mH	resistance Ω
line deflection	0,86 ± 7%	3,2 ± 10%
frame deflection	28 ± 10%	146 ± 10%
focus*		55 ± 10%

Required currents for normal operation

Line deflection, peak-peak	150	mA ± 5%
Frame deflection, peak-peak	20	mA ± 5%
Focus, at 5 mT	120	mA ± 10%

Insulation resistance

Between coils, and between coils and shield, at 100 V d.c.

> 50 M Ω

Geometric distortion

Barrel, keystone and pin cushion distortion are within 2% of picture height.

Skew: 90 degrees ± 2 degrees (4% of picture height).

^{*} If a positive voltage is applied to the brown lead, the north-seeking pole of a compass should be attracted to the image end of the unit.

Section 1

DEFLECTION UNIT FOR 1/2-inch CAMERA TUBES

with electrostatic focusing

QUICK REFERENCE DATA

	inductance	resistance
Line deflection coils	1,4 mH	11,3 Ω
Frame deflection coils	5,7 mH	60,7 Ω

APPLICATION

The KV29E is for use in black and white cameras using front-loading ½-inch camera tubes.


DESCRIPTION

The deflection unit consists of deflection coils and alignment ring magnets for 13,5 mm (½-inch) diameter Vidicon, Newvicon® and similar television camera tubes (e.g. XQ1600, XQ1601).


CATALOGUE NUMBER

The catalogue number is 9390 300 90000.

[®] Registered trade mark for television camera tubes.

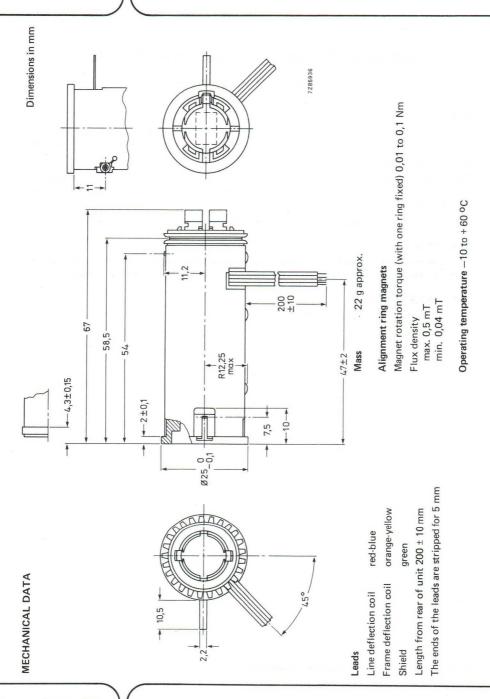

ELECTRICAL DATA

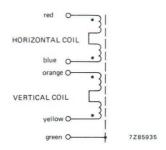

coils	inductance mH	resistance Ω
line deflection	1,4 ± 10%	11,3 ± 10%
frame deflection	5,7 ± 10%	60,7 ± 10%

Required currents for normal operation

Line deflection, peak-peak

70 mA ± 5%

Frame deflection, peak-peak

26 mA ± 5%

Insulation resistance

Between coils, and between coils and earth shield, at 100 V d.c.

> 50 M Ω

Geometric distortion

Barrel, keystone and pin cushion distortion are within 1,5% of picture height.

Skew: 900 ± 10 (2% of picture height).

.

je ka na

50

Williams Williams of Control

190

150

INDEX OF TYPE NUMBERS

type	kind*	page	type	kind*	page
KV9G	D	151	XQ1277	N	103
KV12S	D	155	XQ1278	N	109
KV19S	D	159	XQ1280	V	37
KV19L	D	163	XQ1285	V	49
KV22B	D	167	XQ1380	N	115
KV29E	D	171	XQ1381	N	116
XQ1031	V	7	XQ1440	N	117
XQ1032	V	7	XQ1442	N	125
XQ1240	V	13	XQ1443	N	133
XQ1241	V	13	XQ1444	N	140
XQ1270	V	19	XQ1590	V	61
XQ1271	V	31	XQ1600	V	67
XQ1274	N	79	XQ1601	N	141
XQ1275	N	87	XQ1602	N	147
XQ1276	N	95			

^{*} V = vidicon tube

For Plumbicon television camera tubes see relevant Data Handbook.

N = Newvicon tube

D = deflection unit.

名为正规性学生 A Lit Title X FOLK

- a sand

RATING SYSTEM

(in accordance with IEC Publication 134)

ABSOLUTE MAXIMUM BATING SYSTEM

Absolute maximum ratings are limiting values of operating and environmental conditions applicable to any electronic device of a specified type as defined by its published data, which should not be exceeded under the worst probable conditions.

These values are chosen by the device manufacturer to provide acceptable serviceability of the device, taking no responsibility for equipment variations, environmental variations, and the effects of changes in operating conditions due to variations in the characteristics of the device under consideration and of all other electronic devices in the equipment.

The equipment manufacturer should design so that, initially and throughout life, no absolute maximum value for the intended service is exceeded with any device under the worst probable operating conditions with respect to supply variation, equipment component variation, equipment control adjustment, load variations, signal variation, environmental conditions, and variations in characteristics of the device under consideration and of all other electronic devices in the equipment.

Argentina: PHILIPS ARGENTINA S.A., Div. Elcoma, Vedia 3892, 1430 BUENOS AIRES, Tel. 541-7141/7242/7343/7444/7545. Australia: PHILIPS INDUSTRIES HOLDINGS LTD., Elcoma Division, 67 Mars Road, LANE COVE, 2066, N.S.W., Tel. 427 08 88. Austria: ÖSTERREICHISCHE PHILIPS BAUELEMENTE INDUSTRIE G.m.b.H., Triester Str. 64, A-1101 WIEN, Tel. 629111.

Belgium: N.V. PHILIPS & MBLE ASSOCIATED, 9 rue du Pavillon, B-1030 BRUXELLES, Tel. (02) 242 74 00.

Brazil: IBRAPE, Caixa Postal 7383, Av. Brigadeiro Faria Lima, 1735 SAO PAULO, SP, Tel. (011) 211-2600.

Canada: PHILIPS ELECTRONICS LTD., Electron Devices Div., 601 Milner Ave., SCARBOROUGH, Ontario, M1B 1M8, Tel. 292-5161.

Chile: PHILIPS CHILENA S.A., Av. Santa Maria 0760, SANTIAGO, Tel. 39-4001.

Colombia: IND. PHILIPS DE COLOMBIA S.A., c/o IPRELENSO LTD., Calle 17, No. 9-21, Of. 202, BOGOTA, D.E., Tel. 57-2347493.

Denmark: MINIWATT A/S, Strandlodsvej 2, P.O. Box 1919, DK 2300 COPENHAGEN S, Tel. (01) 541133.

Finland: OY PHILIPS AB, Elcoma Division, Kaivokatu 8, SF-00100 HELSINKI 10, Tel. 17271

France: R.T.C. LA RADIOTECHNIQUE-COMPELEC, 130 Avenue Ledru Rollin, F-75540 PARIS 11, Tel. 338 80-00.

Germany (Fed. Republic): VALVO, UB Bauelemente der Philips G.m.b.H., Valvo Haus, Burchardstrasse 19, D-2 HAMBURG 1, Tel. (040) 3296-0. Greece: PHILIPS S.A. HELLENIQUE, Elcoma Division, 52, Av. Syngrou, ATHENS, Tel. 9215111

Hong Kong: PHILIPS HONG KONG LTD., Elcoma Div., 15/F Philips Ind. Bldg., 24-28 Kung Yip St., KWAI CHUNG, Tel. (0)-245121.

India: PEICO ELECTRONICS & ELECTRICALS LTD., Elcoma Dept., Band Box Building,

254-D Dr. Annie Besant Rd., BOMBAY - 400 025, Tel. 4220387/4220311

Indonesia: P.T. PHILIPS-RALIN ELECTRONICS, Elcoma Div., Panim Bank Building, 2nd Fl., Jl. Jend, Sudirman, P.O. Box 223, JAKARTA, Tel. 716131. Ireland: PHILIPS ELECTRICAL (IRELAND) LTD., Newstead, Clonskeagh, DUBLIN 14, Tel. 693355.

Italy: PHILIPS S.p.A., Sezione Elcoma, Piazza IV Novembre 3, I-20124 MILANO, Tel. 2-6752.1.

Japan: NIHON PHILIPS CORP., Shuwa Shinagawa Bldg., 26-33 Takanawa 3-chome, Minato-ku, TOKYO (108), Tel. 448-5611.

(IC Products) SIGNETICS JAPAN LTD., 8-7 Sanbancho Chiyoda-ku, TOKYO 102, Tel. (03) 230-1521.

Korea (Republic of): PHILIPS ELECTRONICS (KOREA) LTD., Elcoma Div., Philips House, 260-199 Itaewon-dong, Yongsan-ku, SEOUL, Tel. 794-4202. Malaysia: PHILIPS MALAYSIA SDN. BERHAD, No. 4 Persiaran Barat, Petaling Jaya, P.O.B. 2163, KUALA LUMPUR, Selangor, Tel. 77 4411.

Mexico: ELECTRONICA, S.A de C.V., Carr. México-Toluca km. 62.5, TOLUCA, Edo. de México 50140, Tel. Toluca 91 (721) 613-00.

Netherlands: PHILIPS NEDERLAND, Marktgroep Elonco, Postbus 90050, 5600 PB EINDHOVEN, Tel. (040) 793333.

New Zealand: PHILIPS NEW ZEALAND LTD., Elcoma Division, 110 Mt. Eden Road, C.P.O. Box 1041, AUCKLAND, Tel. 605-914.

Norway: NORSK A/S PHILIPS, Electronica Dept., Sandstuveien 70, OSLO 6, Tel. 680200.

Peru: CADESA, Av. Alfonso Ugarte 1268, LIMA 5, Tel. 326070.

Philippines: PHILIPS INDUSTRIAL DEV. INC., 2246 Pasong Tamo, P.O. Box 911, Makati Comm. Centre, MAKATI-RIZAL 3116, Tel. 86-89-51 to 59.

Portugal: PHILIPS PORTUGUESA S.A.R.L., Av. Eng. Duarte Pacheco 6, 1009 LISBOA Codex, Tel. 683121.

Singapore: PHILIPS PROJECT DEV. (Singapore) PTE LTD., Elcoma Div., Lorong 1, Toa Payoh, SINGAPORE 1231, Tel. 2538811.

South Africa: EDAC (PTY.) LTD., 3rd Floor Rainer House, Upper Railway Rd. & Ove St., New Doornfontein, JOHANNESBURG 2001, Tel. 614-2362/9. Spain: MINIWATT S.A., Balmes 22, BARCELONA 7, Tel. 301 63 12.

Sweden: PHILIPS KOMPONENTER A.B., Lidingövägen 50, S-11584 STOCKHOLM 27, Tel. 08/7821000.

Switzerland: PHILIPS A.G., Elcoma Dept., Allmendstrasse 140-142, CH-8027 ZÜRICH, Tel. 01-4882211.

Taiwan: PHILIPS TAIWAN LTD., 3rd Fl., San Min Building, 57-1, Chung Shan N. Rd, Section 2, P.O. Box 22978, TAIPEI, Tel. (02)-5631717.

Thailand: PHILIPS ELECTRICAL CO. OF THAILAND LTD., 283 Silom Road, P.O. Box 961, BANGKOK, Tel. 233-6330-9.

Turkey: TÜRK PHILIPS TICARET A.S., Elcoma Department, Inönü Cad. No. 78-80. ISTANBUL, Tel. 4359 10.

United Kingdom: MULLARD LTD., Mullard House, Torrington Place, LONDON WC1E 7HD, Tel. 01-5806633

United States: (Active Devices & Materials) AMPEREX SALES CORP., Providence Pike, SLATERSVILLE, R.I. 02876, Tel. (401) 762-9000. (Passive Devices) MEPGO-VieLECTRA INC., Columbia Rd., MORRISTOWN, N.J. 07960, Tel. (201) 539-2000. (Passive Devices & Electromechanical Devices) CENTRALAB INC., 5855 N. Glen Park Rd., MILWAUKEE, WI 53201, Tel. (414)228-7380.

(IC Products) SIGNETICS CORPORATION, 811 East Arques Avenue, SUNNYVALE, California 94086, Tel. (408) 739-7700.

Uruguay: LUZILECTRON S.A., Avda Uruguay 1287, P.O. Box 907, MONTEVIDEO, Tel. 91 4321.

Venezuela: IND. VENEZOLANAS PHILIPS S.A., Elcoma Dept., A. Ppal de los Ruices, Edif. Centro Colgate, CARACAS, Tel. 360511

For all other countries apply to: Philips Electronic Components and Materials Division, International Business Relations, Building BAE, P.O. Box 218, 5600 MD EINDHOVEN, The Netherlands, Tel. +3140723304, Telex 35000 phtcnl

AS45

©1985 Philips Export B.V

This information is furnished for guidance, and with no guarantee as to its accuracy or completeness; its publication conveys no licence under any patent or other right, nor does the publisher assume liability for any consequence of its use; specifications and availability of goods mentioned in it are subject to change without notice; it is not to be reproduced in any way, in whole or in part, without the written consent of the publisher

Printed in The Netherlands

9398 134 40011