# Half-Wave Vacuum Rectifier

### 9-PIN MINIATURE TYPE

| Designed to minimize X-Radiation                           |              |                    |
|--|--------------|--------------------|
| $-e_{bm} = 22,000 \text{ max. V}$ $i_{bm} = 80 \text{ mA}$ |              |                    |
| ELECTRICAL CHARACTERISTICS - Bogey Valu                    | es           |                    |
| Heater Voltage, ac or dc Eh                                | 2.30         | V                  |
| Heater Current at $E_h = 2.3 \text{ V} \dots I_h$          | 0.300        | Α                  |
| Direct Interelectrode Capacitance: <sup>a</sup>            |              |                    |
| P to $(K + IS + H)$ $c_{p-all}$                            | 1.0          | pF                 |
| Instantaneous Tube Voltage                                 |              |                    |
| Drop for Instantaneous                                     | 0.0          | <b>T</b> 7         |
| Plate Current $(i_b) = 7 \text{ mA} \dots e_b$             | 80           | V                  |
| MECHANICAL CHARACTERISTICS                                 |              |                    |
| Maximum Overall Length                                     | 344in. (72.2 | 4 mm)              |
| Maximum Seated Length                                      |              |                    |
| Maximum Bulb Diameter                                      |              |                    |
| Envelope   |              |                    |
| Top Cap Skitted minature (JEDE                             |              | rCI-33             |
| Base Small-Button noval 9                                  |              |                    |
| Terminal Diagram   |              |                    |
| Type of Cathode  |              |                    |
| Operating Position   | • • • • • •  | . Any              |
| MAXIMUM RATINGS <sup>b</sup> — High Voltage Rectifier      |              |                    |
| For operation as a pulsed rectifier tube in a 525-line     | , 30-frame s | ystem <sup>C</sup> |
| Inverse Plate Voltage <sup>d</sup>                         |              |                    |
| Total DC and Peak (absolute max.)ebm                       | 22,000       | V                  |
| Average (absolute max.) $E_{b(av)}$                        | 20,000       | V                  |
| Plate Current:   |              |                    |
| Peak (design max.) i <sub>bm</sub>                         | 80           | mA                 |
| Average (design max.) Ib(av)                               | 1.0          | mA                 |
| Heater Voltage (absolute max.) Eh                          | 2.6          | V                  |
| Heater Voltage (absolute min.) E <sub>h</sub>              | 2.0          | V                  |

## 2BJ2A

- Measured without external shield in accordance with the current issue of EIA Standard RS-191B.
- b As defined in the current issue of EIA Standard RS-239A.
- As described in "Standards of Good Engineering Practice Concerning Television Broadcast Stations", Federal Communications Commission.
- This rating is applicable when the duration of the voltage pulse does not exceed 15% of one horizontal scanning cycle. In a 525-line, 30-frame system, 15% of one horizontal scanning cycle is  $10\mu$ s.

#### OPERATING CONSIDERATIONS

Socket Connections. The base pins of the 2BJ2A fit the standard noval socket. Socket terminals 1, 3, 4, 6, and 7 may be connected to terminal 9 or to a corona shield which connects to terminal 9. Terminals 3 and 7 may be used as tie points at or near cathode potential. Otherwise, do not use.

Measurement of Heater Voltage. It is recommended that a thermocouple rms voltmeter be used to measure heater voltage. The meter and its leads must be insulated to withstand 22,000 V. To minimize loading of the rectifier circuit during this measurement, stray capacitances to ground should be kept as low as possible.

#### X-RADIATION CHARACTERISTIC

X-Radiation, Maximum

X-Radiation is measured in accordance with JEDEC Publication No. 67 A, "Recommended Practice for Measurement of X-Radiation from Receiving Tubes", and controlled in accordance with JEDEC Publication No. 73 A, "Recommended Practice for Quality Control of X-Radiation Emitted from High Voltage Rectifier and Shunt Regulator Receiving Tubes".

Operation of the 2BJ2A outside of the absolute values indicated above may result in either temporary or permanent



changes in the X-radiation characteristic of the tube. Equipment design must be such that these absolute values are not exceeded.

#### WARNING X—Radiation

The high voltages associated with the 2BJ2A result in production of X-Radiation which may constitute a health hazard on prolonged exposure at close range unless the tube is adequately shielded. Equipment design must provide for this shielding.

Precautions must be exercised during the servicing of equipment employing the 2BJ2A to assure that the high voltage is adjusted to the recommended value and that any shielding components are replaced to their intended positions before the equipment is operated.

#### SHOCK HAZARD

The high voltages at which the 2BJ2A is operated can be extremely dangerous to the user or serviceman. Extreme care should be taken in the use of, and for the servicing and adjustment of, any high voltage circuit.

Precautions must be exercised during the replacement or servicing of the 2BJ2A in equipment to assure that the high voltage output terminal is properly grounded while inserting or removing the tube from its socket or while connecting or disconnecting the top cap connector.

THE EQUIPMENT MANUFACTURER SHOULD PROVIDE A WARNING LABEL IN AN APPROPRIATE POSITION ON THE EQUIPMENT TO ADVISE THE SERVICEMAN OF ALL PRECAUTIONS HEREIN.

## 2BJ2A

#### TERMINAL DIAGRAM - JEDEC 9RT - Bottom View

Pin 1 — Heater, Cathode, Internal Shield Pin 9 — Same as Pin 1

Cap — Plate

Pin 2 - Heater

Pin 3 - Do Not Use


Pin 4 — Same as Pin 1

Pin 5 - Heater

Pin 6 - Same as Pin 1

Pin 7 - Do Not Use

Pin 8 - Heater

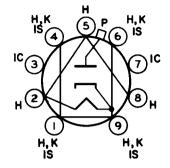

DIMENSIONAL
OUTLINE

CAP JEDEC
No. CI-2
CI-33 OR
CI-45

ENVELOPE
T6 1/2

BASE JEDEC
No. E9-1
92CS-13136VI

| DIMENSION | INCHES |       |       | MILLIMETERS |       |       |
|-----------|--------|-------|-------|-------------|-------|-------|
| DIMENSION | Min.   | Nom.  | Max.  | Min.        | Nom.  | Max.  |
| A*        | 0.800  | 1     | 0.845 | 20.32       | ı     | 21.46 |
| С         | -      | _     | 2.844 | _           | _     | 72.24 |
| D         | 2.312  | 2.347 | 2.562 | 58.72       | 61.90 | 65.07 |
| M*        |        | -     | 0.875 | _           | _     | 22.22 |

MILLIMETER DIMENSION DERIVED FROM INCH DIMENSION

<sup>\*</sup>As defined in the current issue of EIA standards RS-209-A1.